




















# KRAFT 120x80

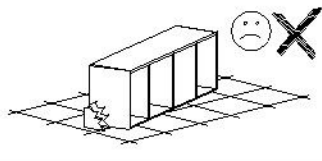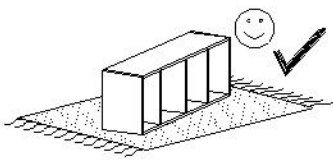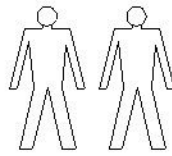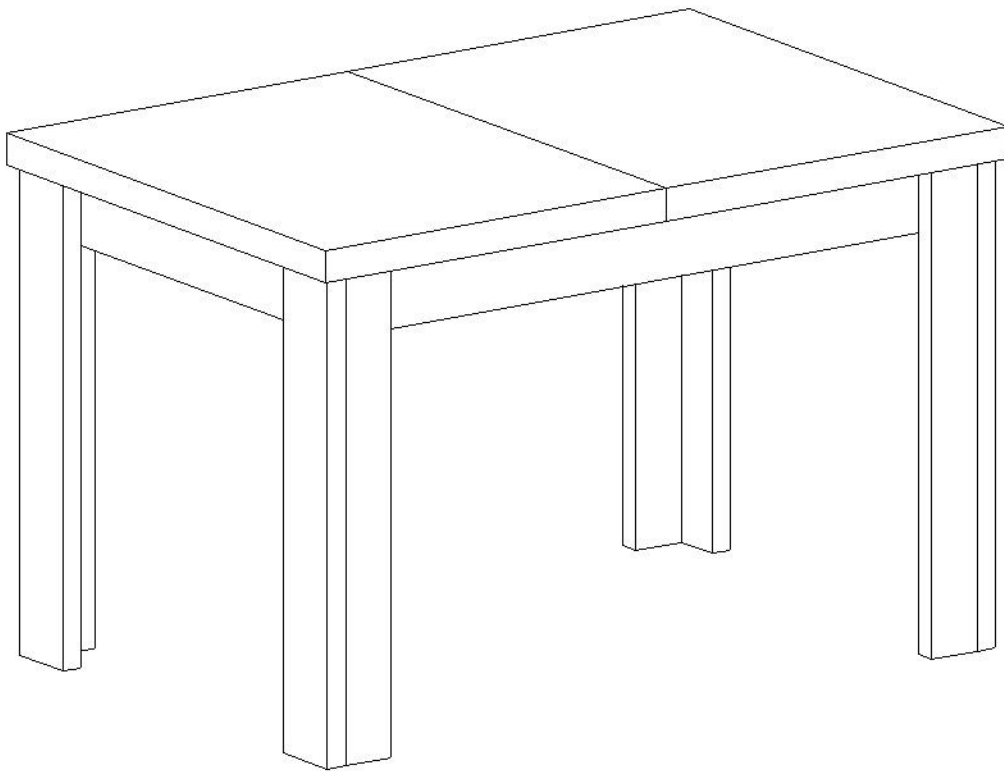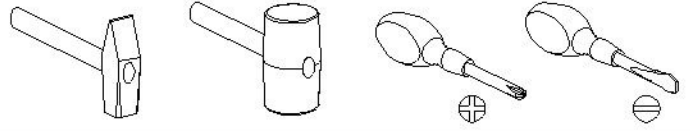


Narzędzia potrzebne do montażu

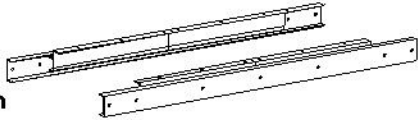


<b>B5</b>  x8	<b>B6</b>  x8	<b>H11</b>  650mm x1		
<b>P4</b>  x8	<b>M15</b>  x2	<b>G14</b>  3.5x30 x26	<b>G34</b>  3.5x16 x4	<b>B1</b>  ø8x35 x4
<b>A1</b>  ø7x50 x20	<b>A2</b>  ø7x70 x8	<b>K5</b>  x8	<b>K1</b>  ø15x12 x8	<b>W2</b>  4mm x1


I

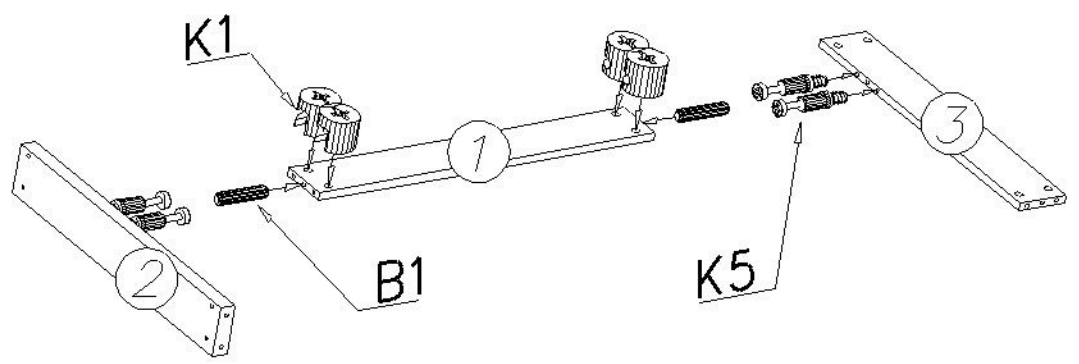


III

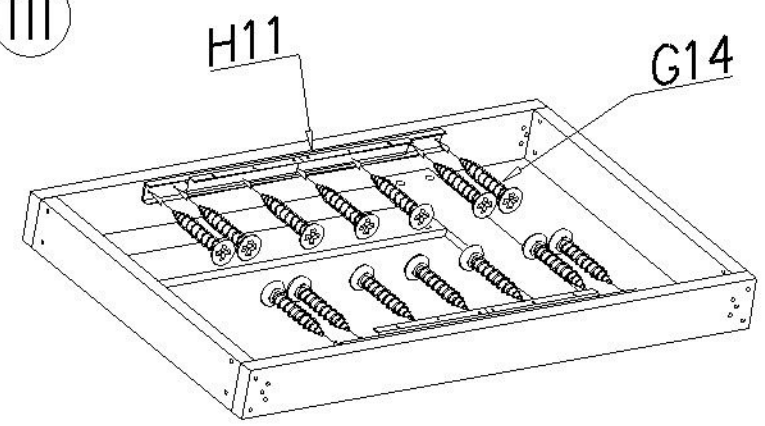

II

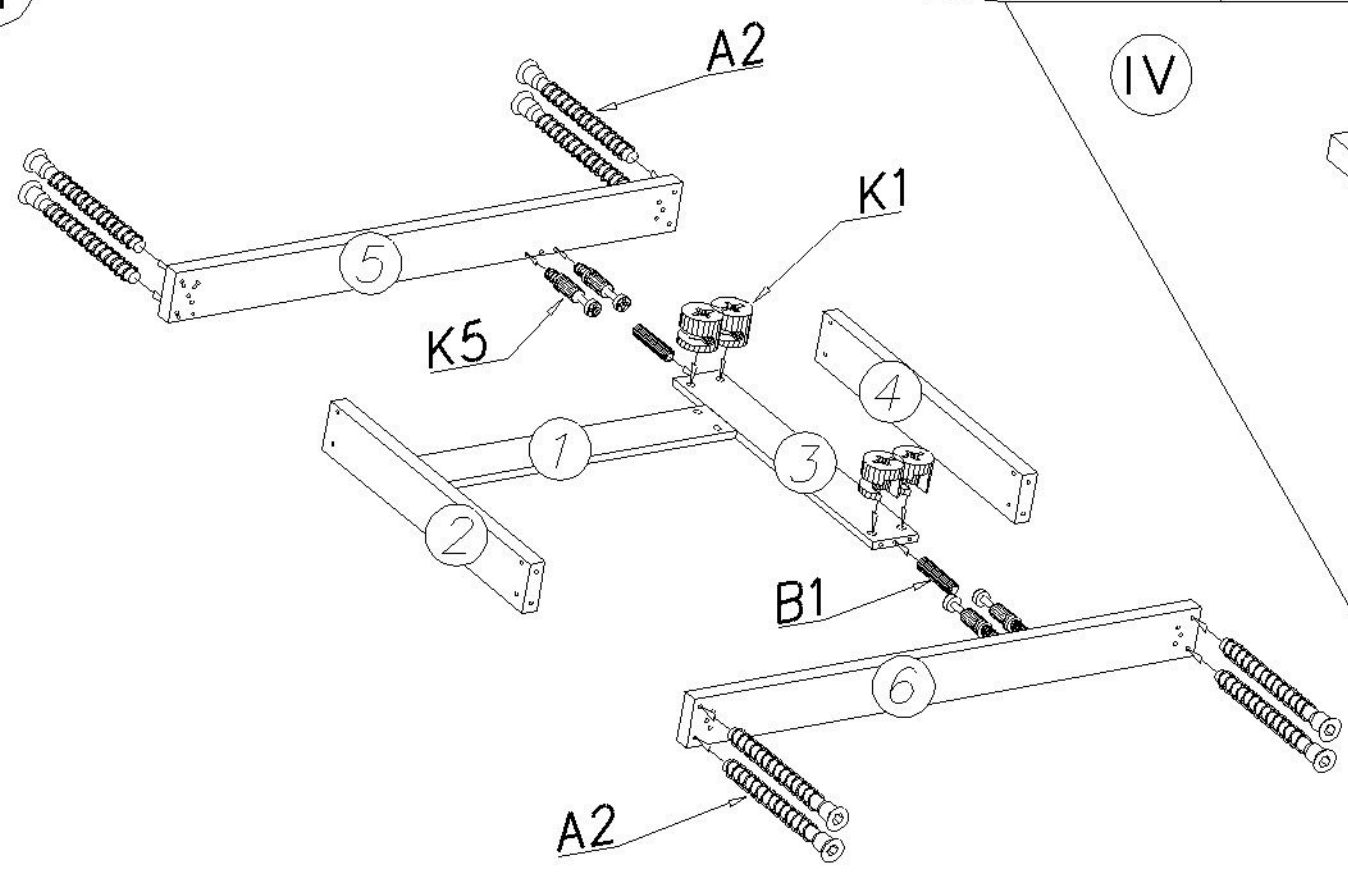


IV

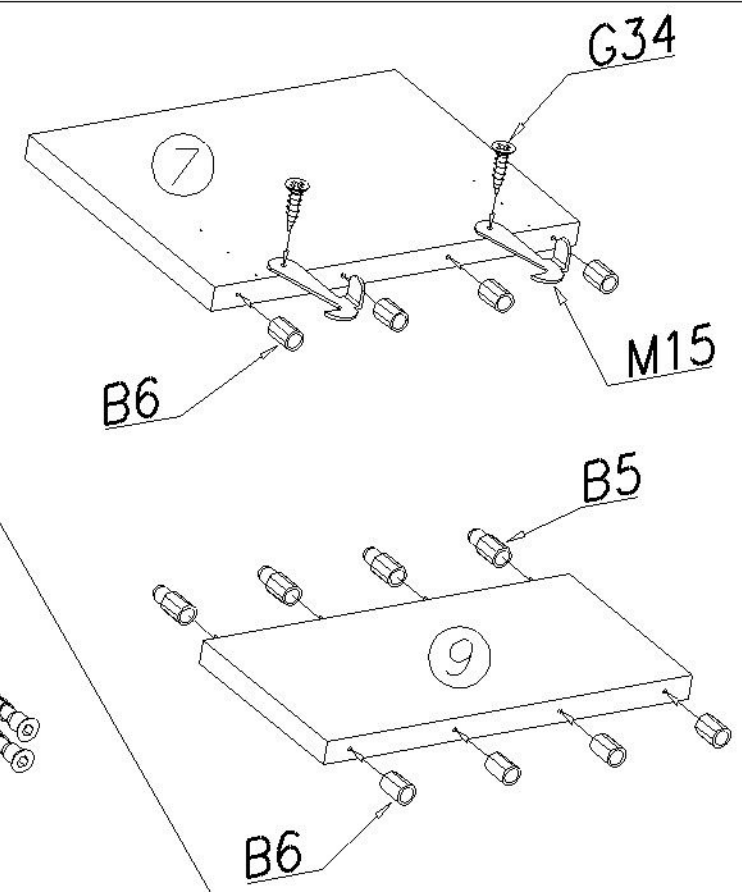


V

2x10  
2x11  
4x

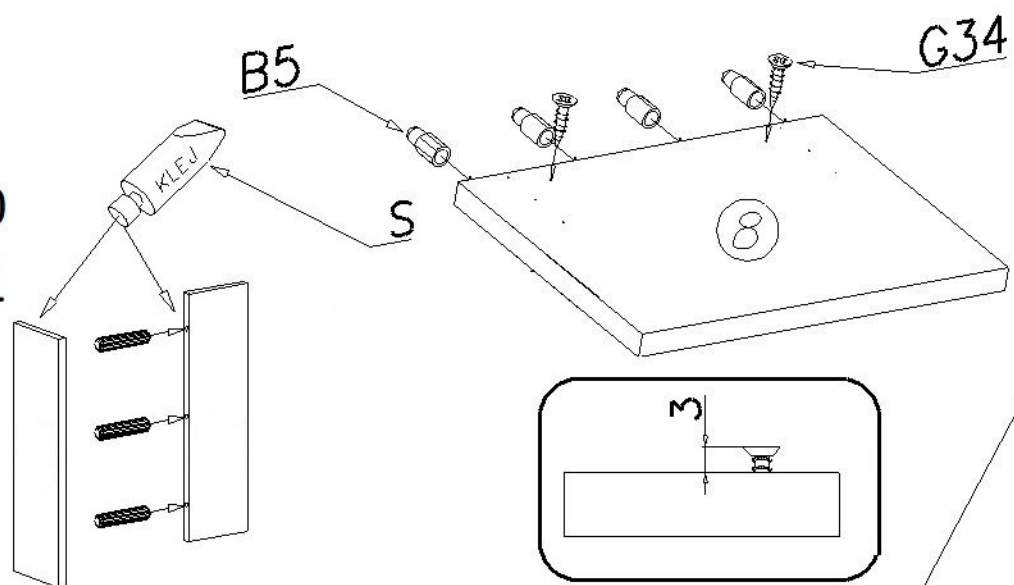

VII

P4

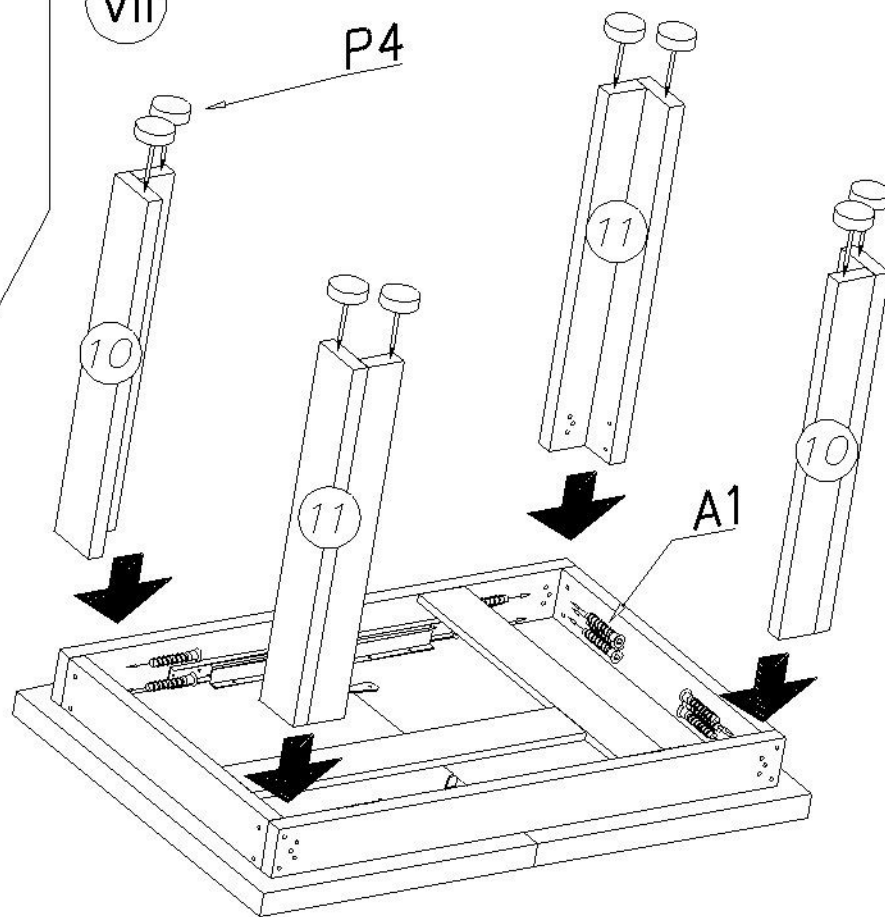

VI

G14

