



NATURAL 2

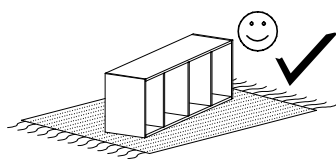


Narzędzia potrzebne do montażu

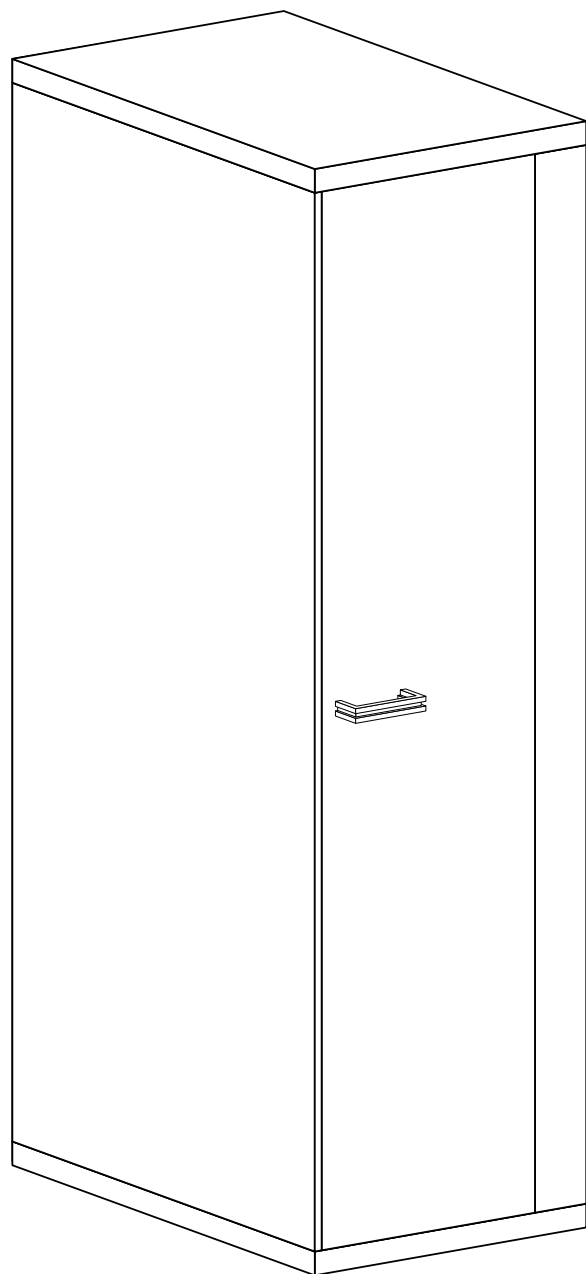

Nr	D[mm]	S[mm]	G[mm]	Ilość
1	1900	576	16	1
2	1950	560	16	1
3	578	568	48	1
4	578	568	48	1
5	560	535	16	1
6	1950	100	16	1
7	1950	560	2,5	1
8	1894	445	16	1

UWAGA !!!

MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI

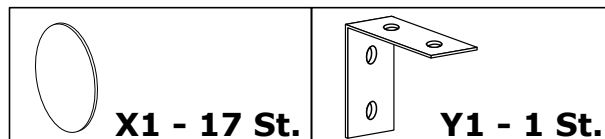


X1 - 17 St.

Y1 - 1 St.

UWAGA !!!

Mebel zawiera
elementy drewniane

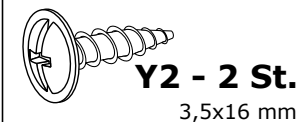


Y2 - 2 St.
3,5x16 mm




A - 1 St.


W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.

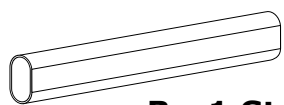


B - 1 St.

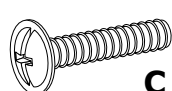


C - 2 St.
4x22 mm

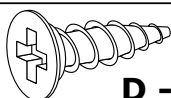


D - 12 St.
3,5x16 mm

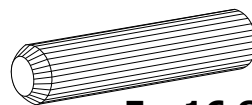

E - 16 St.

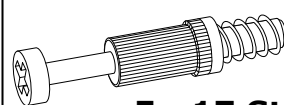

F - 17 St.

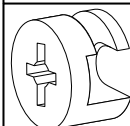


G - 17 St.




H - 2 St.




I - 60 St.

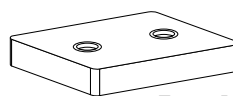


J - 4 St.

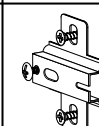


K - 3 St.

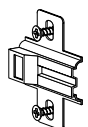


L - 1 St.

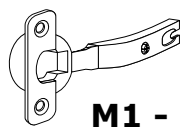


M1 - 3 St.

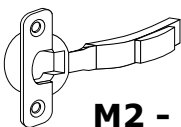




M2 - 1 St.

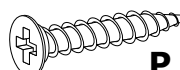


P - 8 St.
3,5x25 mm

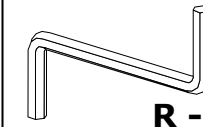


R - 1 St.

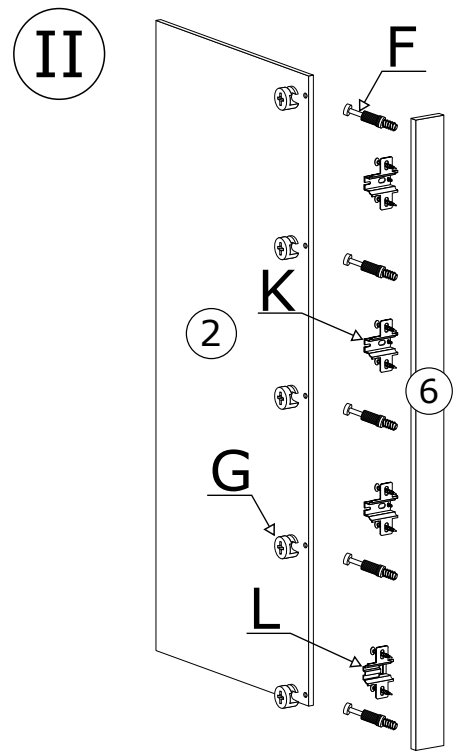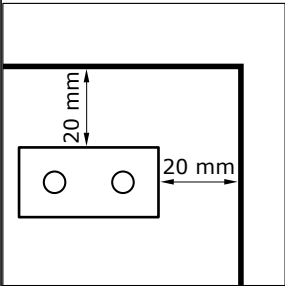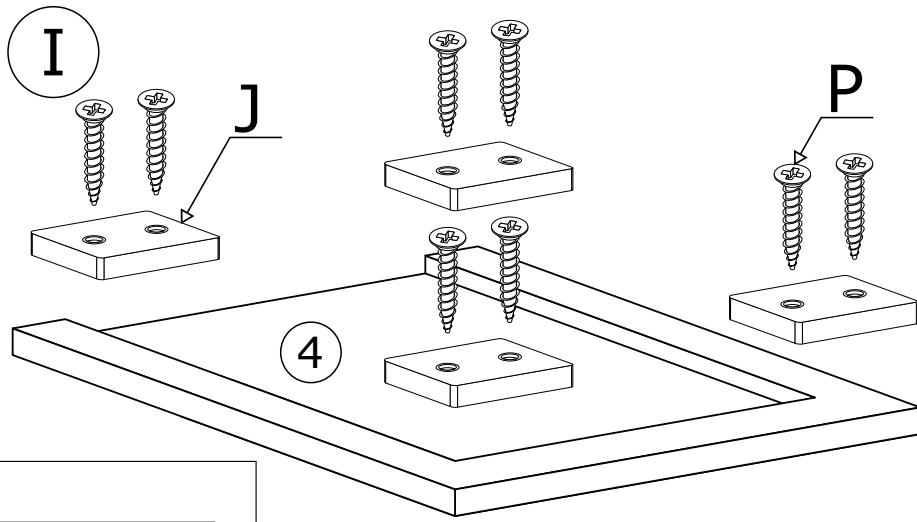


III

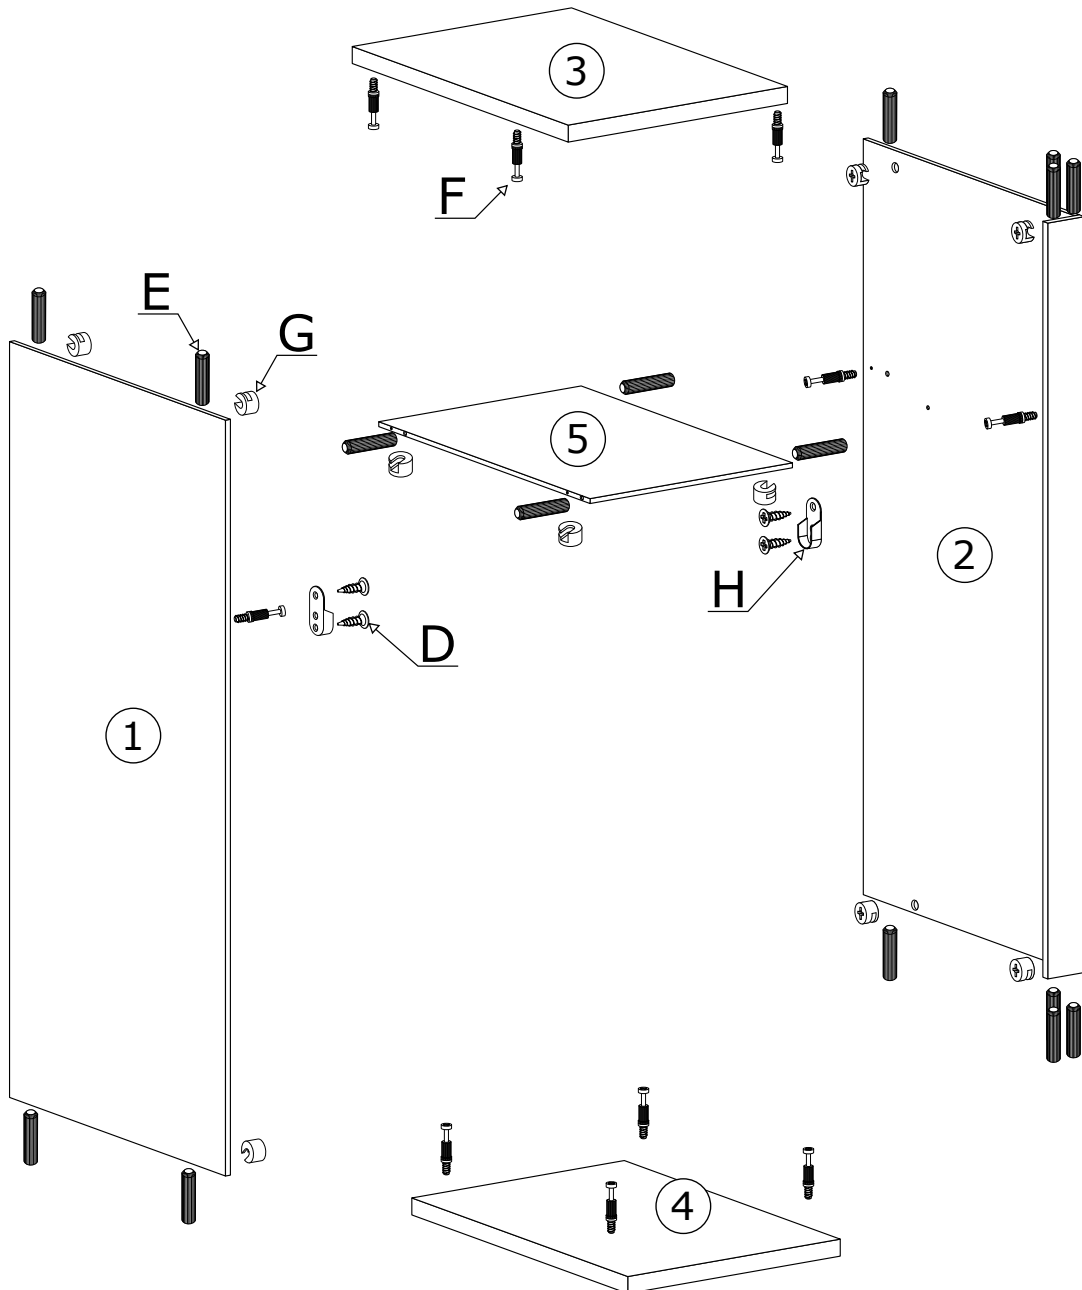


IV


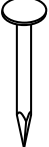
 x60

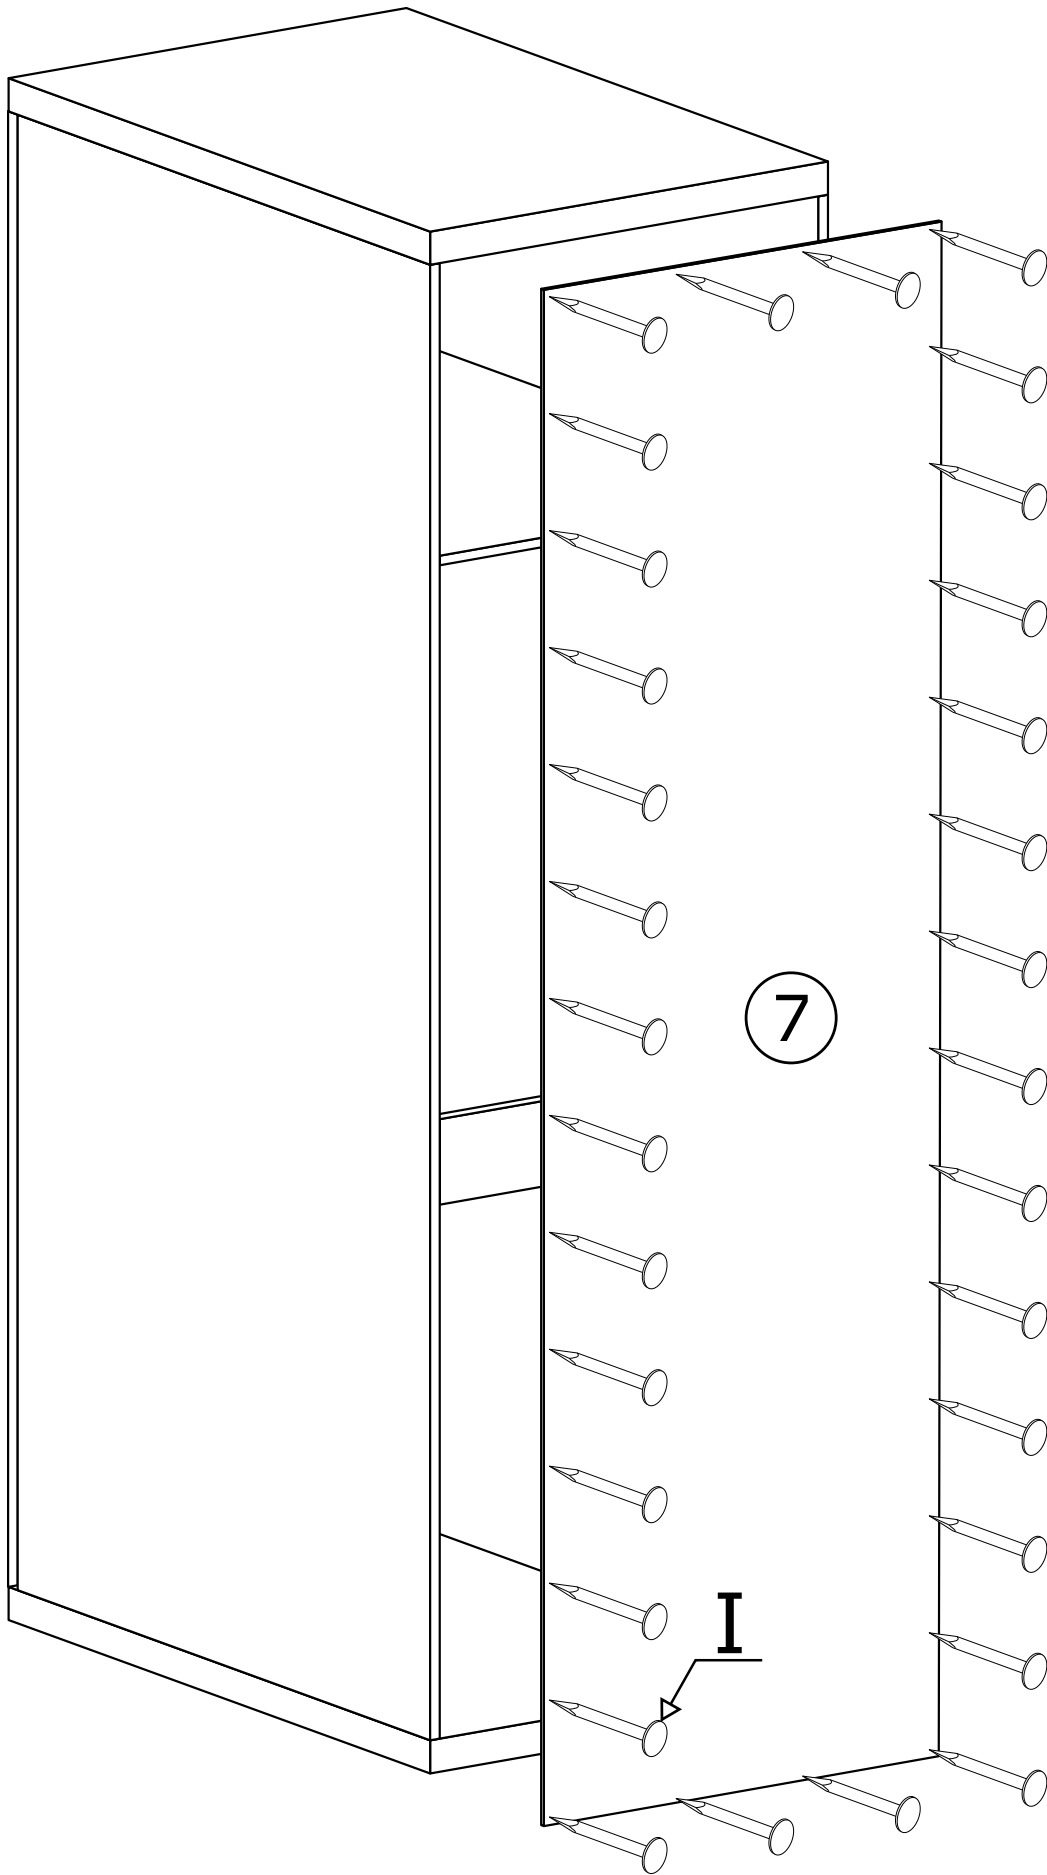

V

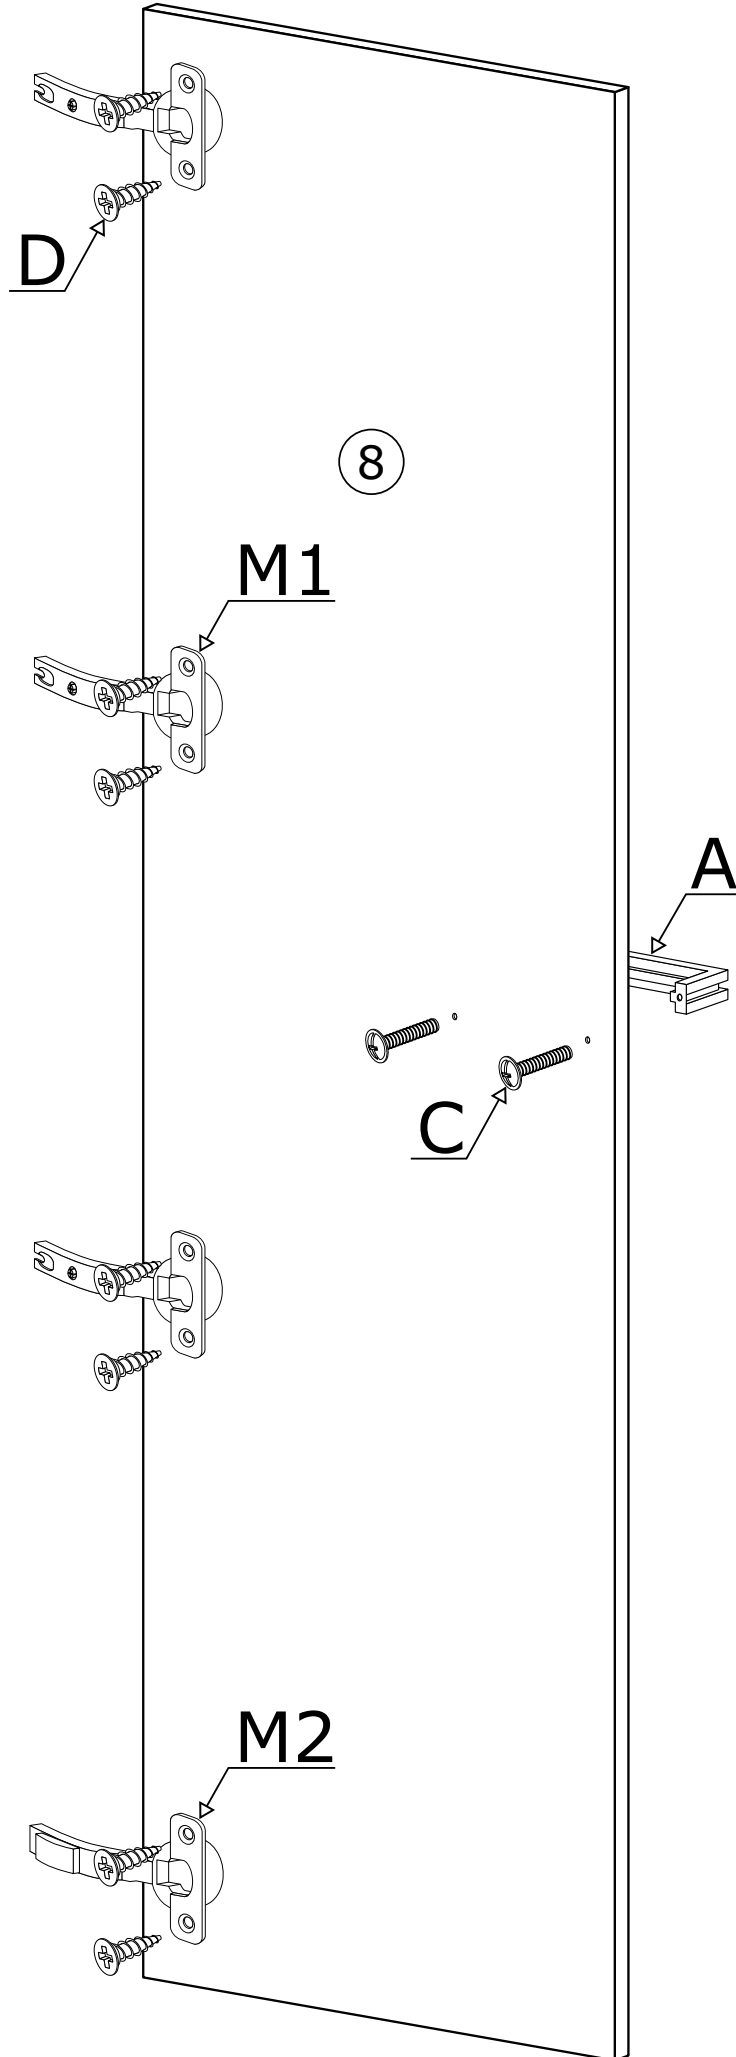

VI

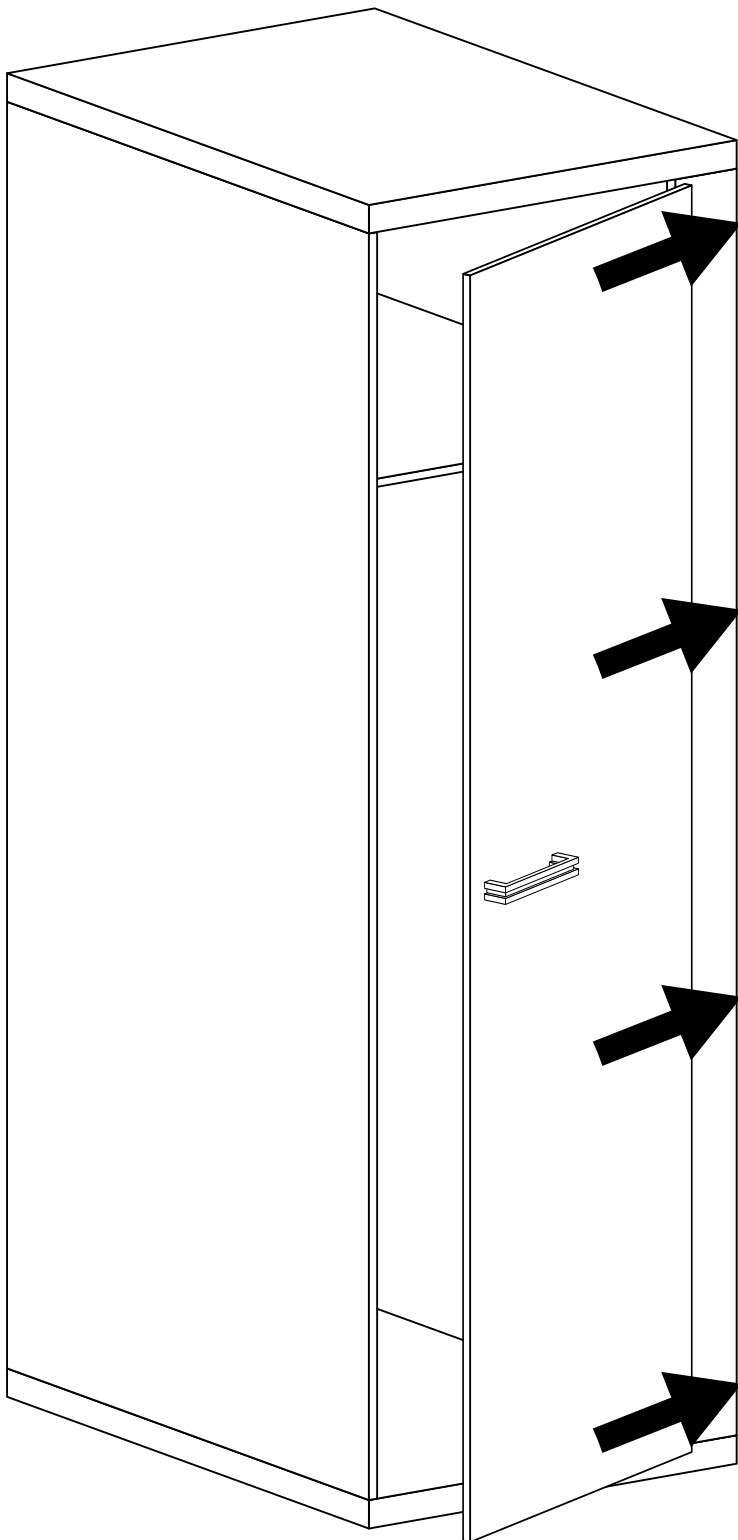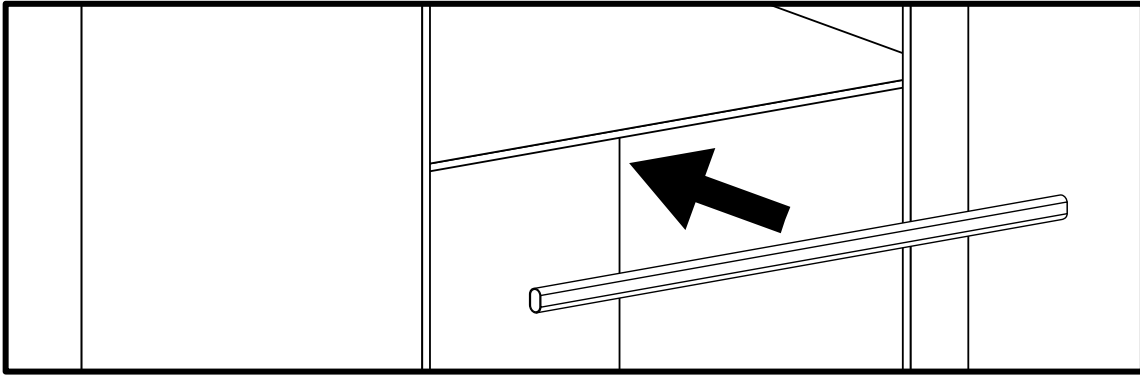

MONTAŻ KĄTOWNIKA

