

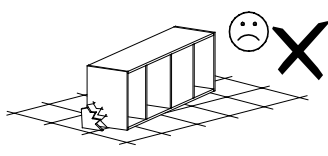
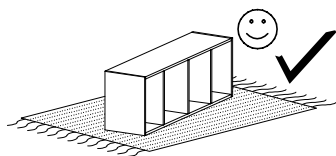



ANTICA 1

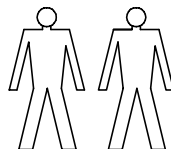

Narzędzia potrzebne do montażu

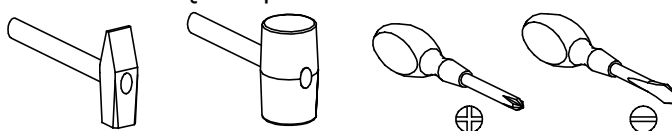


Nr	Nazwa elementu	D[mm]	S[mm]	G[mm]	Ilość
1	Bok P/L	837	380	16	2
2	Błat Górny	1390	410	71	1
3	Błat Dolny	1420	420	100	1
4	Przegroda P/L	837	364	16	2
5	Listwa P/L	780	100	32	2
6	Półka	355	355	16	2
7	Bok Szuflady	350	165	16	8
8	Tył Szuflady	527	165	16	4
9	Przód Szuflady	595	190	16	4
10	Kapak	1350	856	2,5	1
11	Kapak Szuflady	555	355	2,5	4
12	Drzwi P/L	720	277	16	2

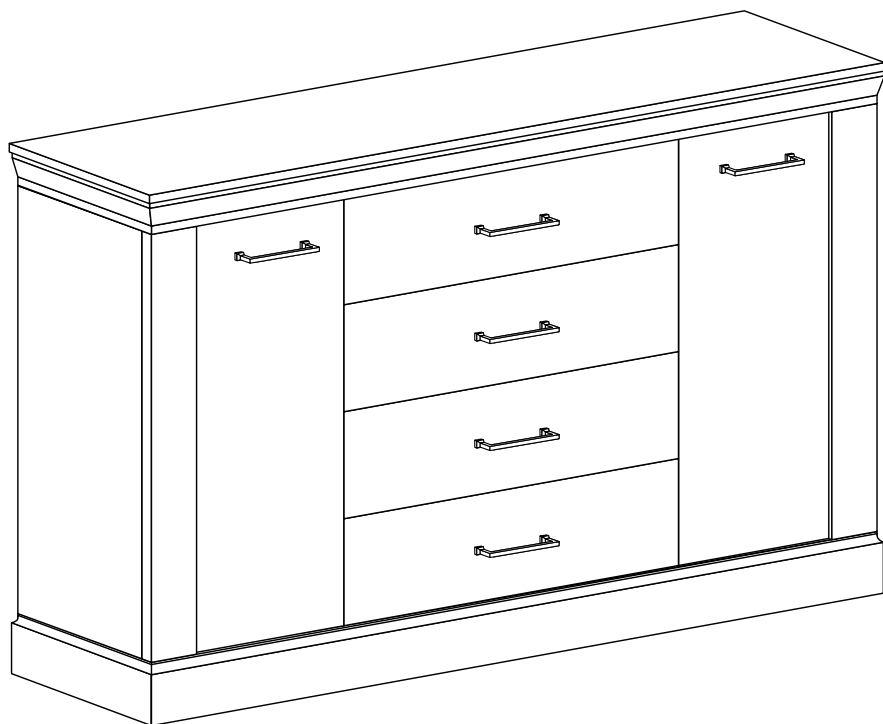


UWAGA !!!

MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI

W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.




Z - 4 Kpl.




S - 32 St.
5x13 mm



X1 - 30 St.

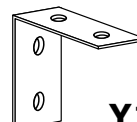


Y1 - 1 St.




Y2 - 2 St.
3,5x16 mm




F - 16 St.



P - 8 St.




Ł - 1 St.



G - 8 St.
3,5x16 mm




H - 56 St.
3x30 mm




E - 75 St.




A - 4 St.
7x50 mm




W - 4 St.

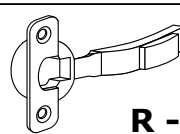


R - 4 St.



L - 30 St.




B - 36 St.
8x35 mm




Q - 6 St.



D - 12 St.
4x25 mm




U - 6 St.




K - 30 St.


I

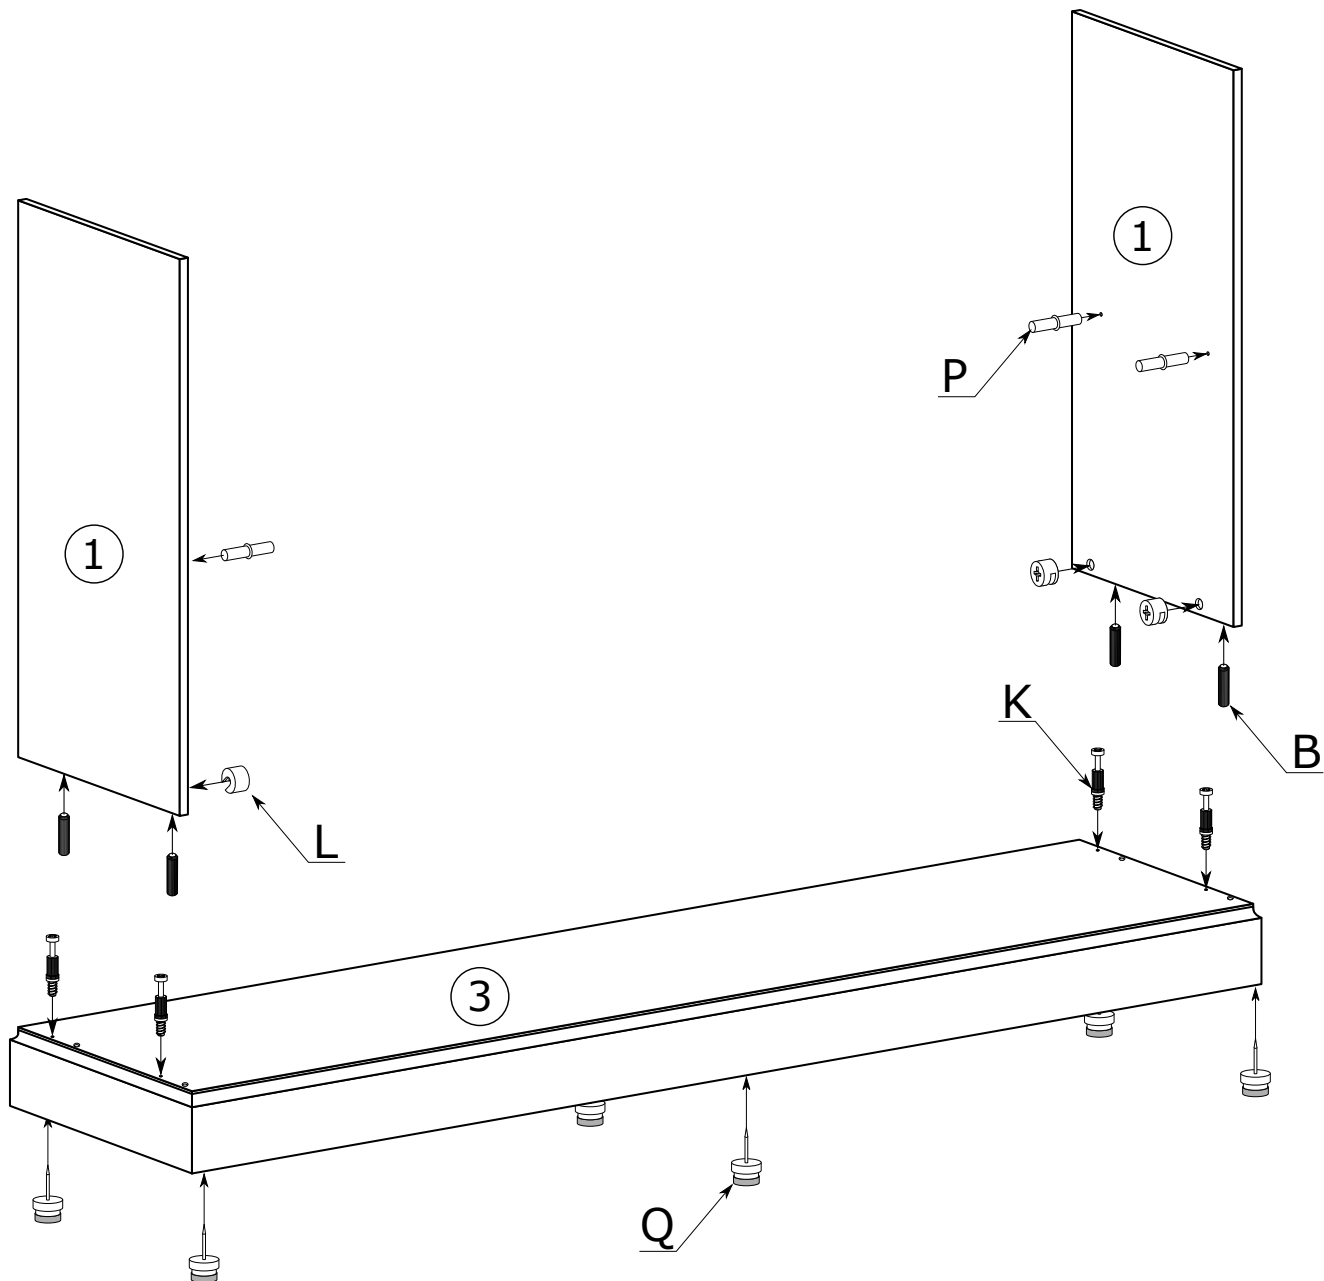


II

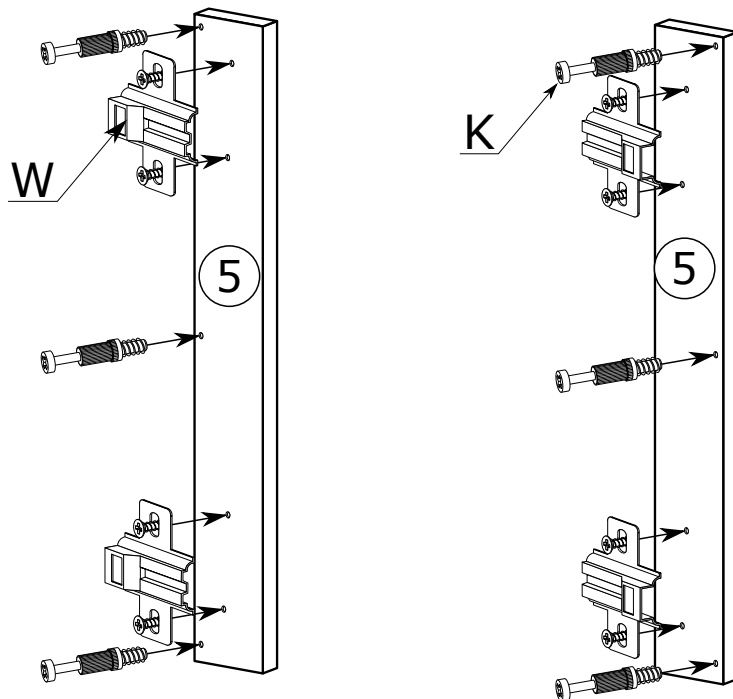


III

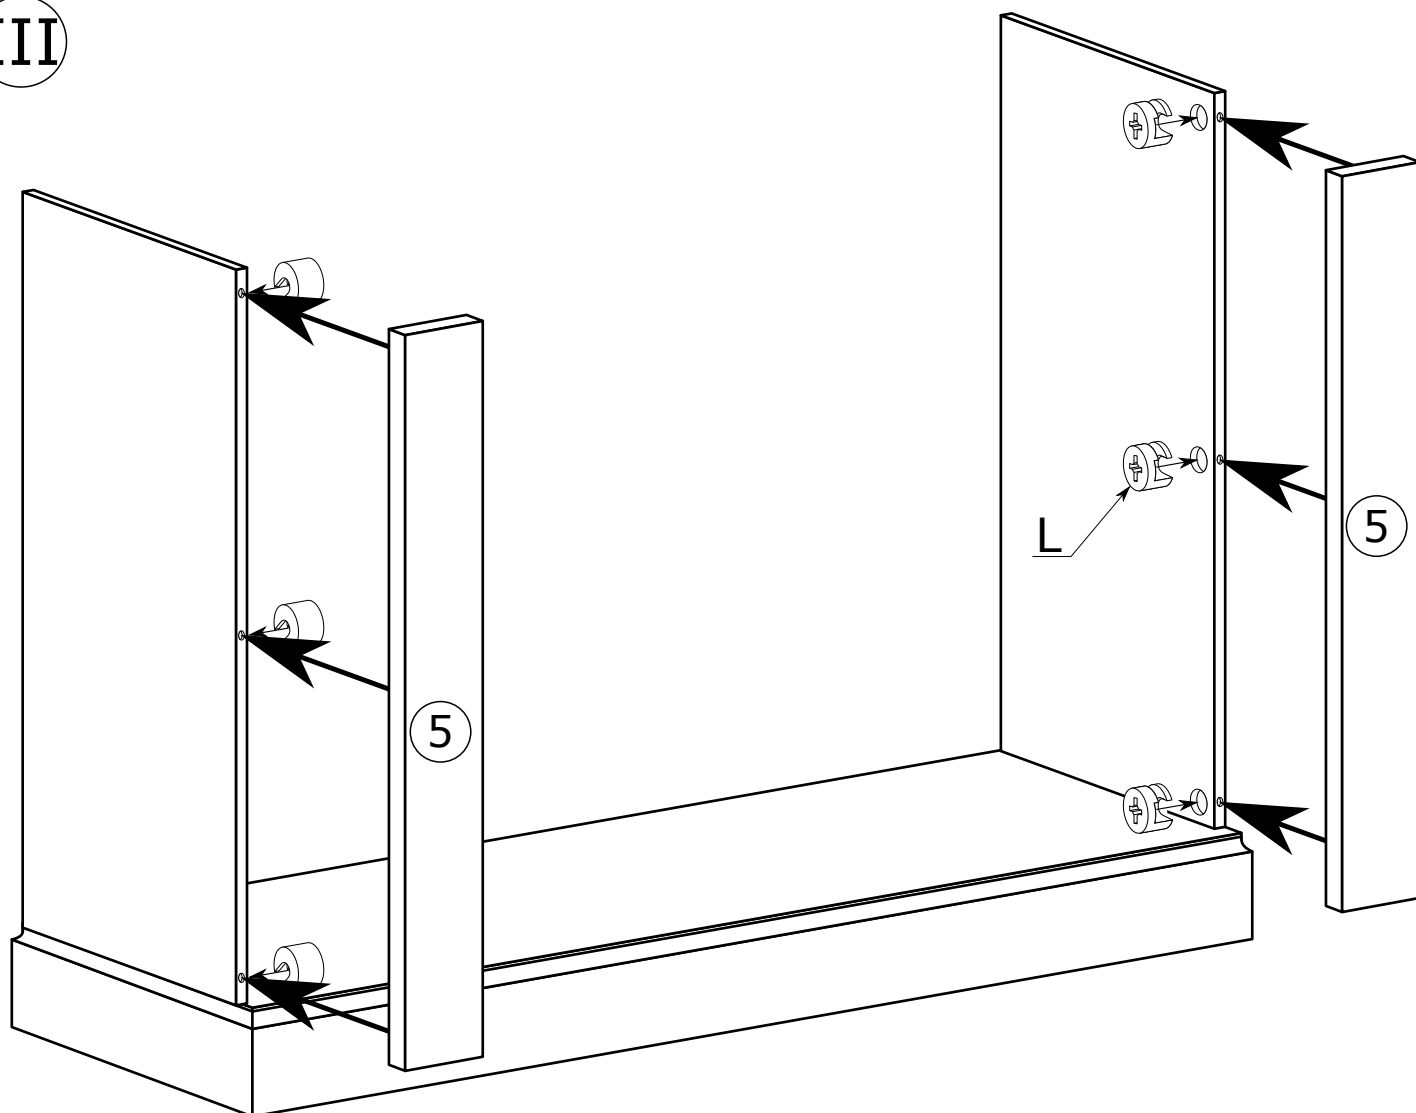


IV

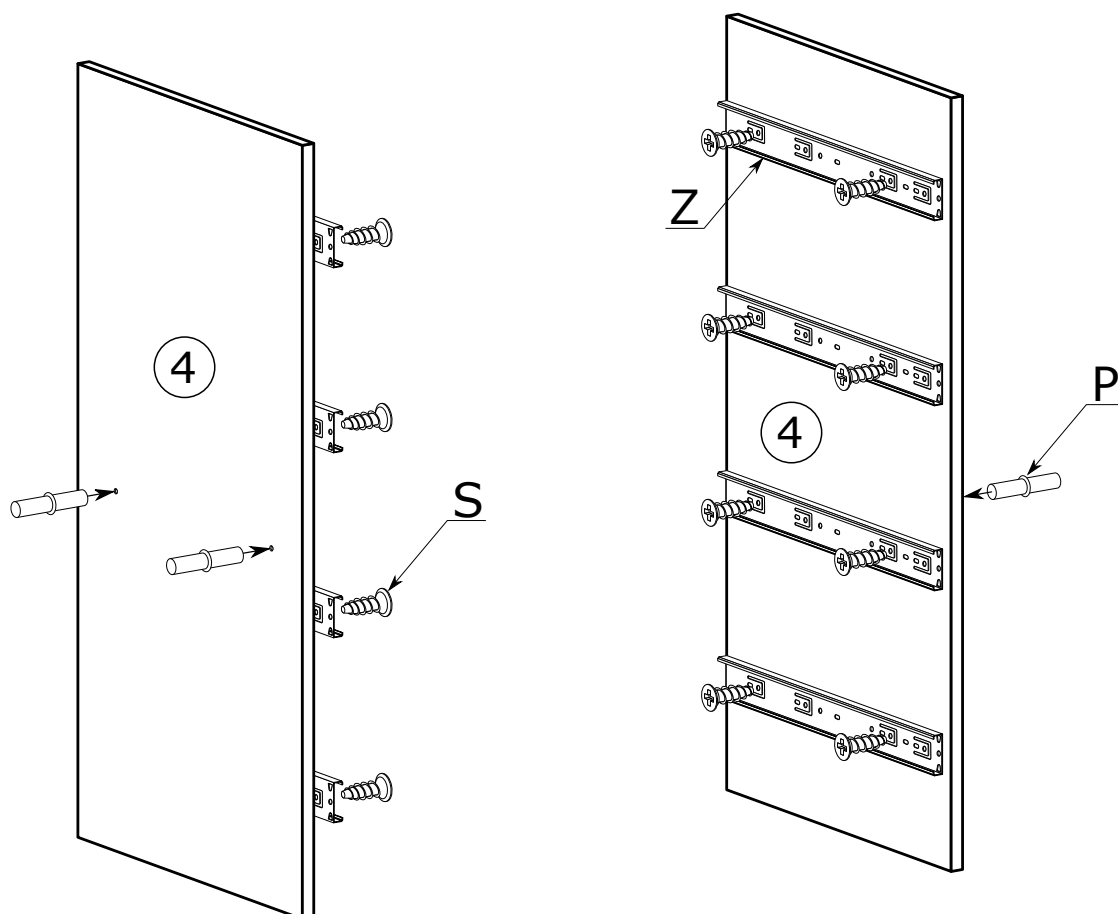


V

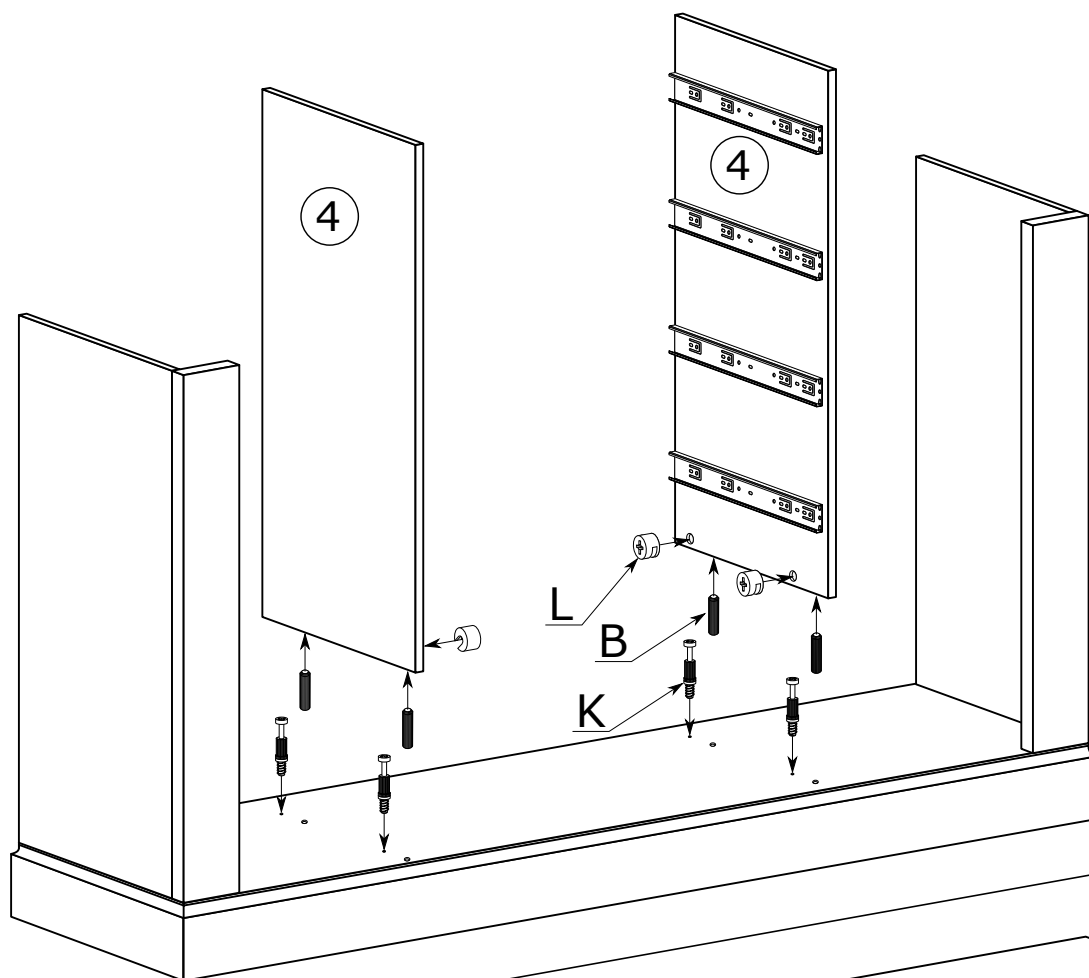



VI

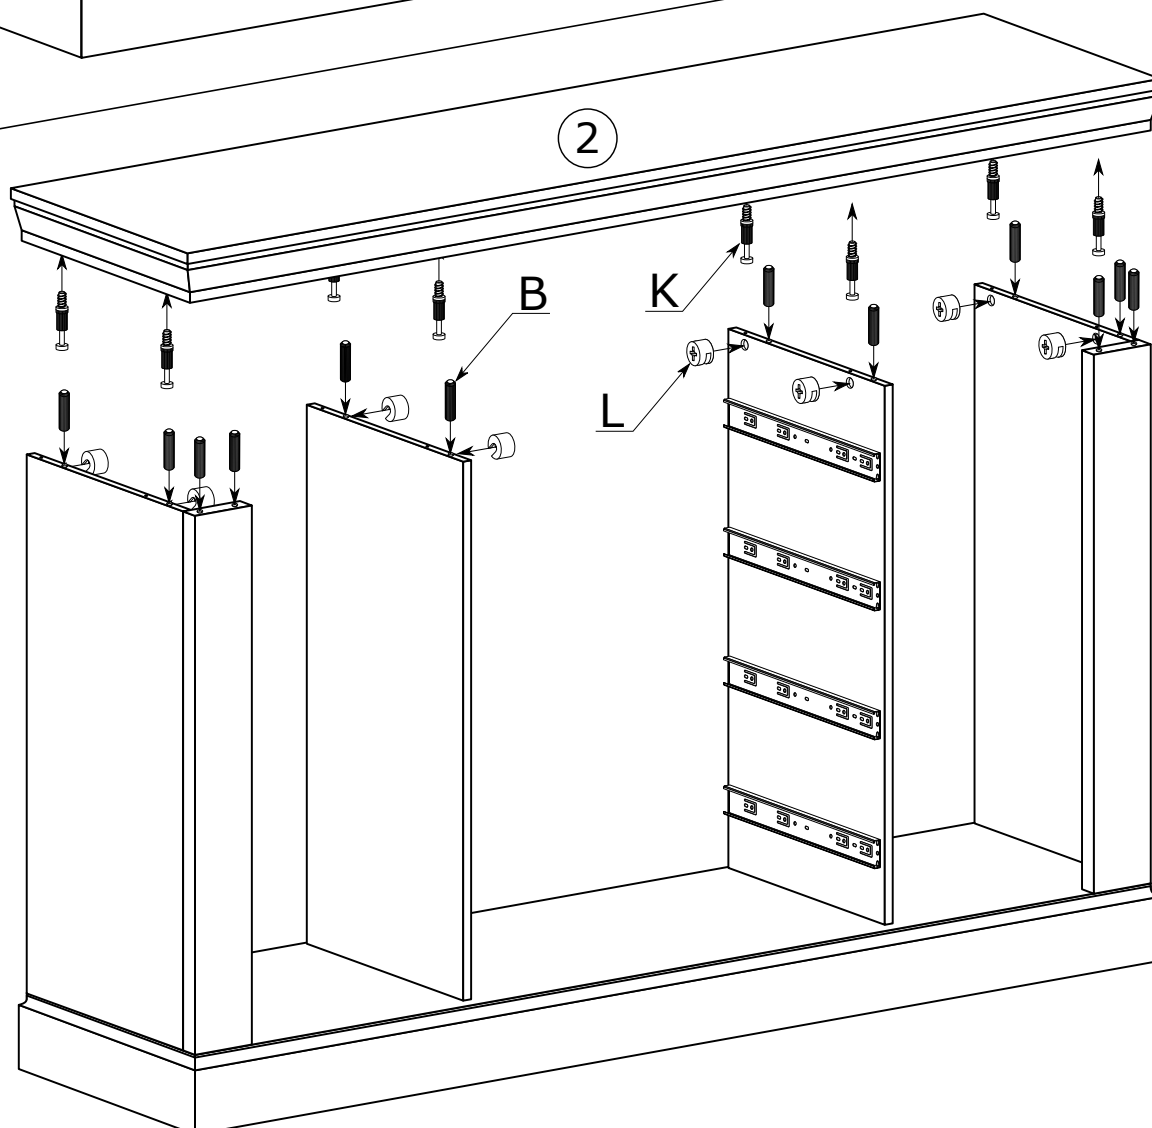


VII

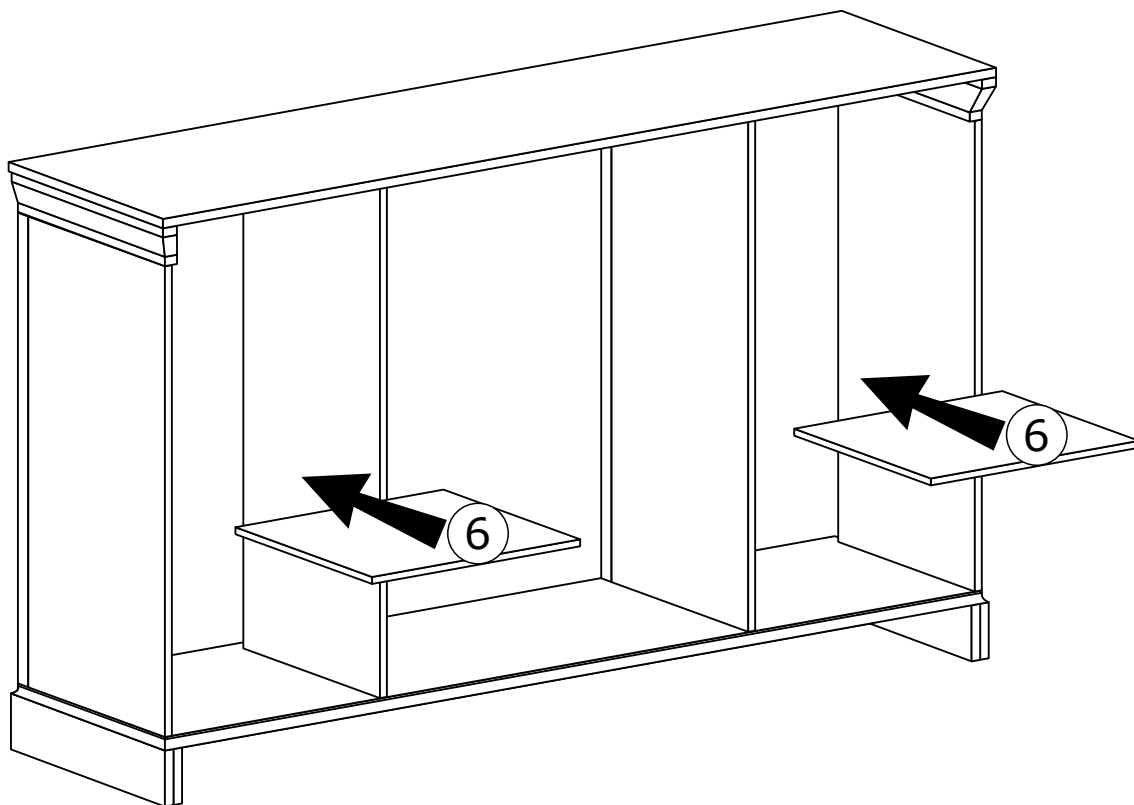


VIII

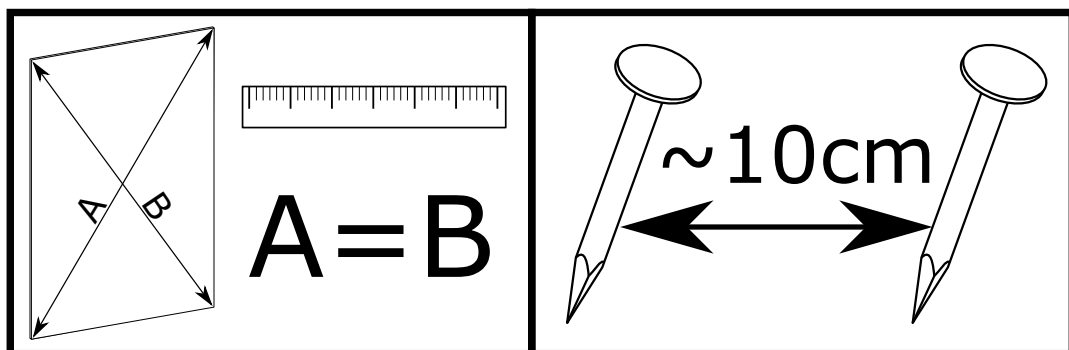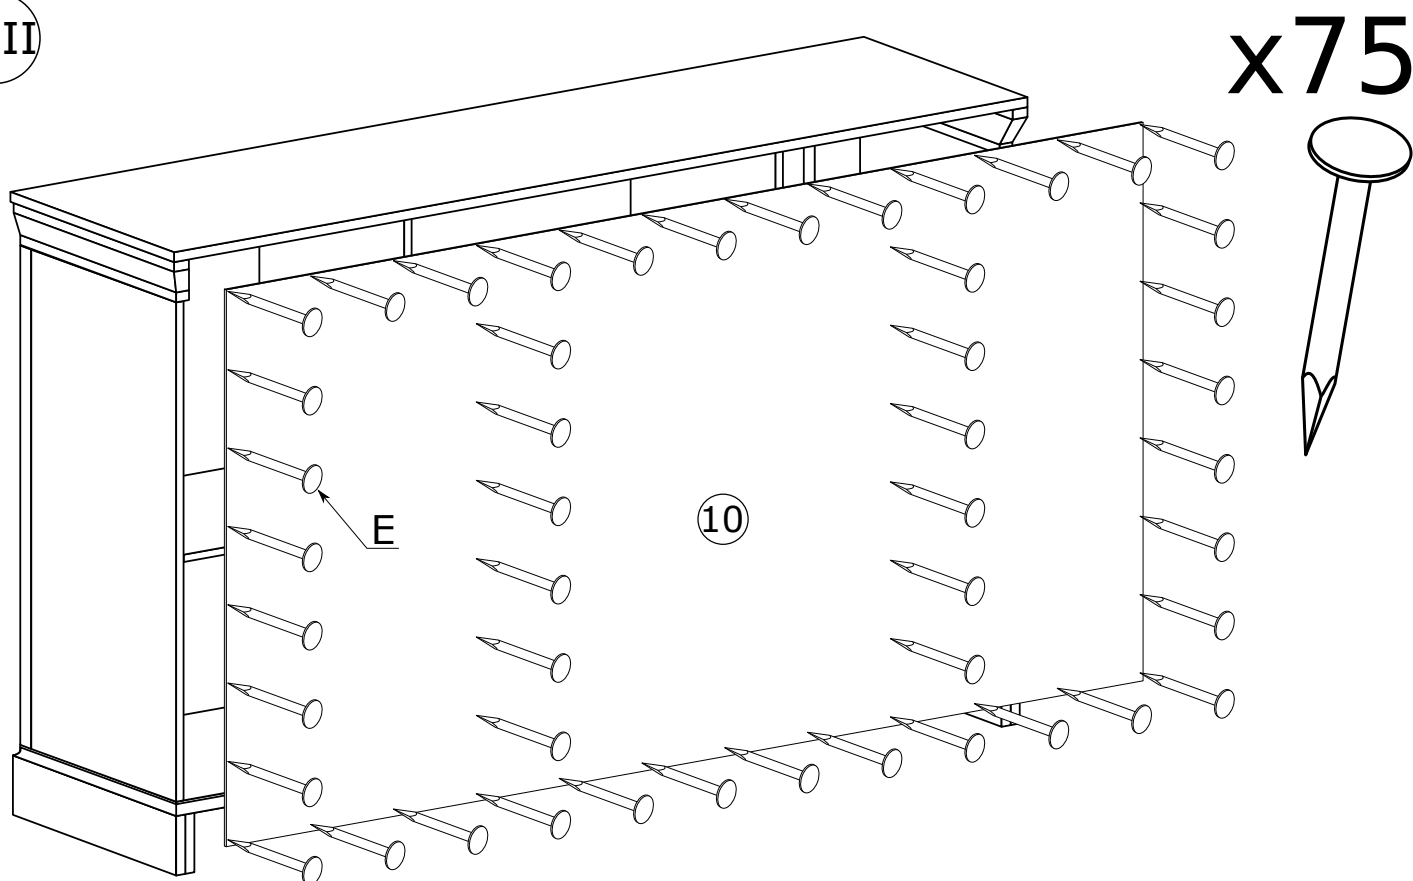



IX

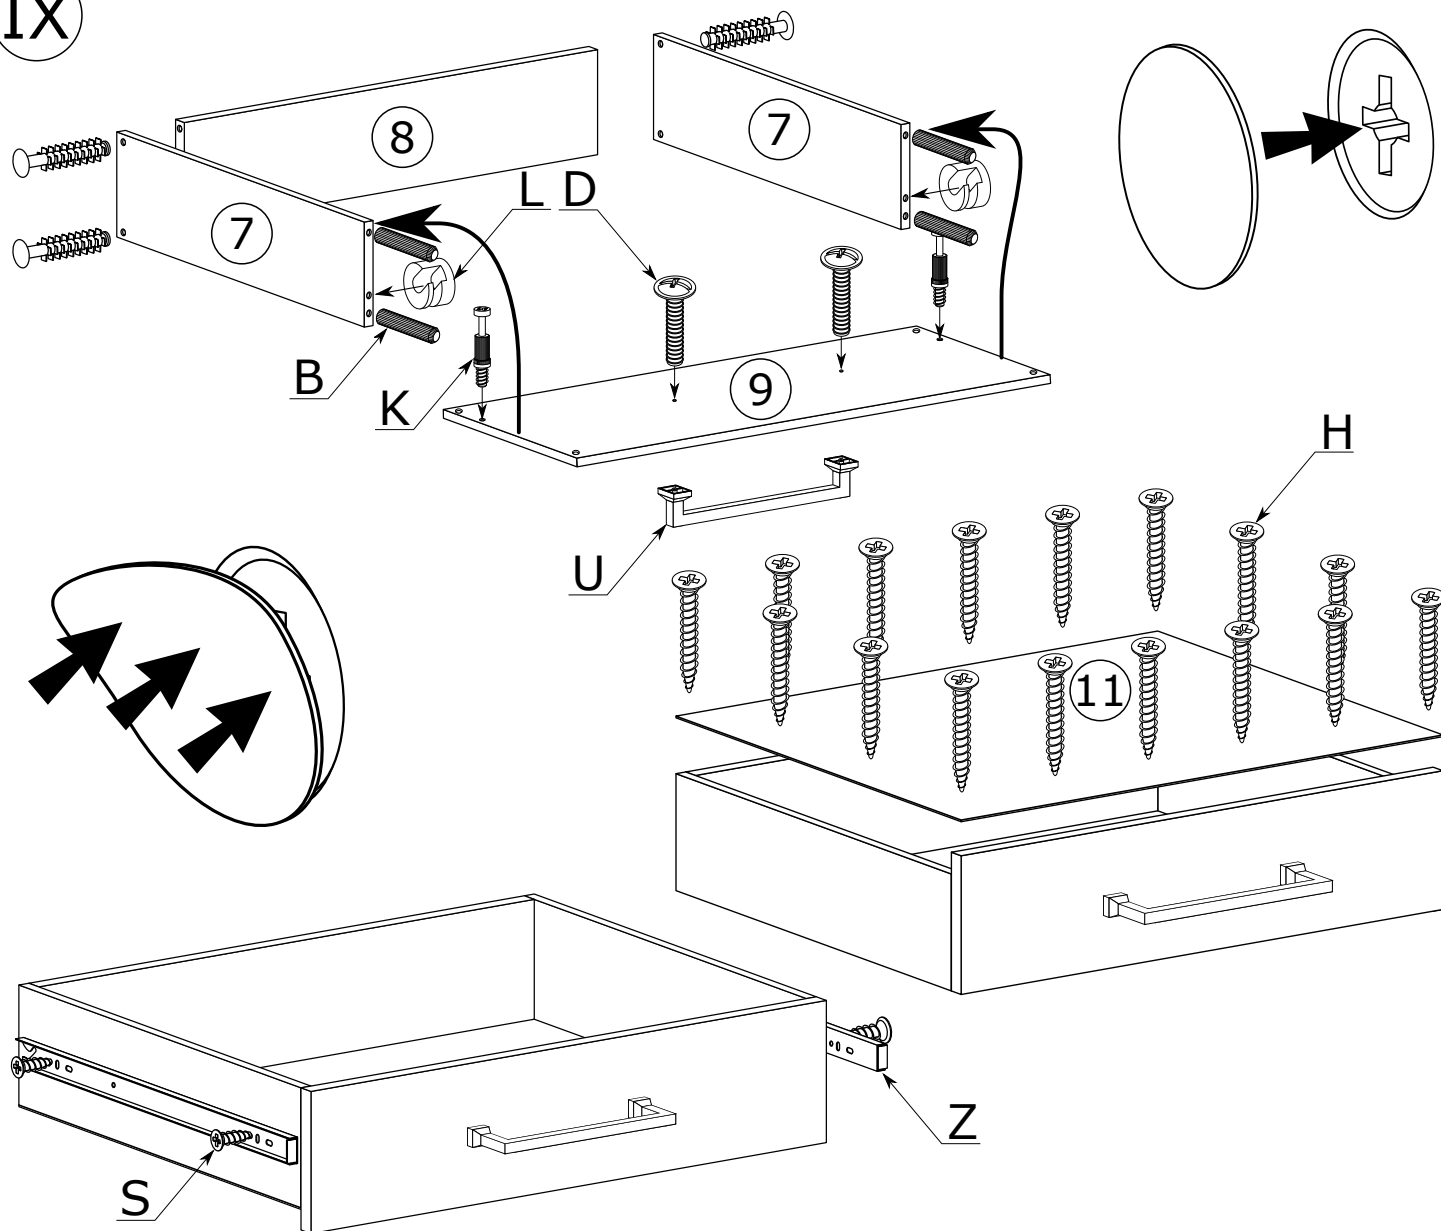


X

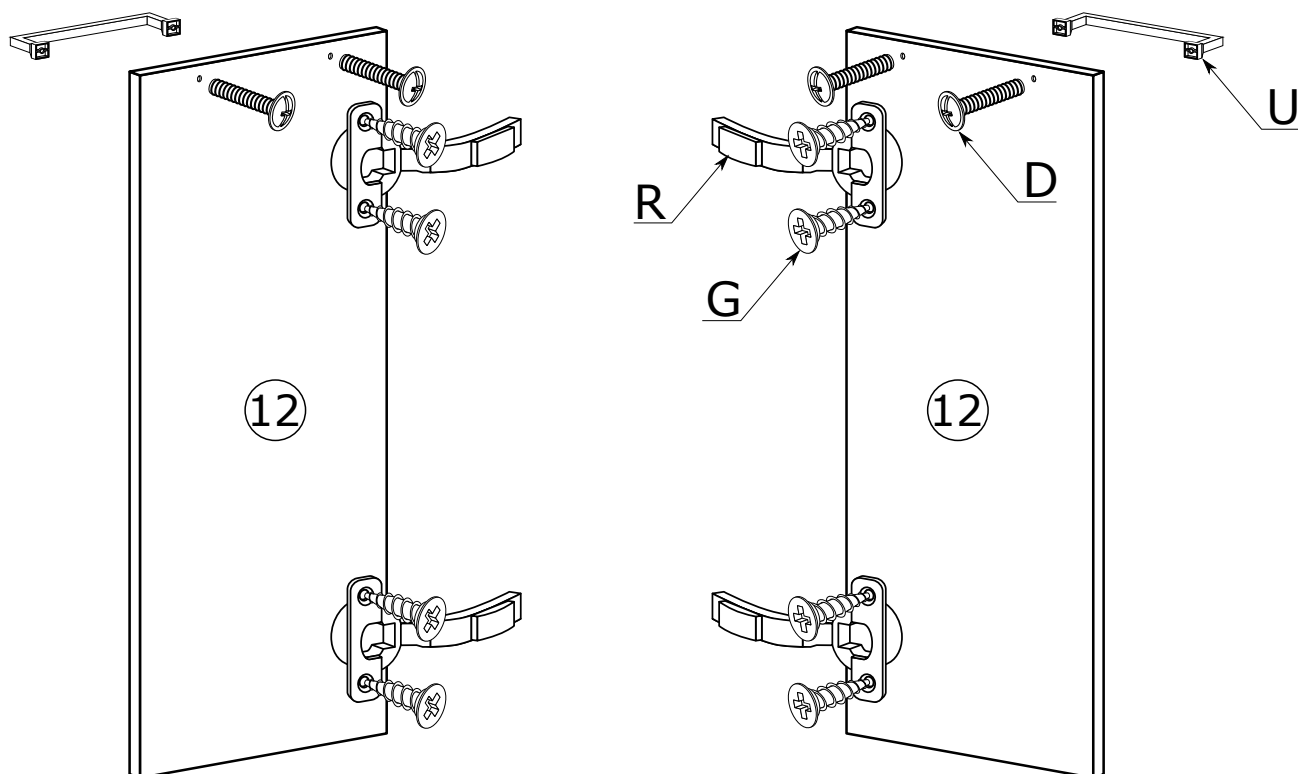

XI

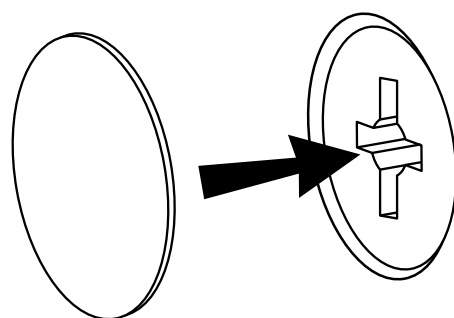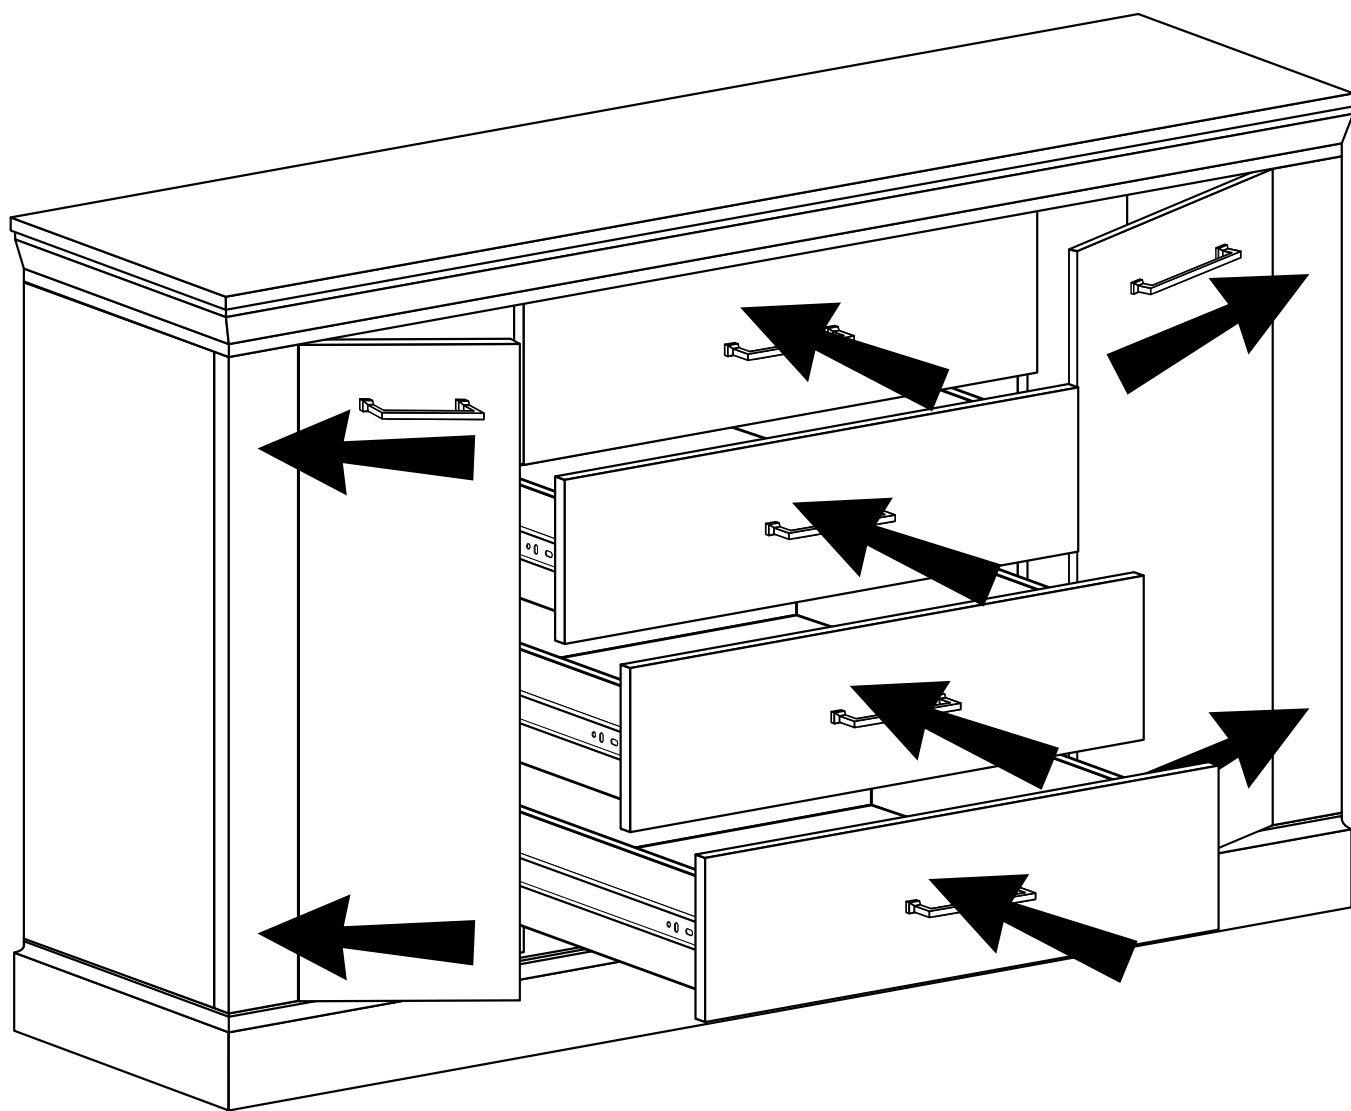

MONTAŻ/DEMONTAŻ PROWADNIC

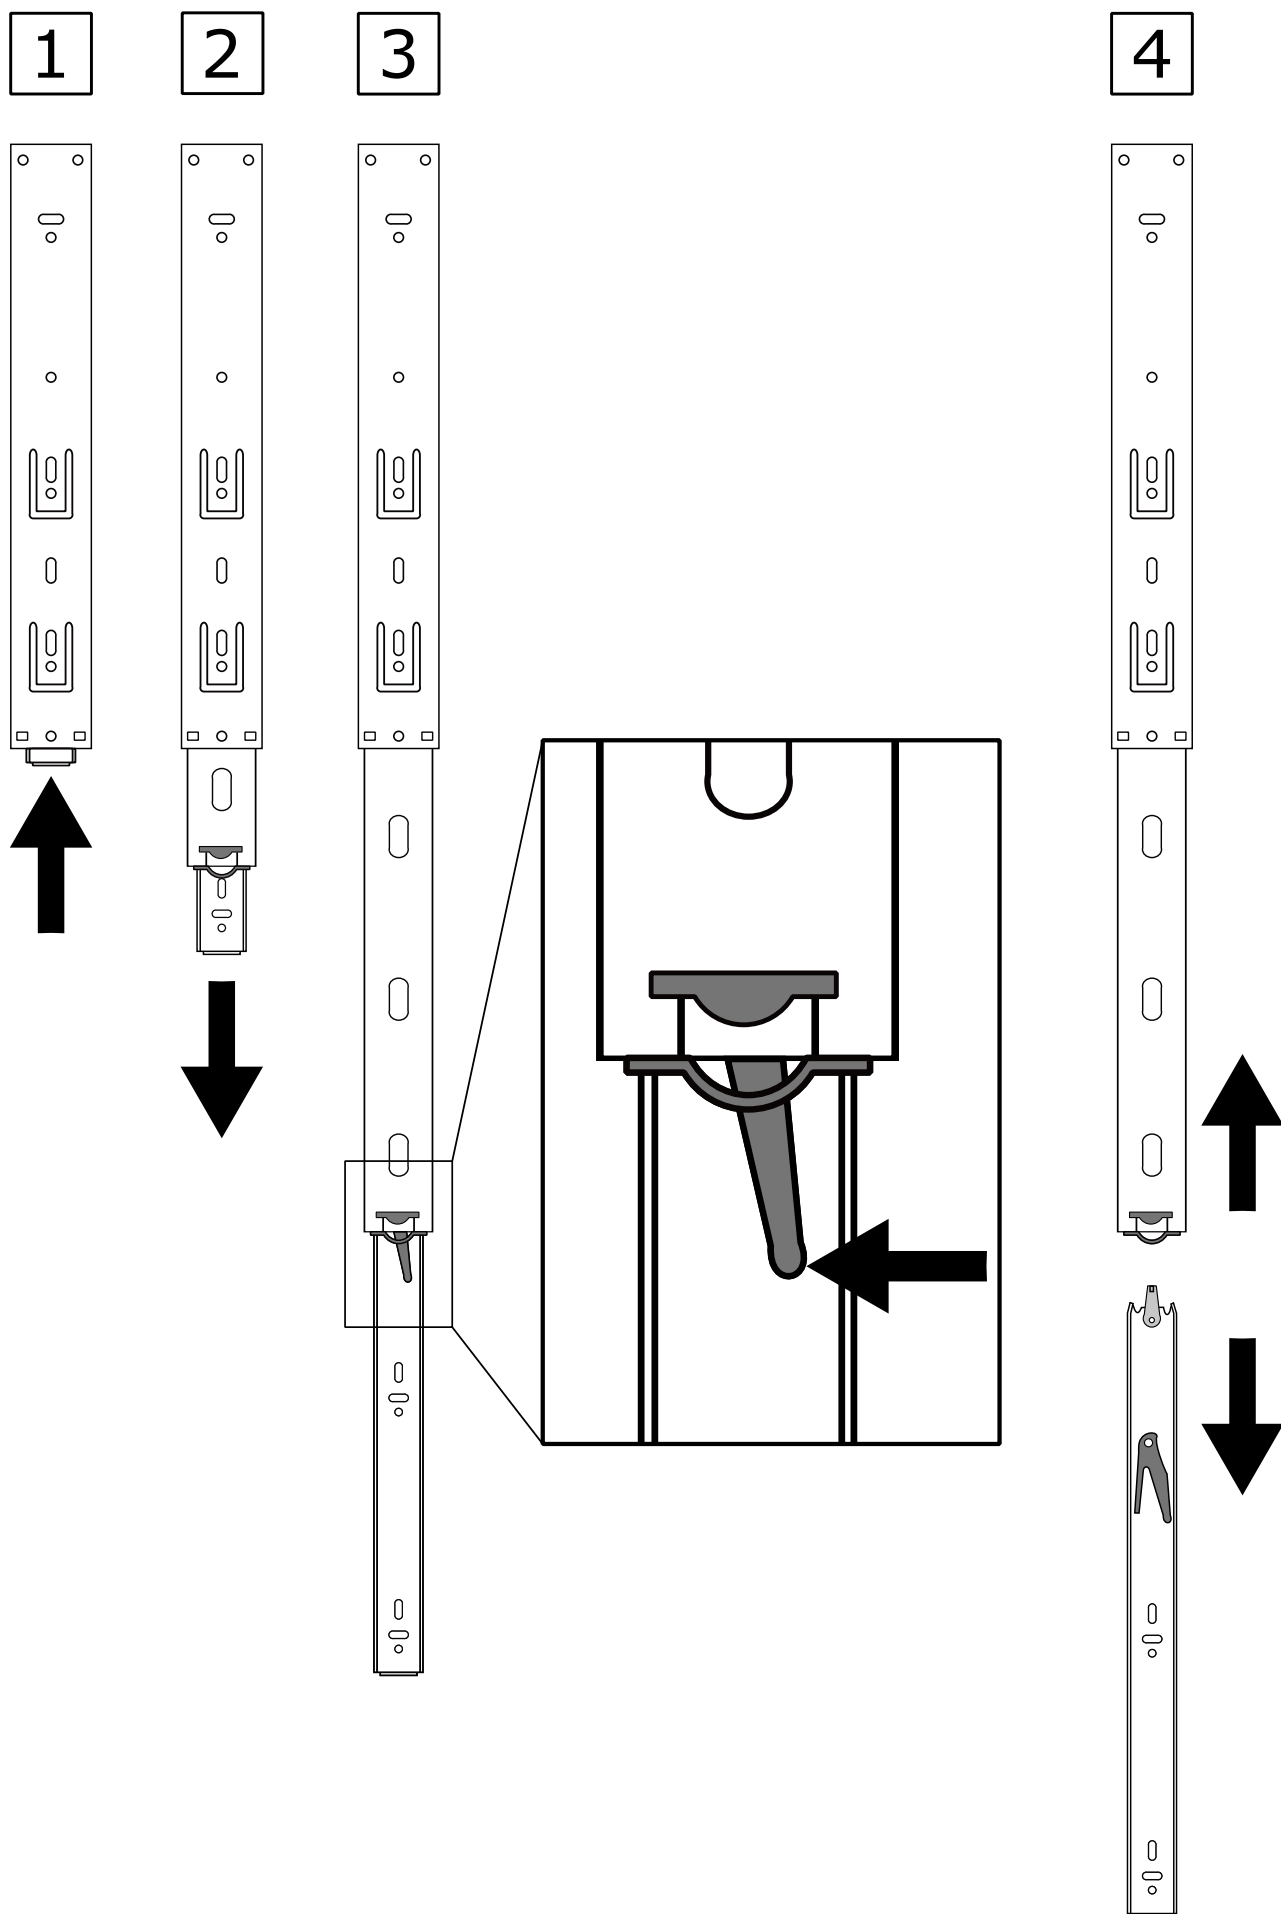

MONTAŻ KĄTOWNIKA

