

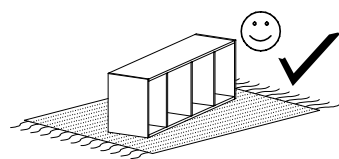
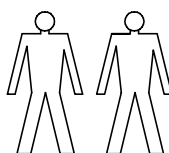
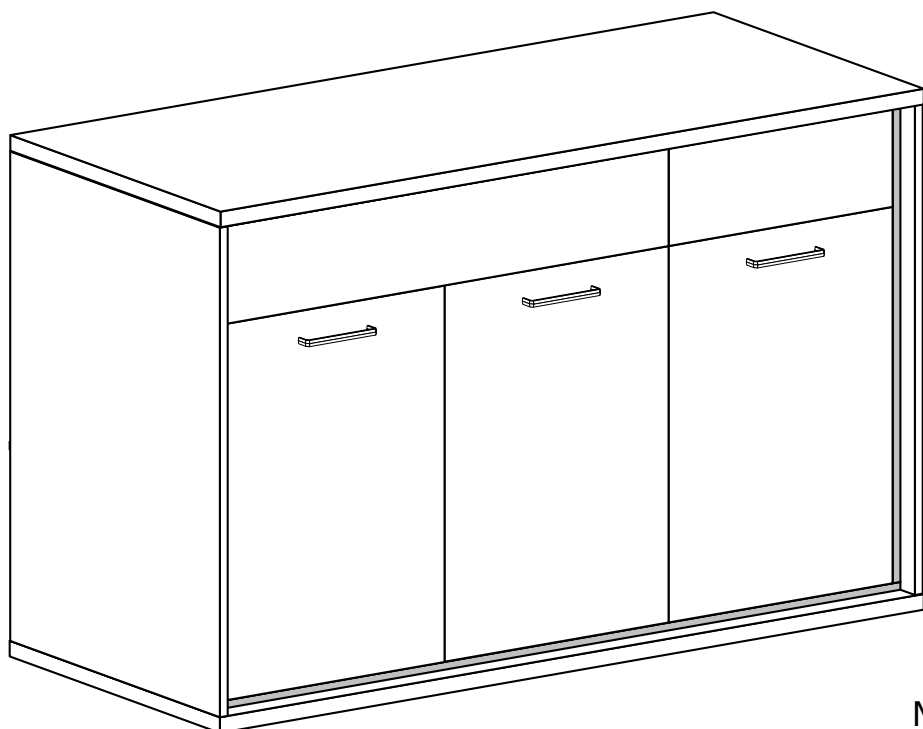




MEDIOLAN 7



Narzędzia potrzebne do montażu



Nr	Nazwa elementu	D[mm]	S[mm]	G[mm]	Ilość
1	Bok P/L	935	405	16	2
2	Blat Górny	1348	405	32	1
3	Blat Dolny	1348	405	32	1
4	Przegroda Śr	363	214	16	1
5	Przegroda	705	368	16	1
6	Wieniec	1315	368	16	1
7	Listwa Czarna	1280	20	16	2
8	Listwa Czarna	934	20	16	2
9	Przybitka	368	160	16	2
10	Półka	863	368	16	1
11	Półka	436	368	16	1
12	Bok Szuflady	350	165	16	4
13	Tył Szuflady	788	165	16	1
14	Tył Szuflady	360	165	16	1
15	Przód Szuflady	848	190	32	1
16	Przód Szuflady	422	190	32	1
17	Kapak	1340	248	2,5	1
18	Kapak	1340	726	2,5	1
19	Kapak Szuflady	816	345	2,5	1
20	Kapak Szuflady	388	345	2,5	1
21	Drzwi	700	422	16	3


UWAGA !!!

MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI


W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.




A - 3 St.




B - 8 St.



C - 6 St.
4x22 mm




D - 34 St.
3,5x16 mm




E1 - 16 St.




X1 - 14 St.



E2 - 2 St.




F - 14 St.




G - 14 St.




H - 60 St.




I - 5 St.

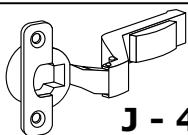


J - 4 St.




K - 6 St.




L - 12 St.




Y1 - 1 St.



Y2 - 2 St.
3,5x16 mm

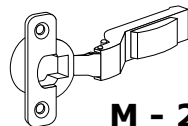


M - 2 St.




N - 8 St.




O - 1 St.

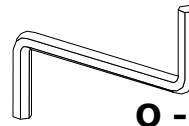


O - 1 St.



P - 8 St.
6,3x30 mm



R - 16 St.
5x13 mm




S - 8 St.
3,9x30 mm



T - 16 St.




U - 50 St.
3x30 mm




Z - 2 Kpl.




I

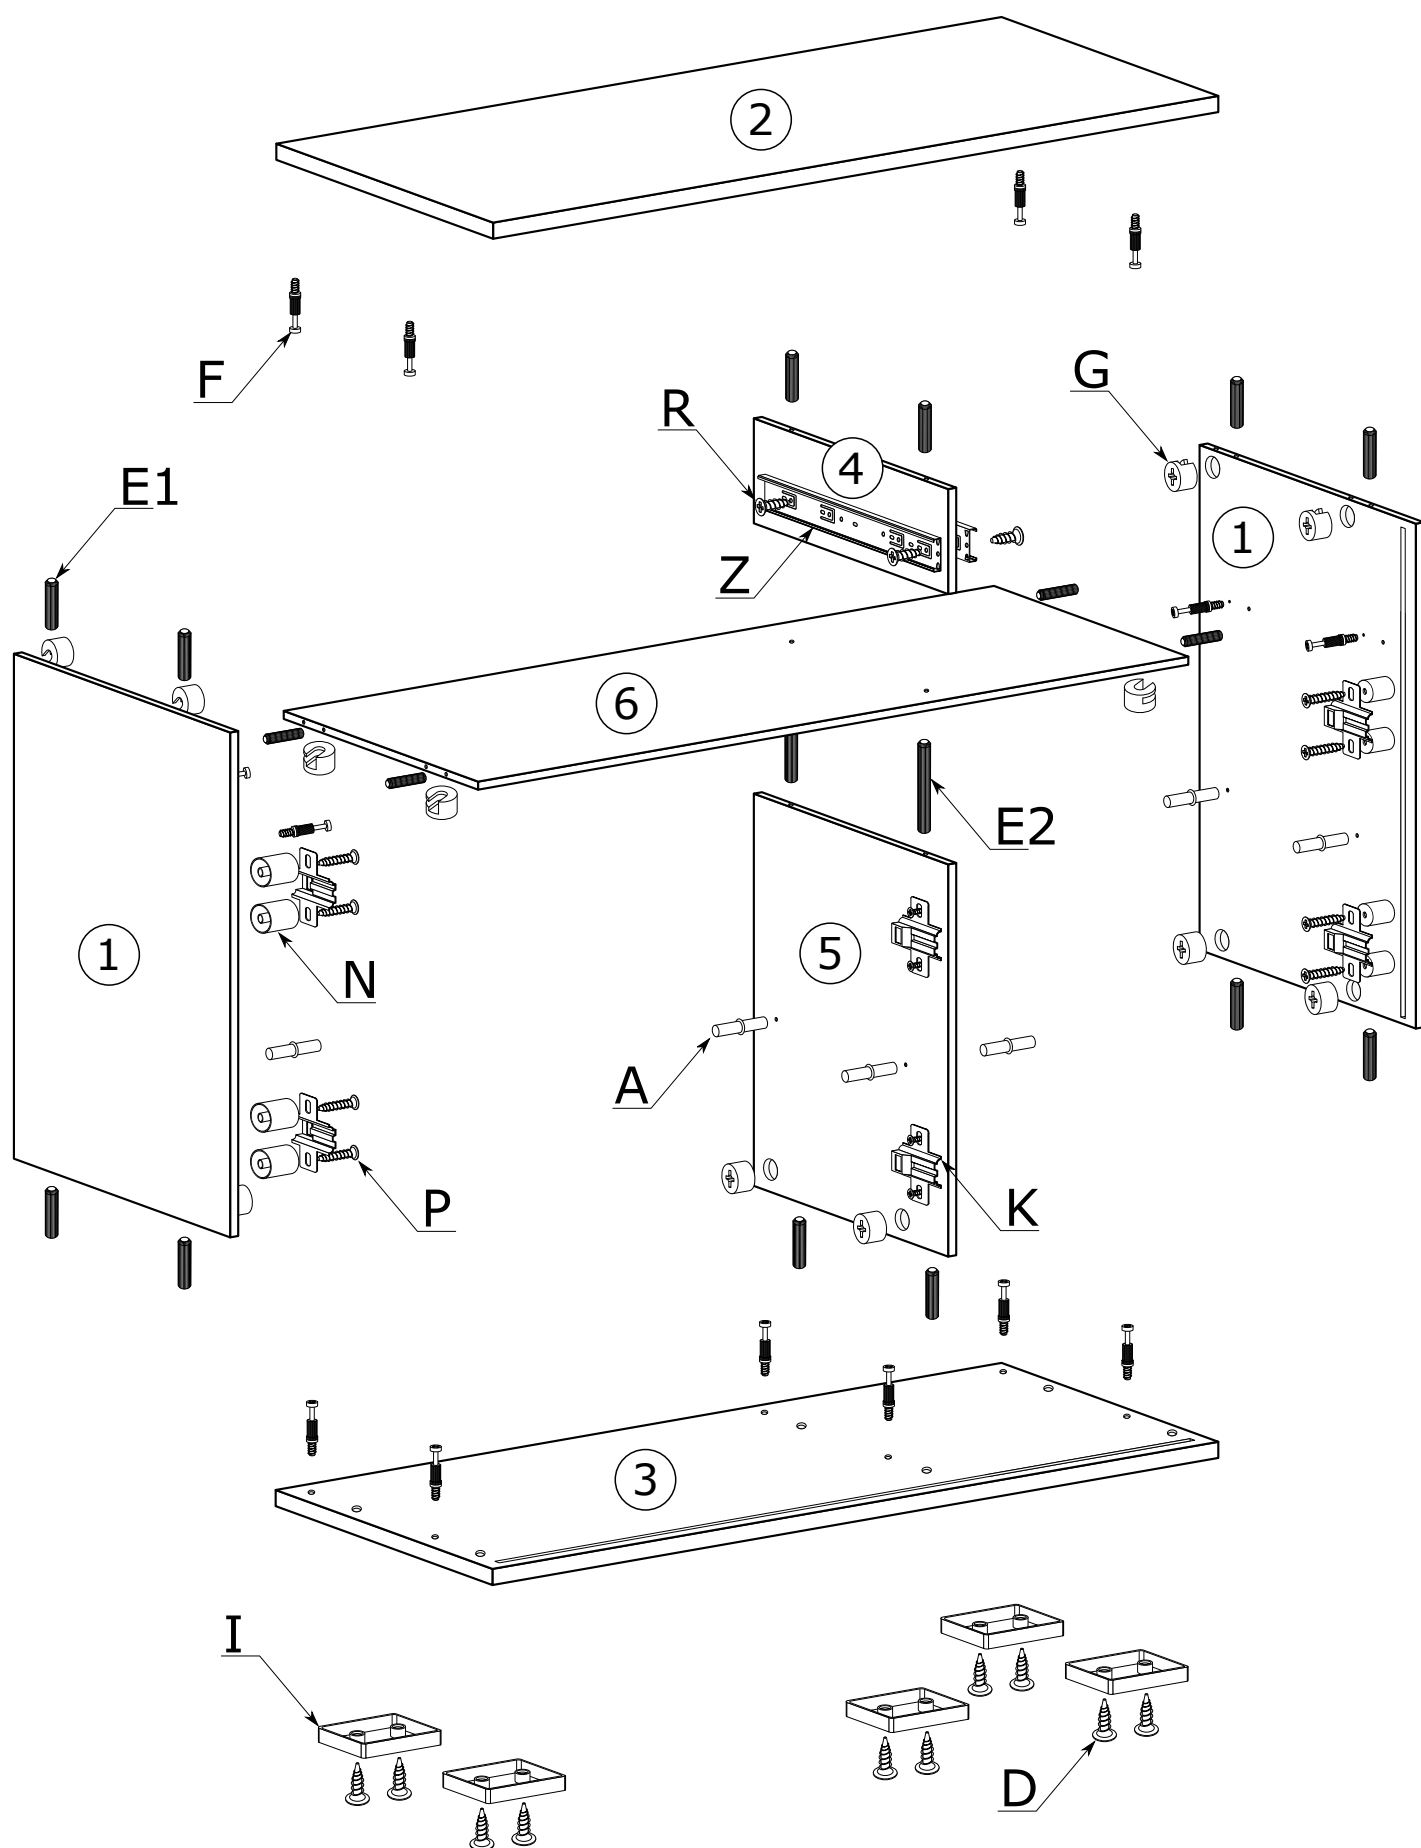



II

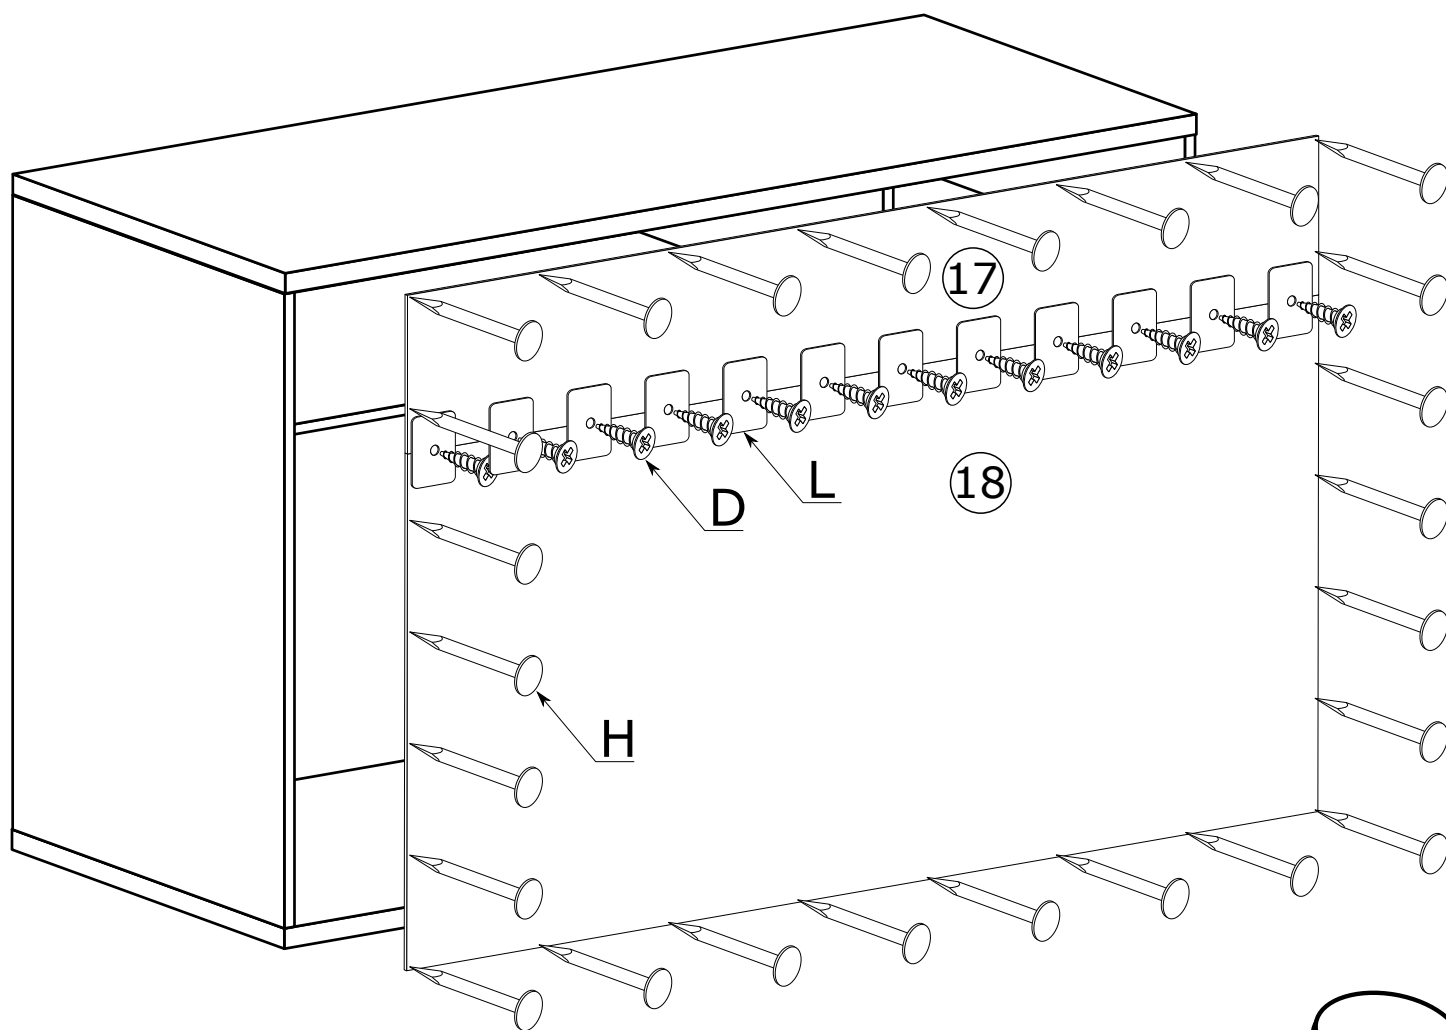





x60

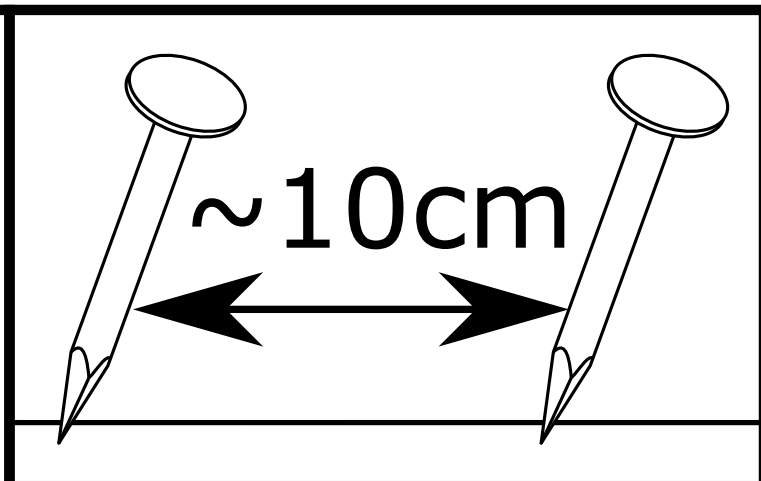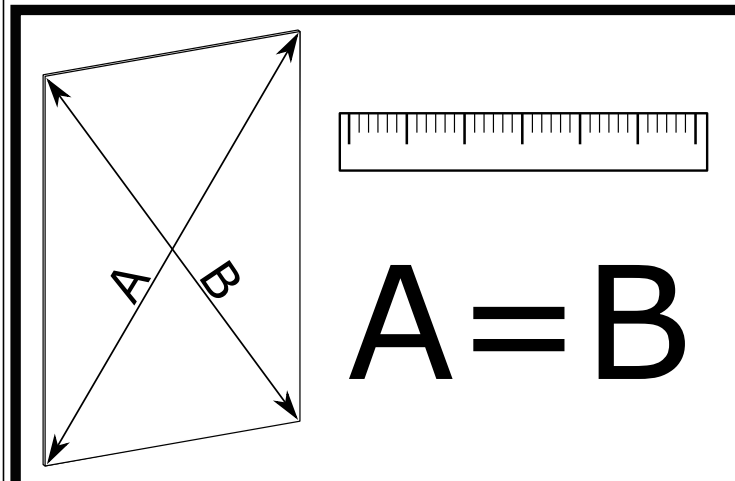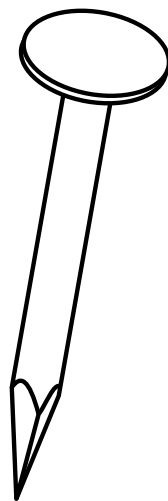


III

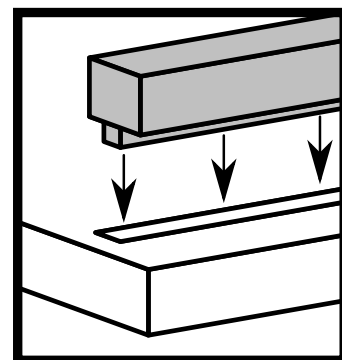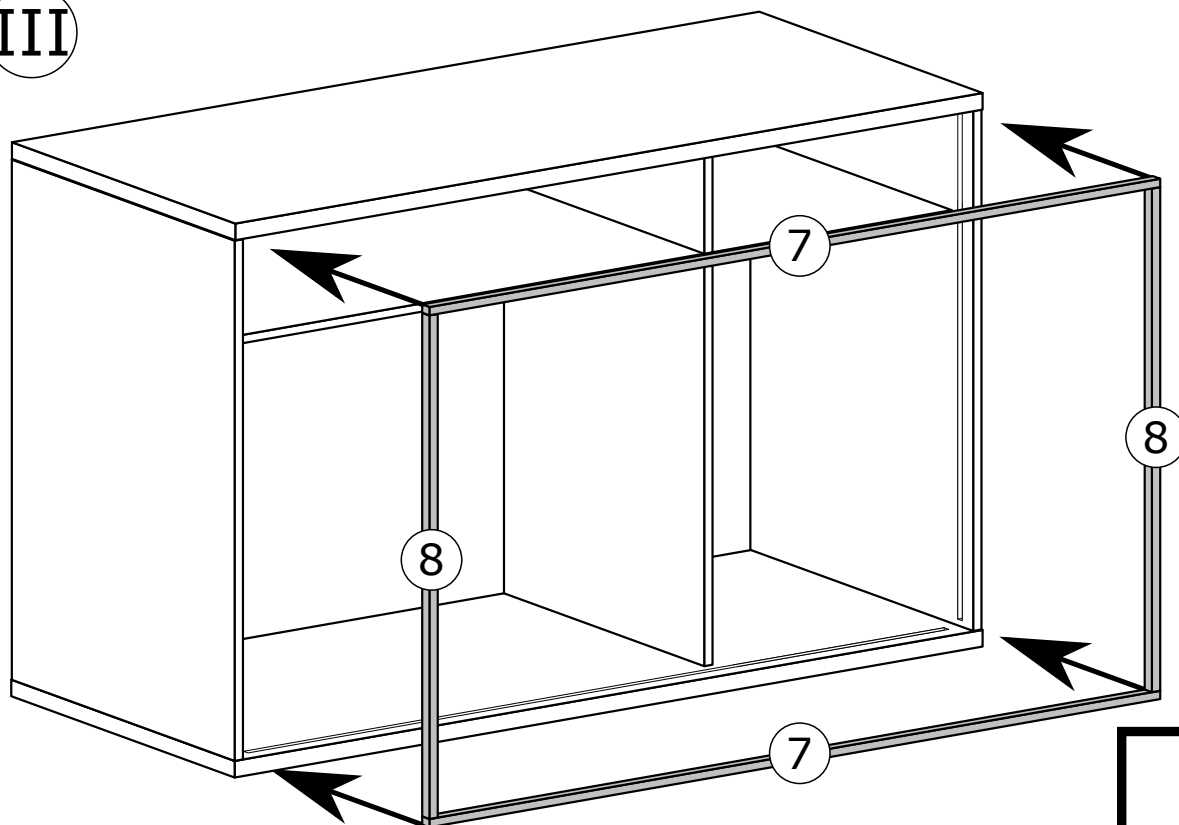


IV

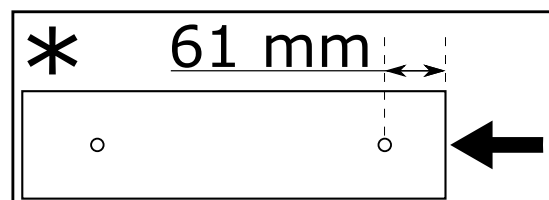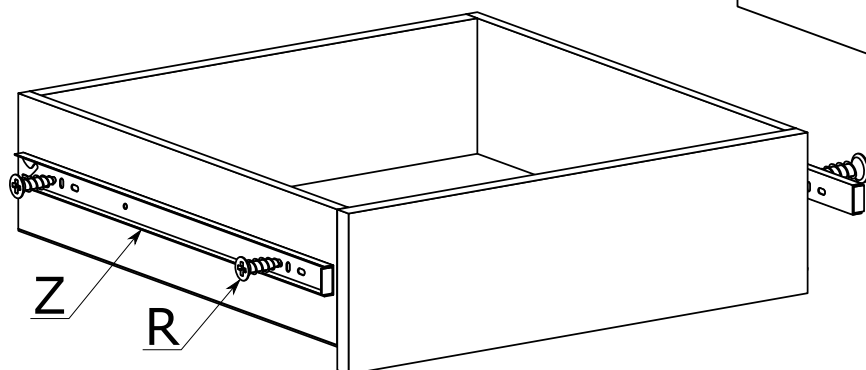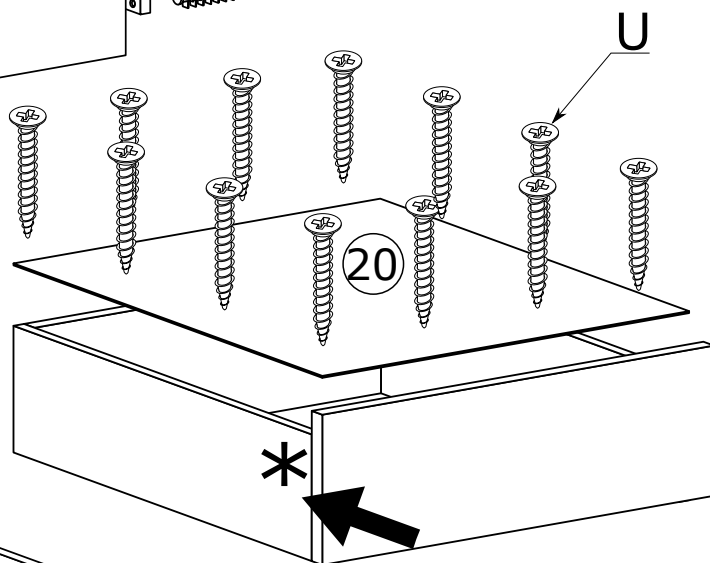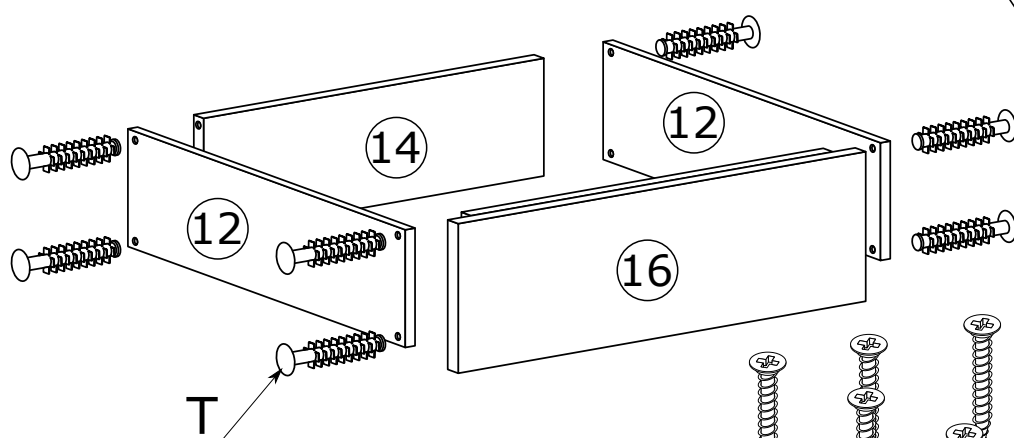



V

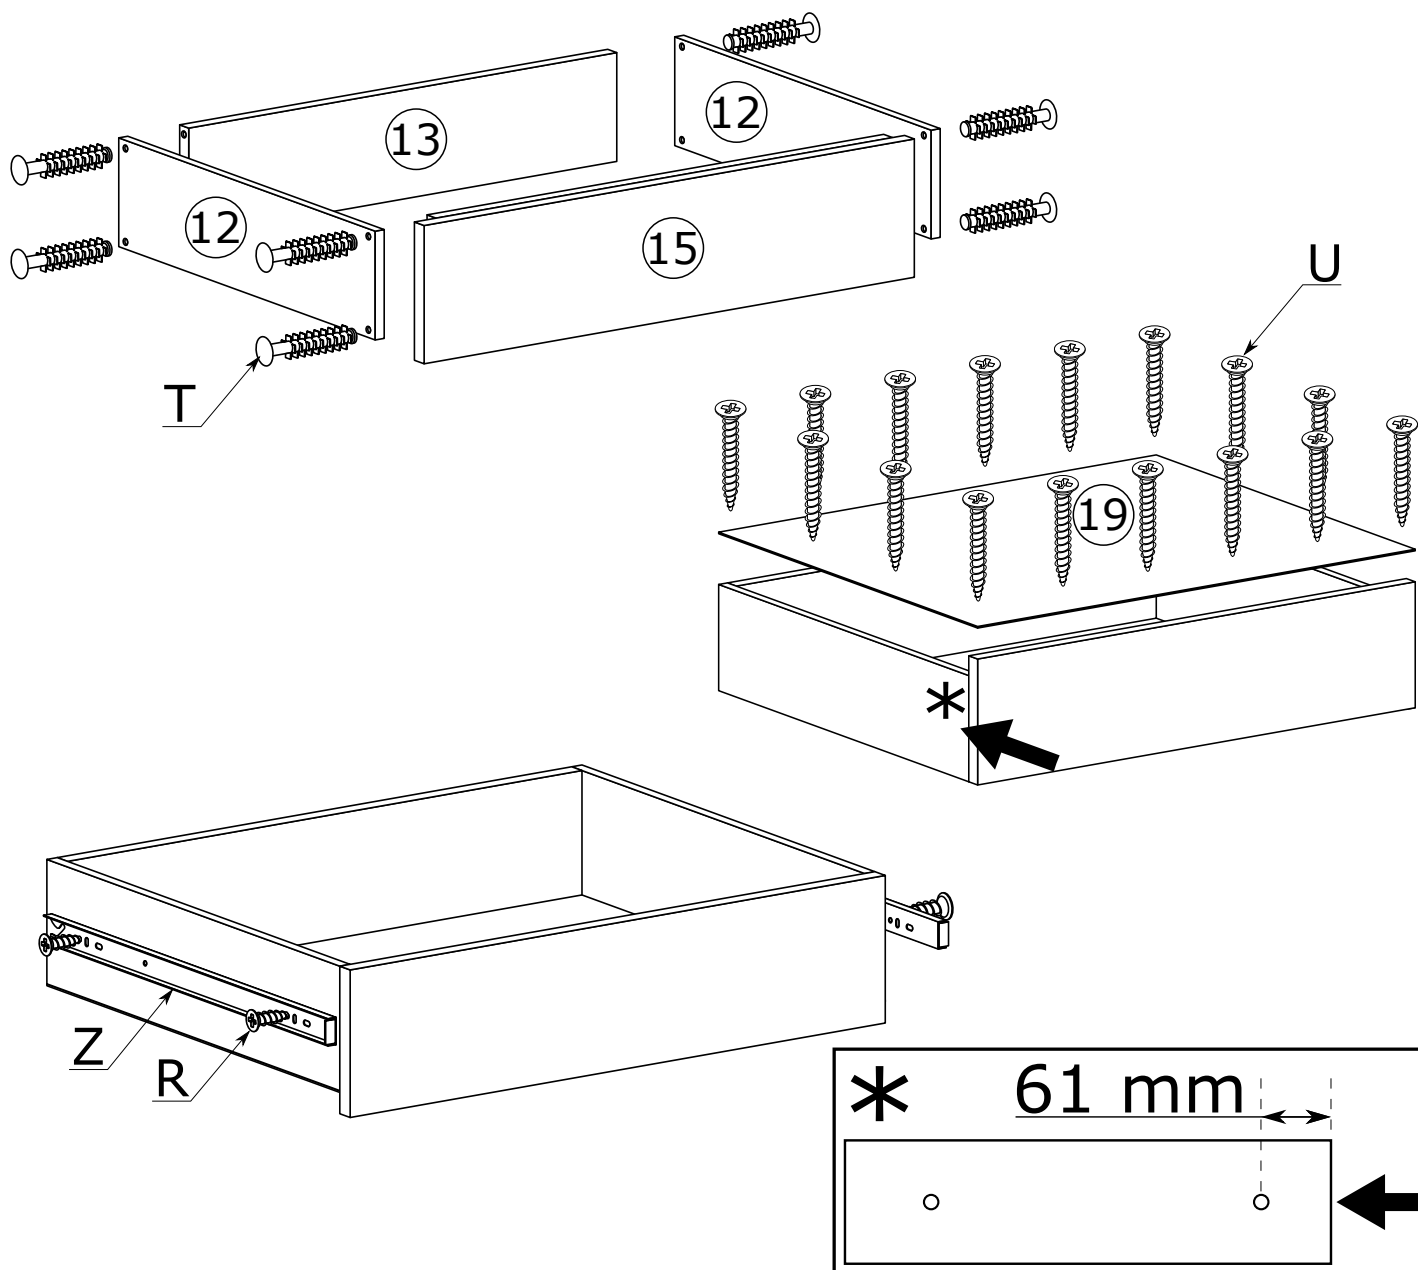


VI

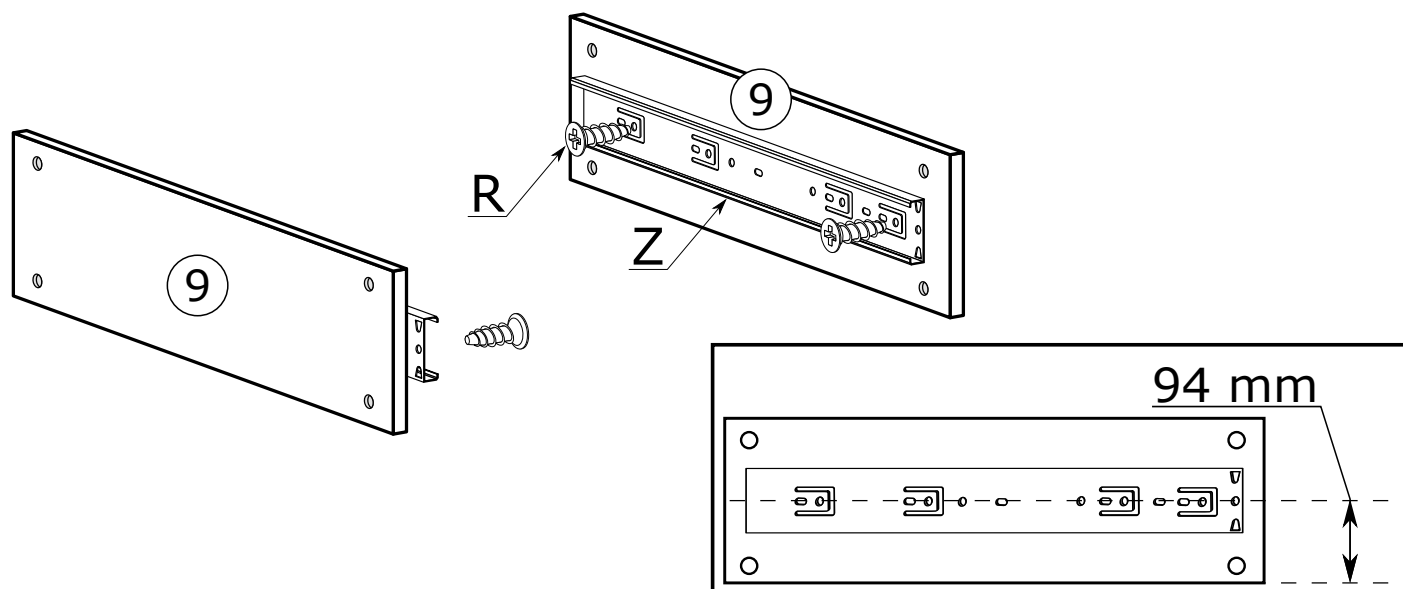


VII

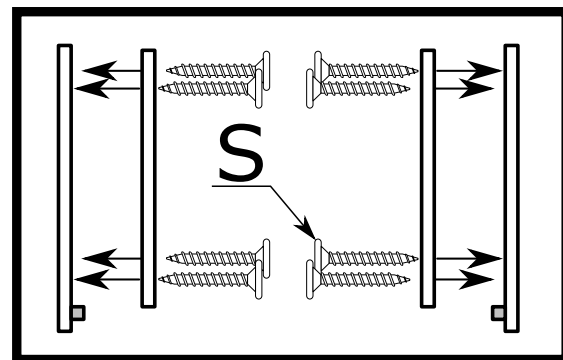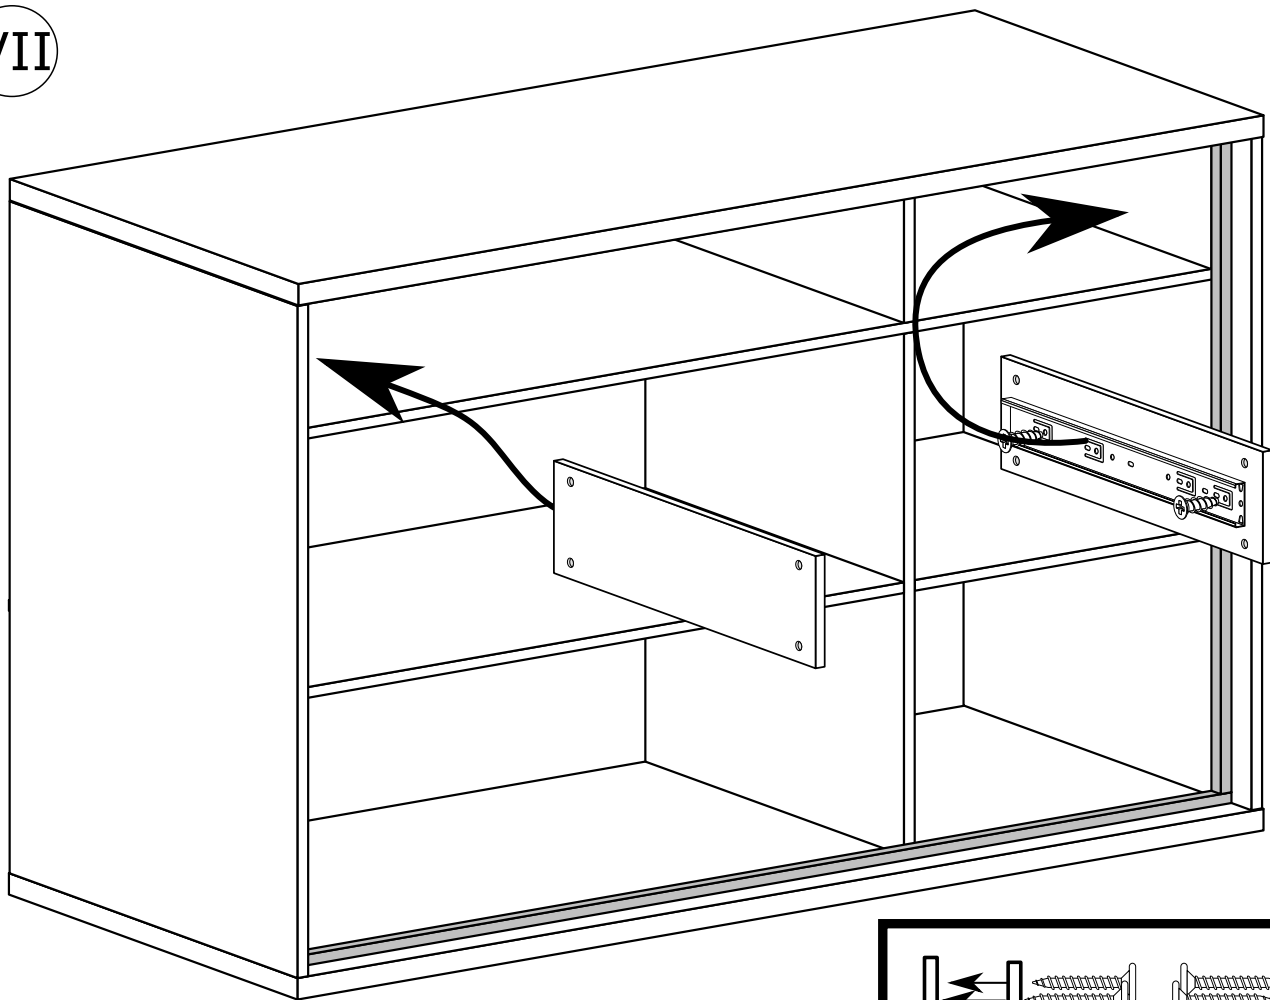


VIII

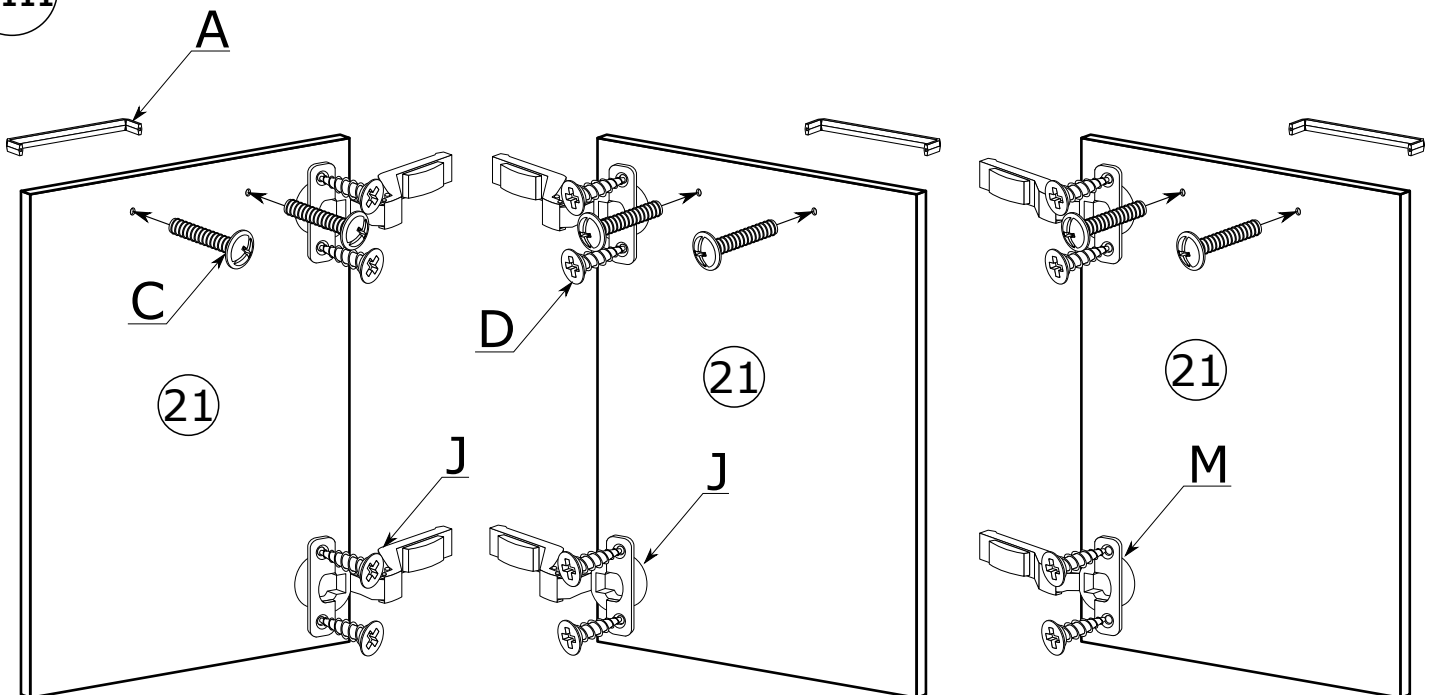


IX

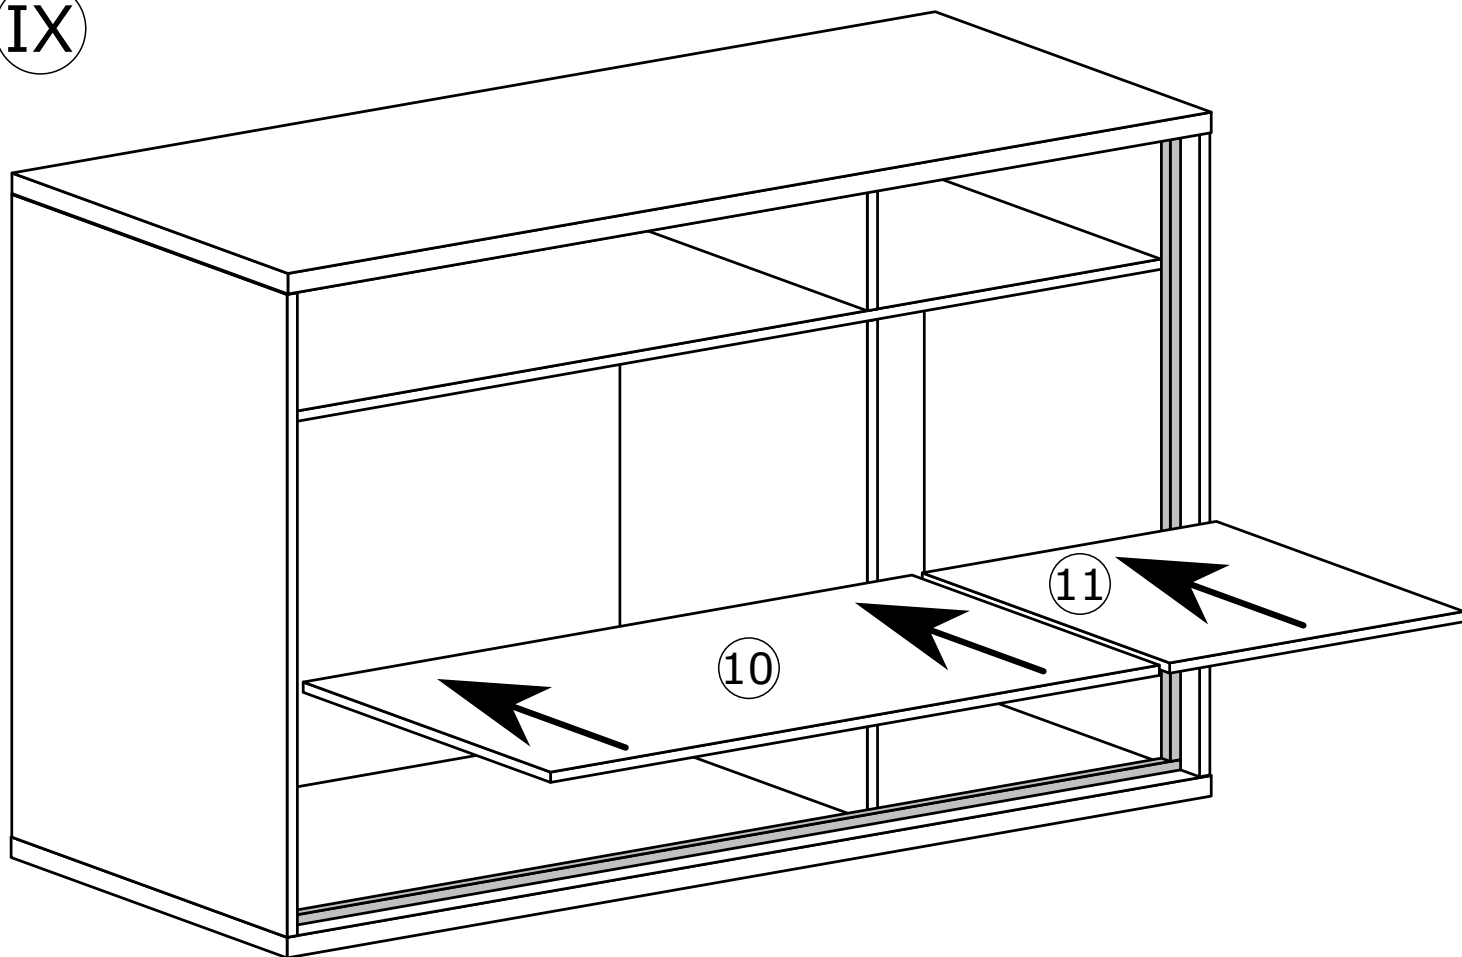

X

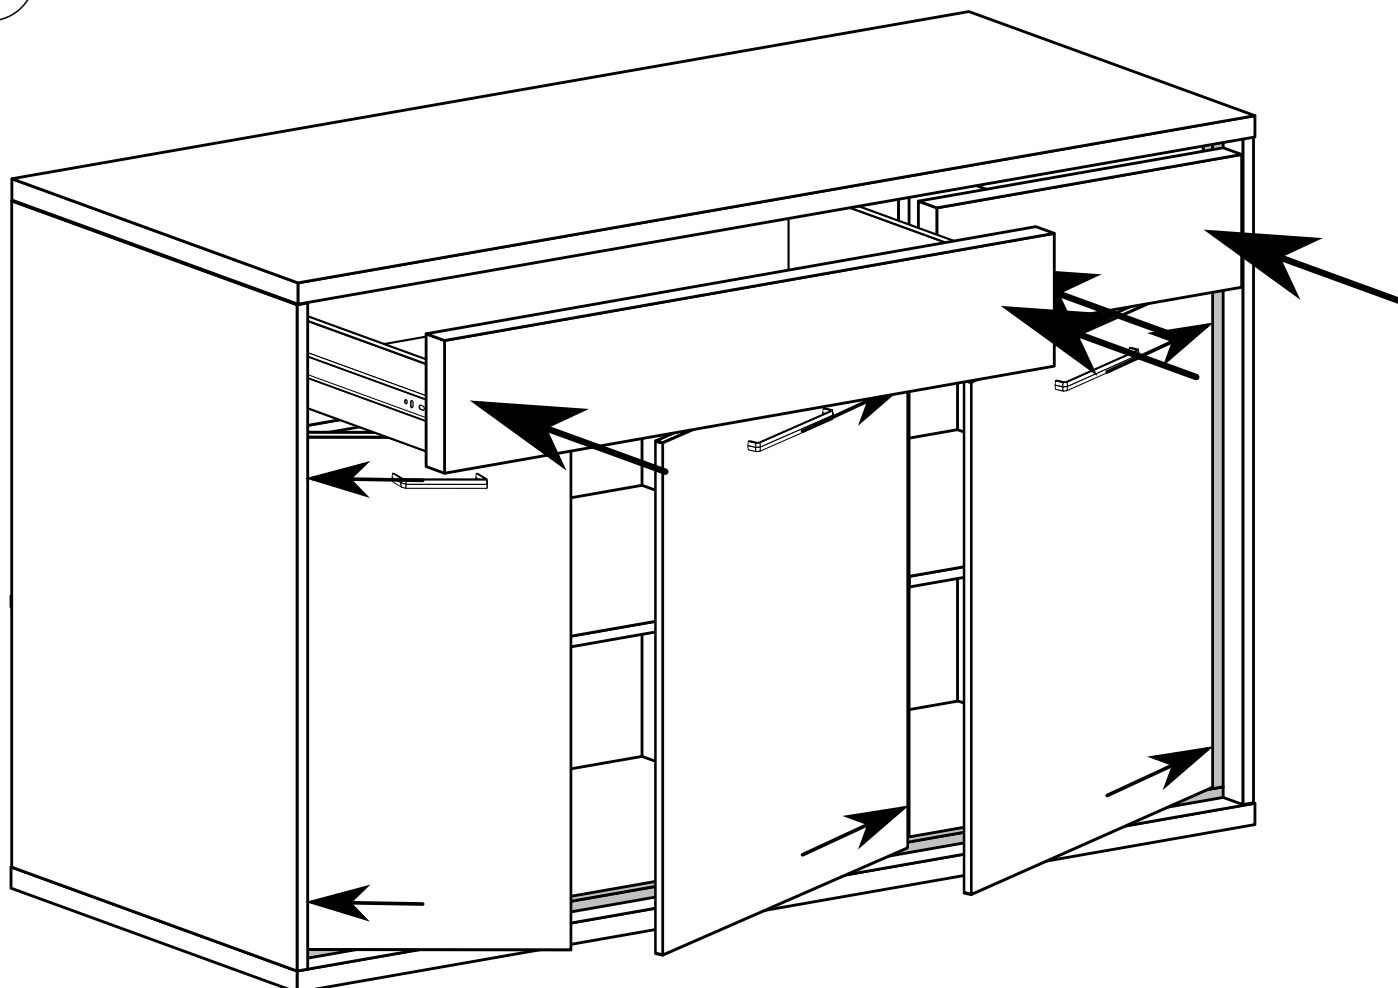

MONTAŻ/DEMONTAŻ PROWADNIC

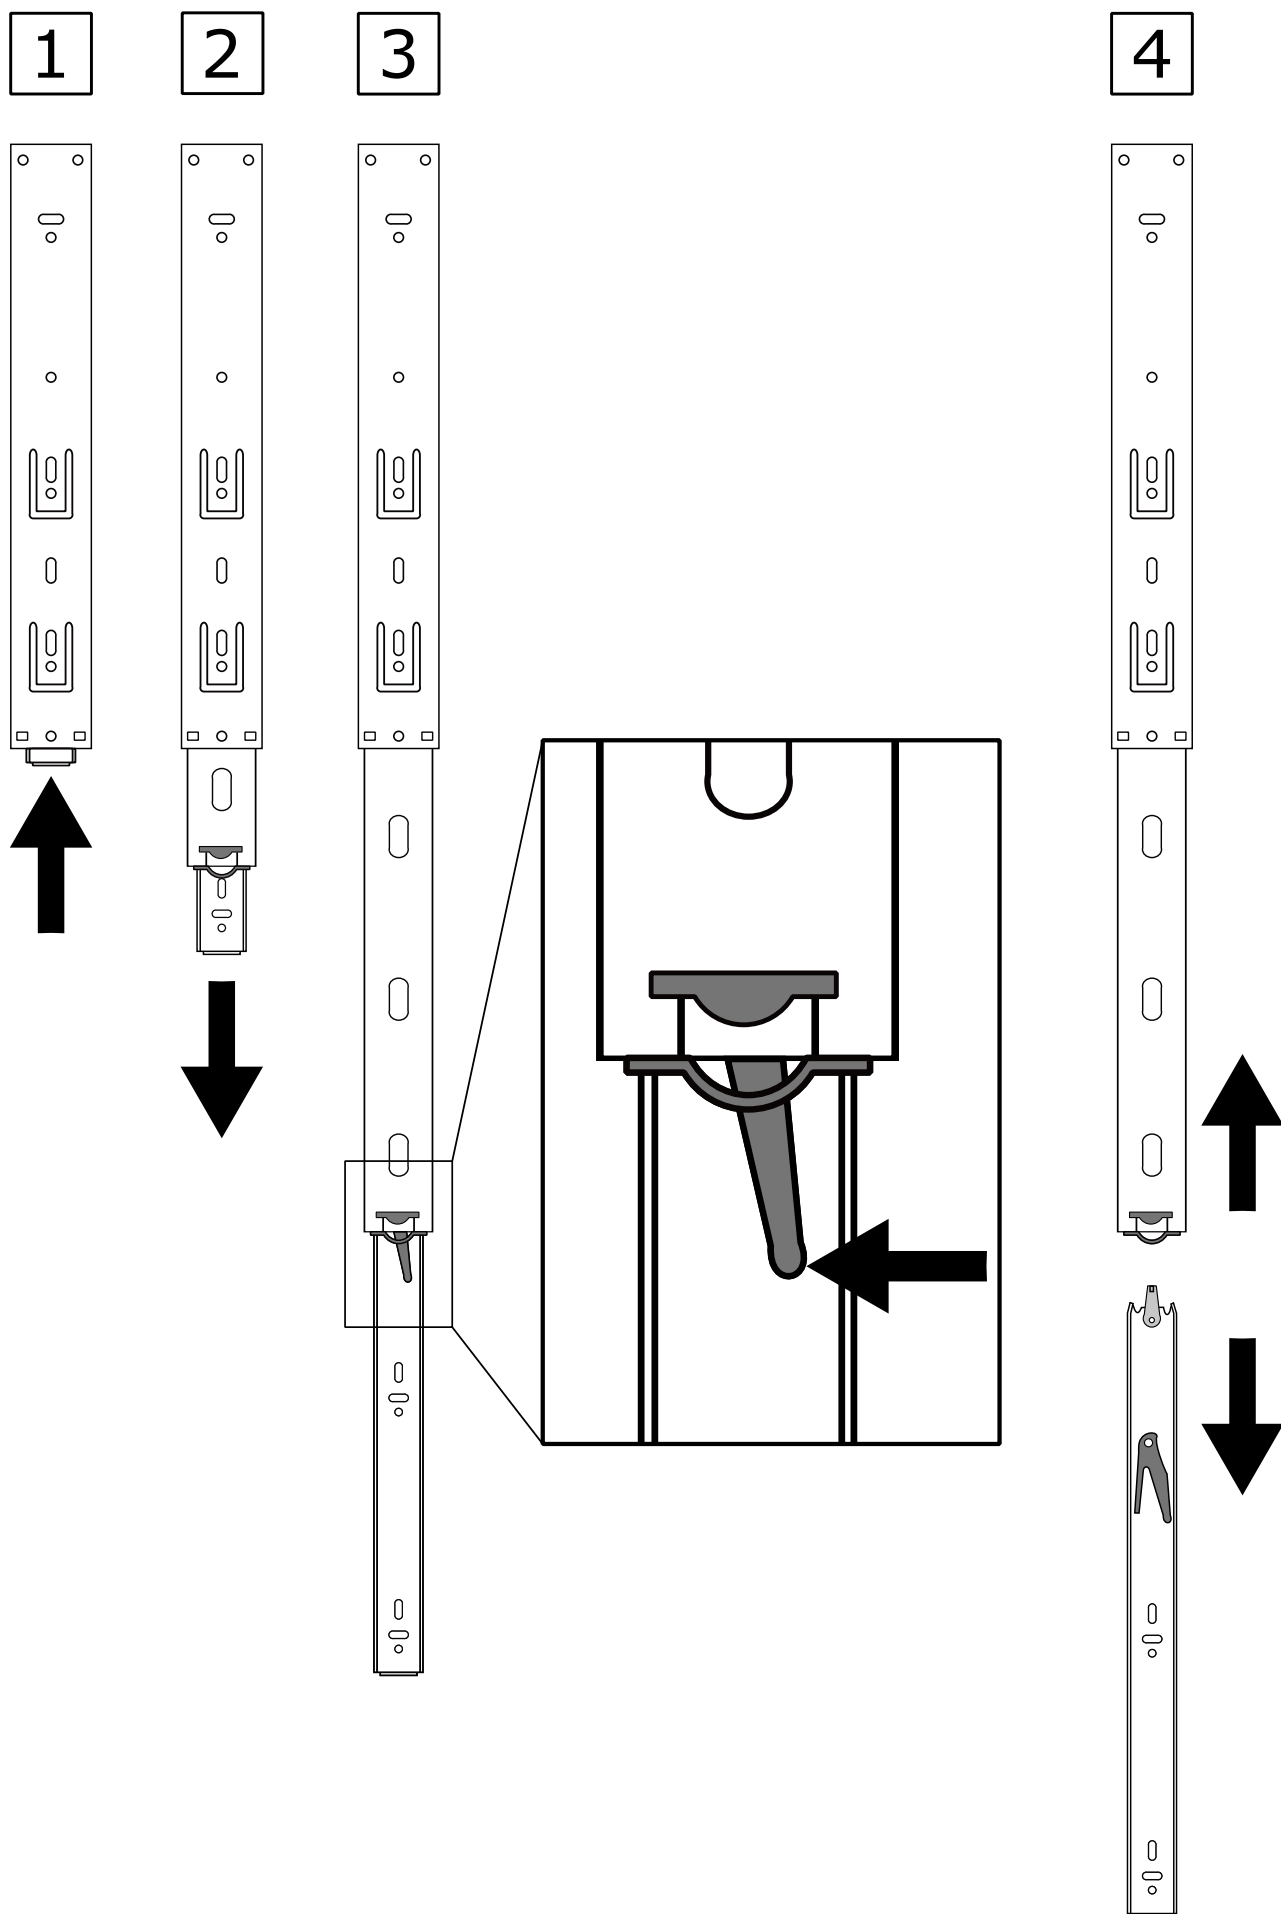

MONTAŻ KĄTOWNIKA

