

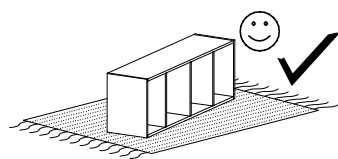
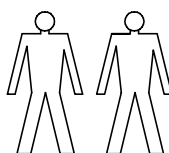


MEDIOLAN 14

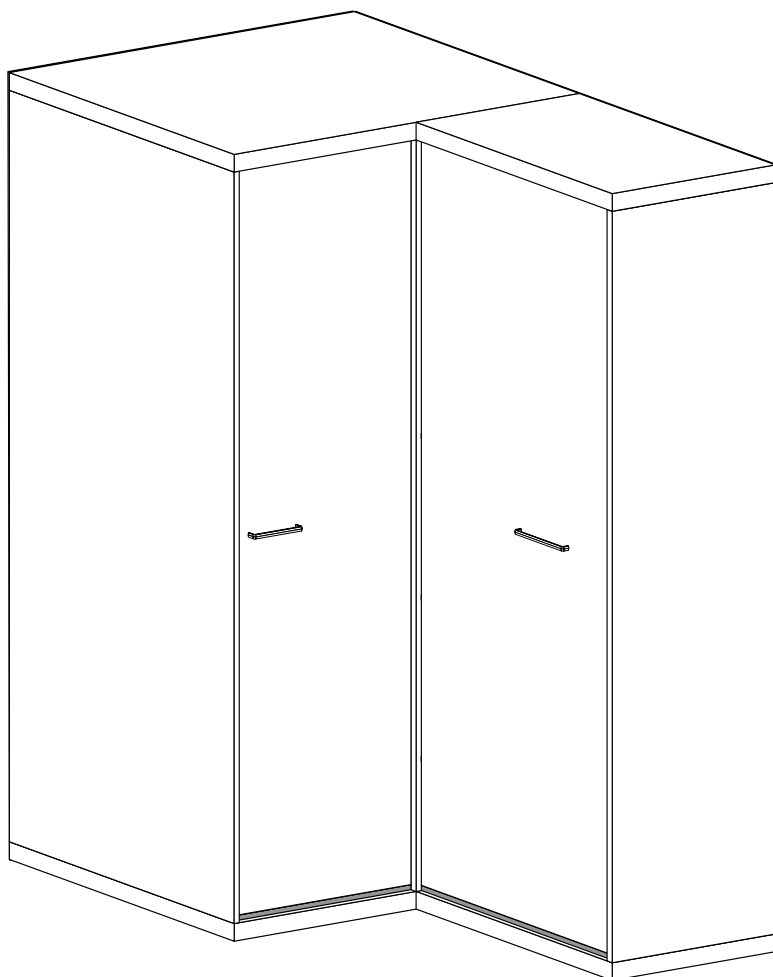

Narzędzia potrzebne do montażu

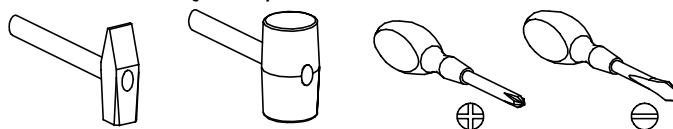

Nr	Nazwa elementu	D[mm]	S[mm]	G[mm]	Ilość
1	Bok	1897	580	16	1
2	Bok	1897	405	16	1
3	Blat G/D	847	580	32	2
4	Blat G/D	440	406	32	2
5	Przegroda	1897	385	16	1
6	Tył	1897	400	16	1
7	Listwa	813	120	16	1
8	Listwa Czarna	1897	20	16	2
9	Listwa Czarna	427	20	16	2
10	Listwa Czarna	432	20	16	2
11	Półka	813	405	16	1
12	Półka	444	368	16	4
13	Kapak	1940	840	2,5	1
14	Kapak	1940	700	2,5	1
15	Drzwi	1857	422	16	2

UWAGA !!!





MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI

UWAGA !!!


Mebel zawiera
elementy drewniane

W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.


		Y2 - 1 St.		Y2 - 2 St. 3,5x16 mm
A - 2 St.	B - 20 St.	C - 4 St. 4x22 mm	D - 60 St. 3,5x16 mm	o - 1 St.
E - 20 St.	F - 22 St.	G - 34 St.	H - 6 St.	I - 80 St.
J - 8 St.	L - 8 St.	M2 - 4 St.	N2 - 4 St.	O - 2 St.
X1 - 34 St.	R - 2 St.	S - 1 St.	T - 6 St.	U - 1 St.

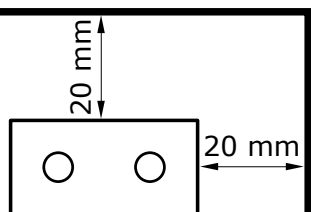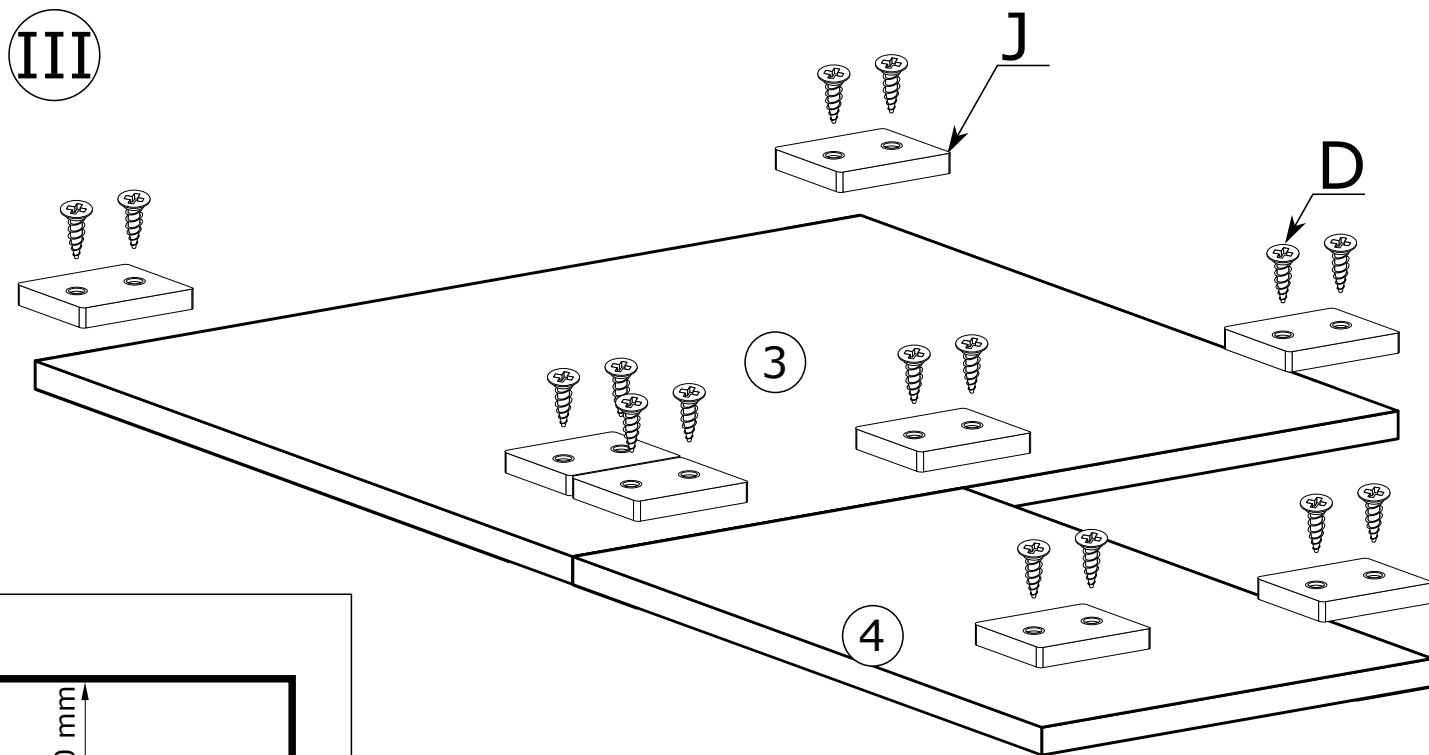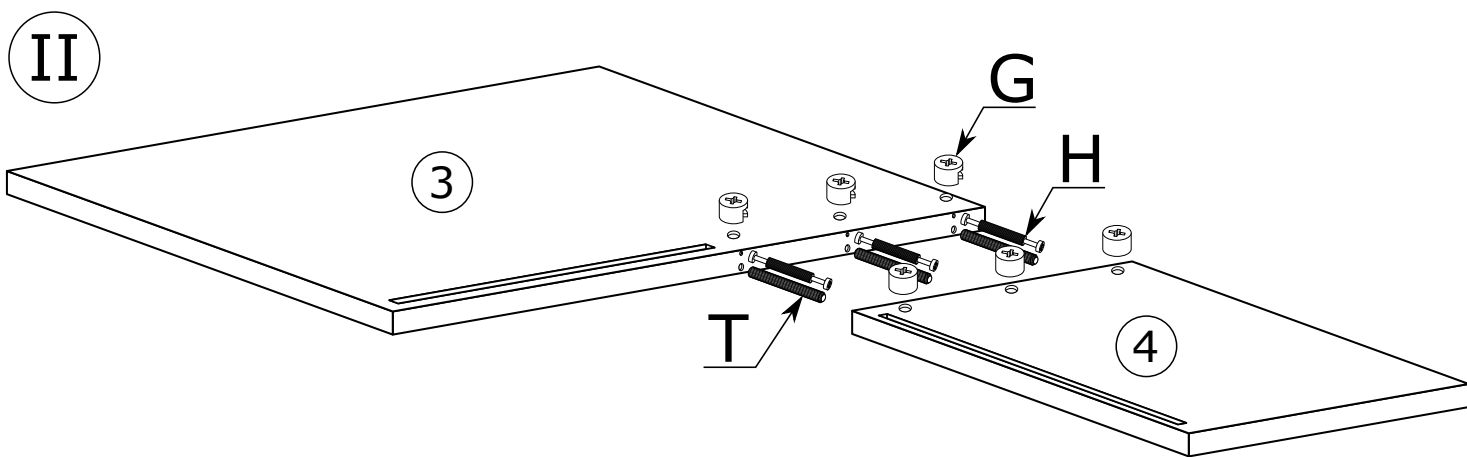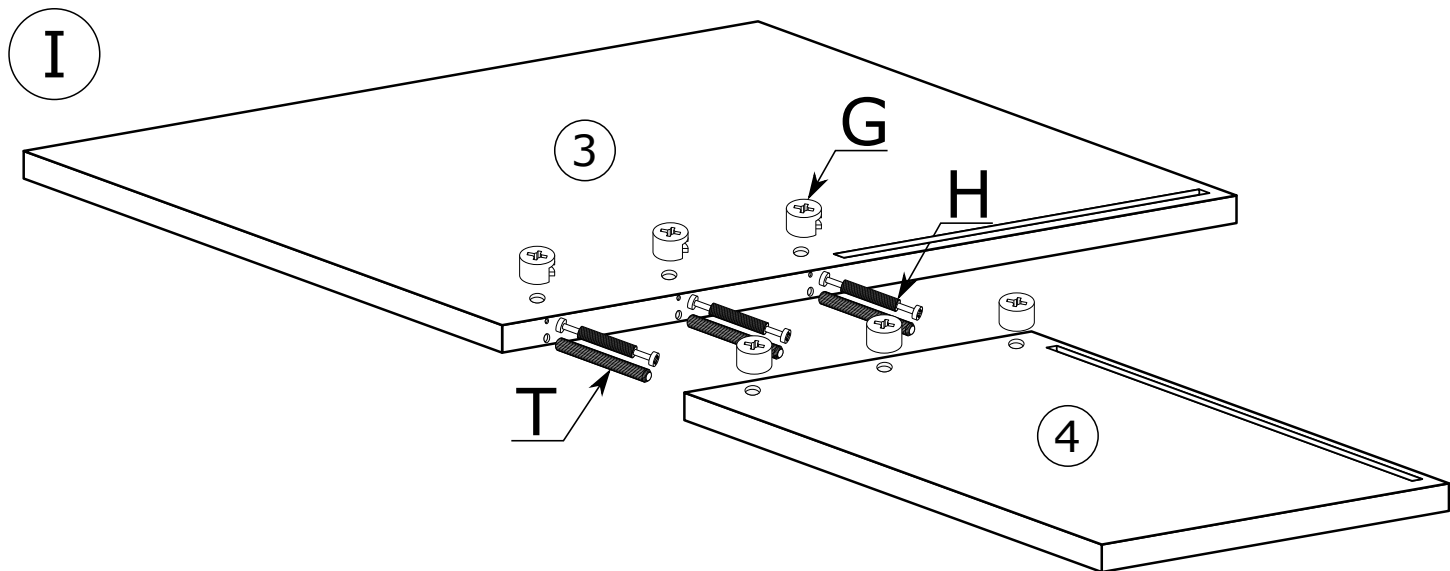


IV

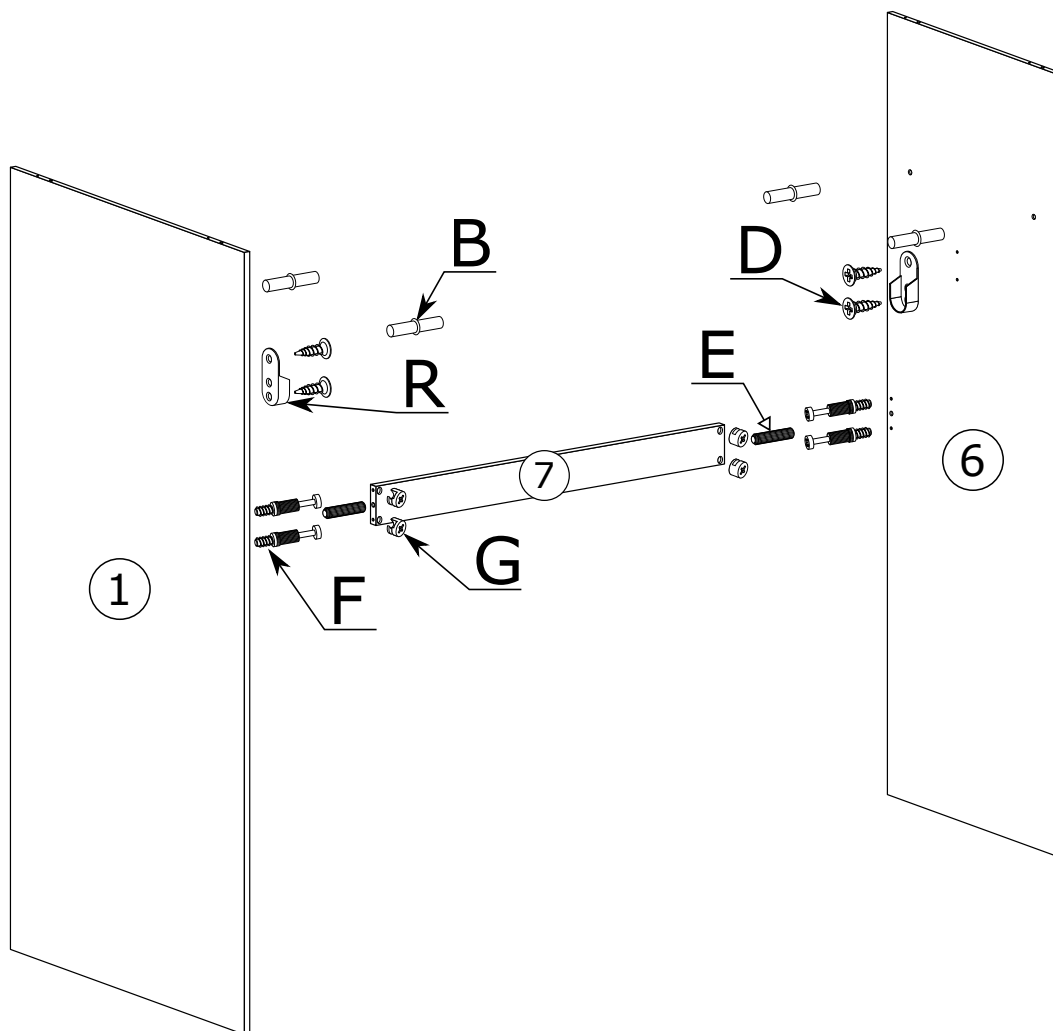



V

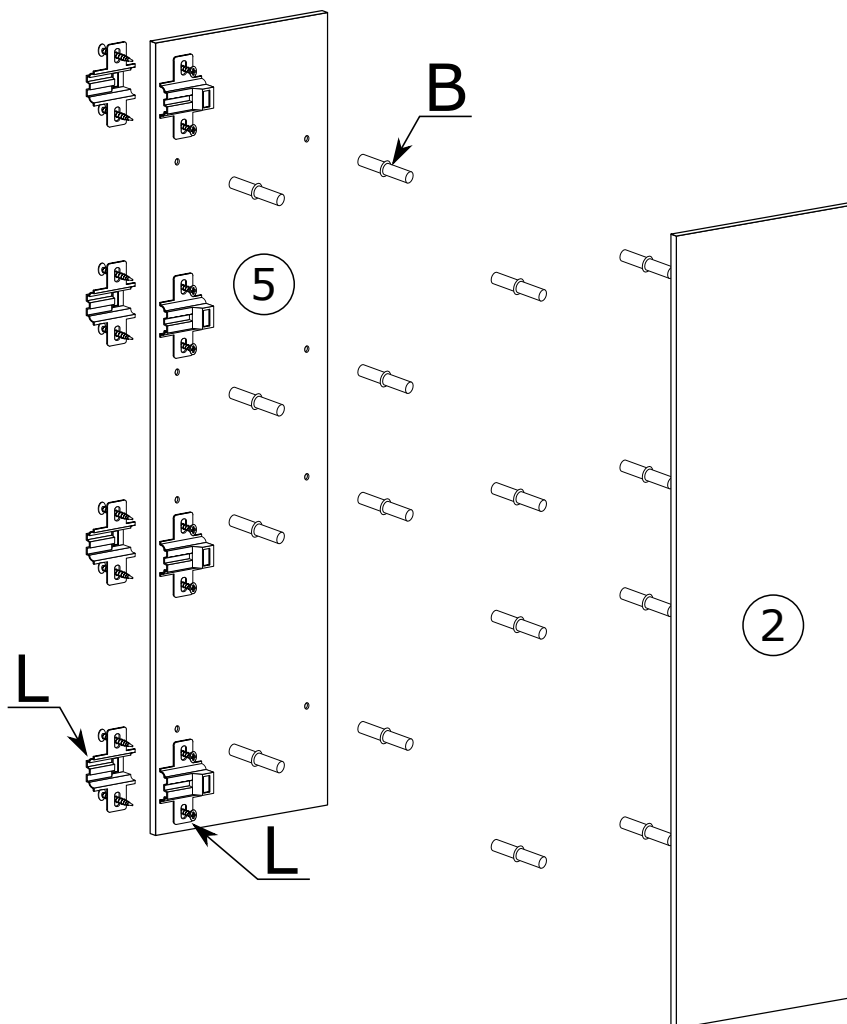


VI

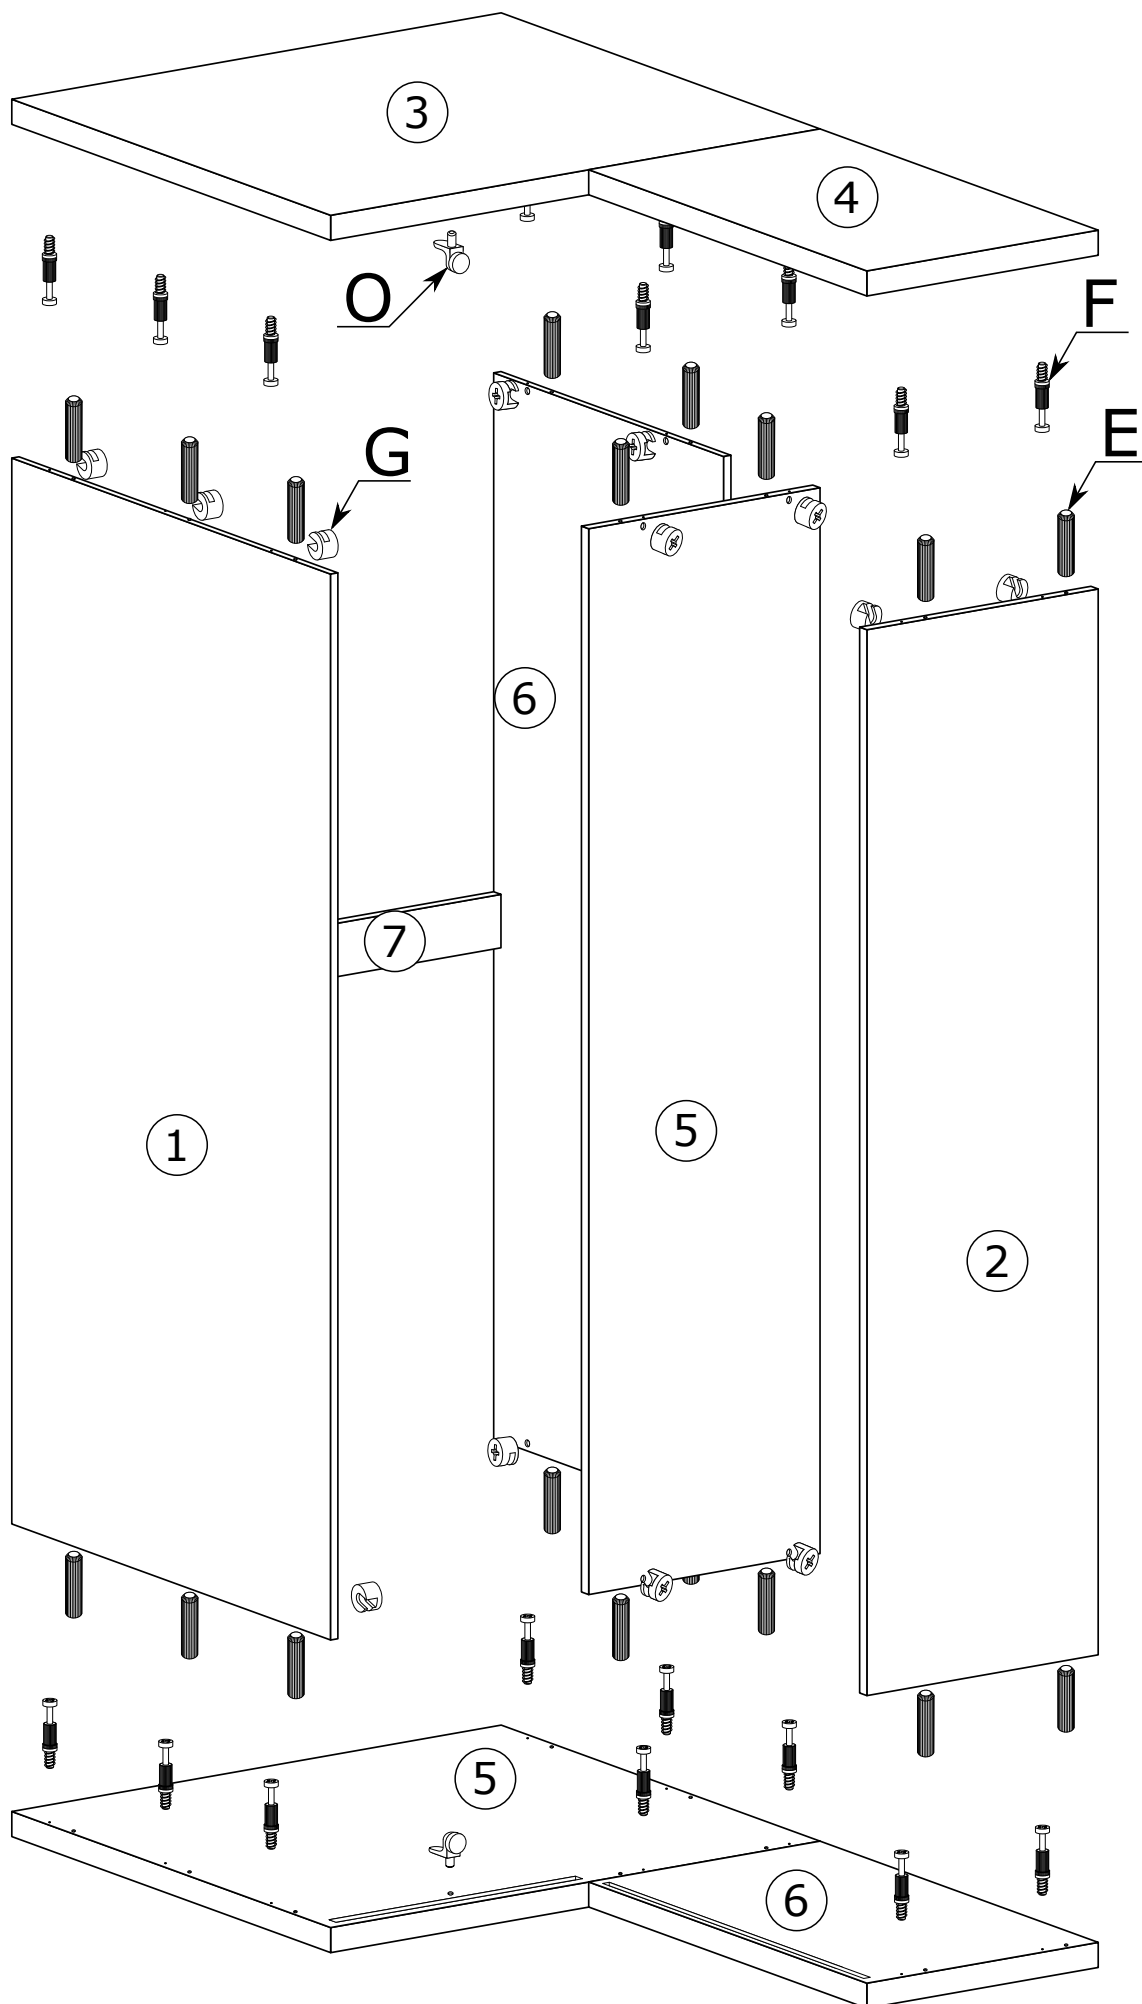


VII

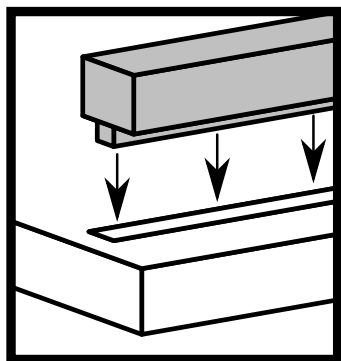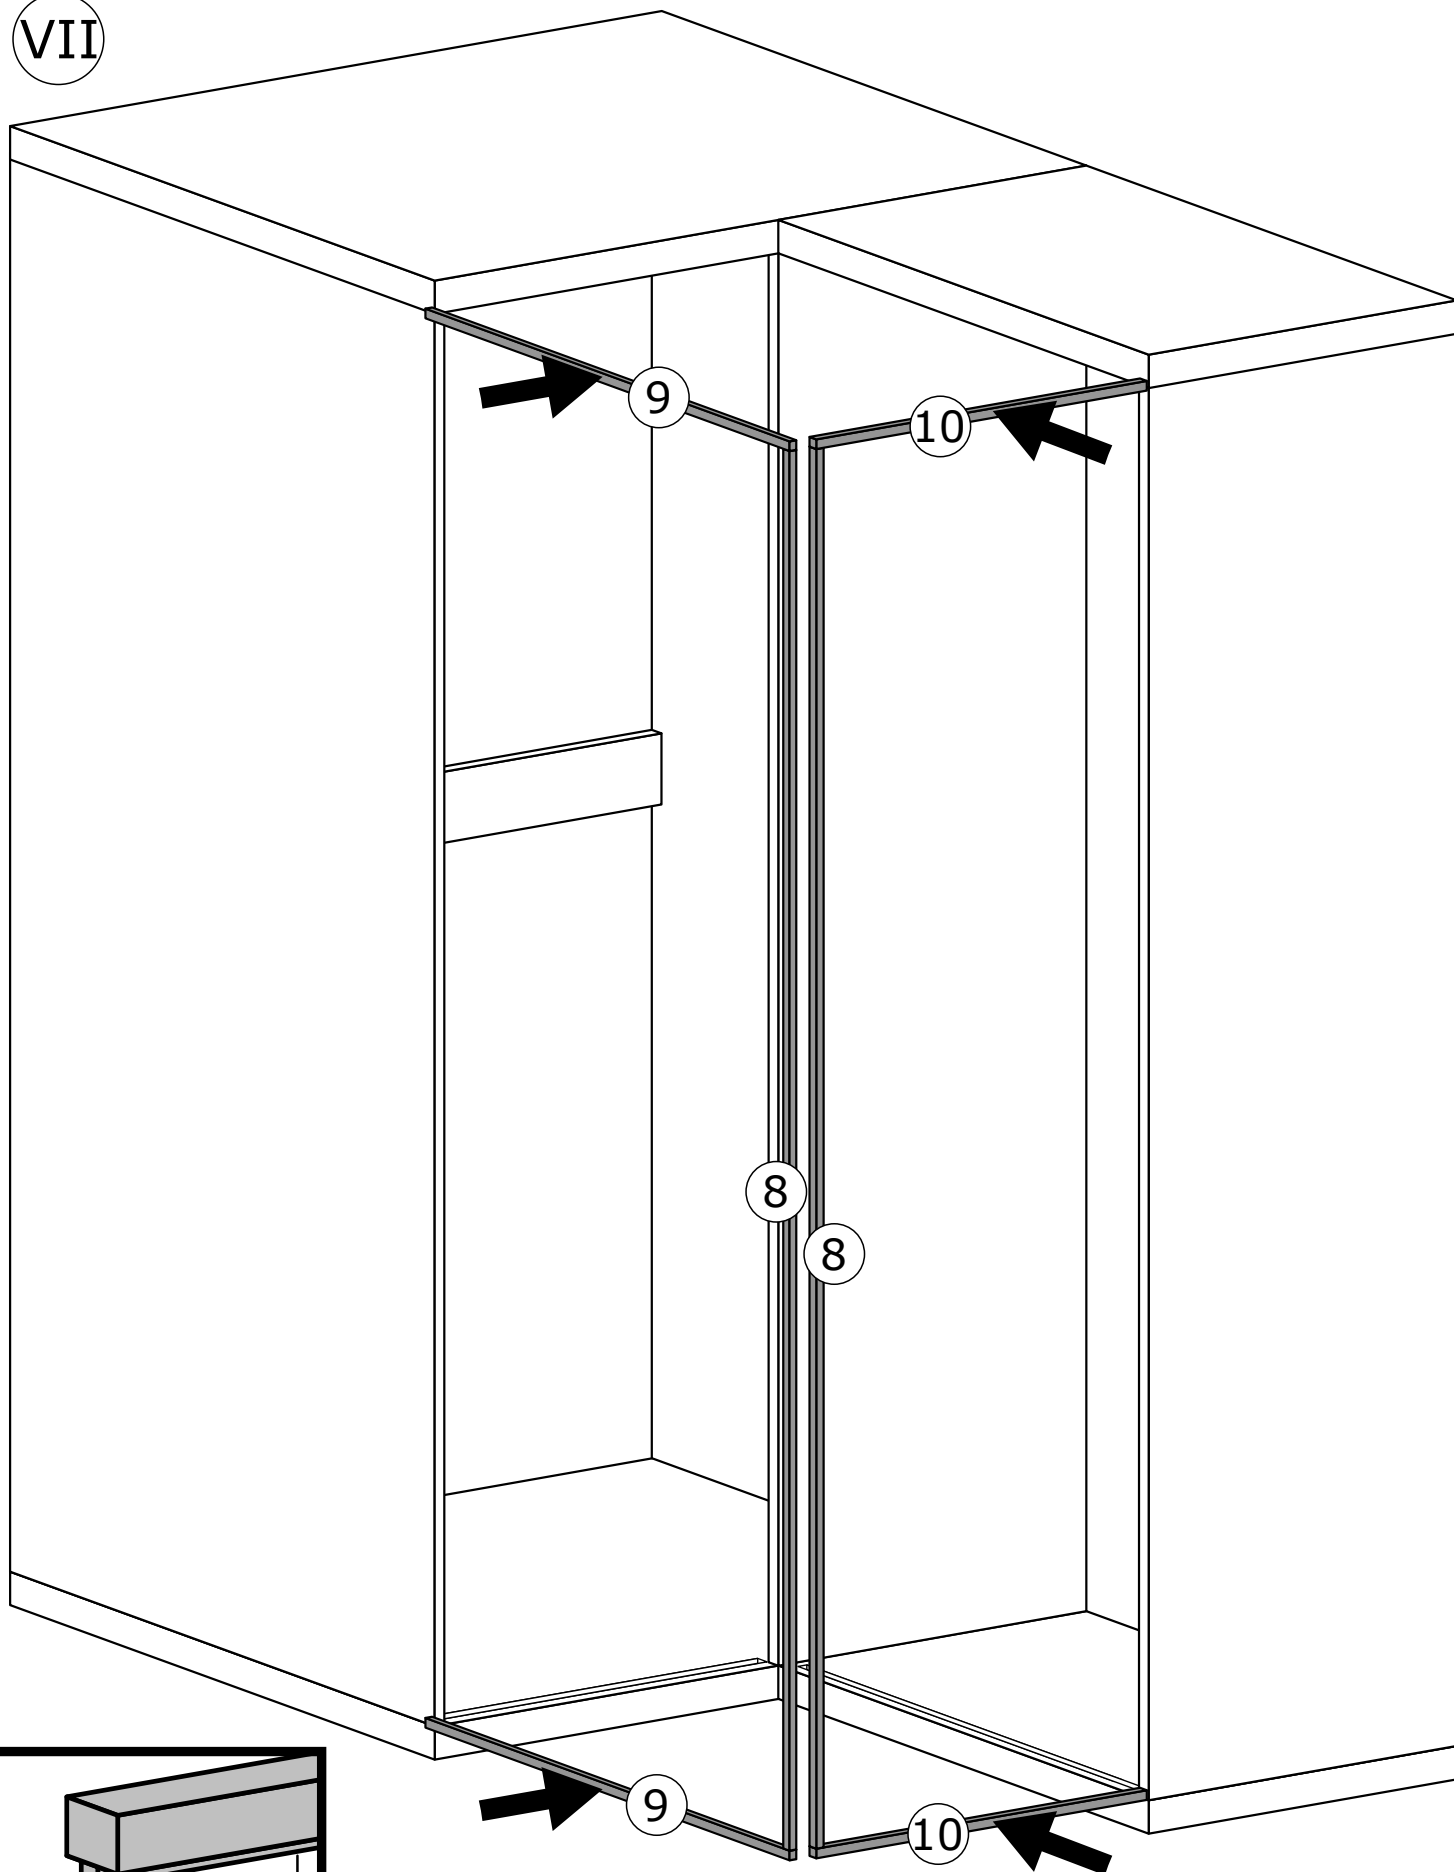


VIII

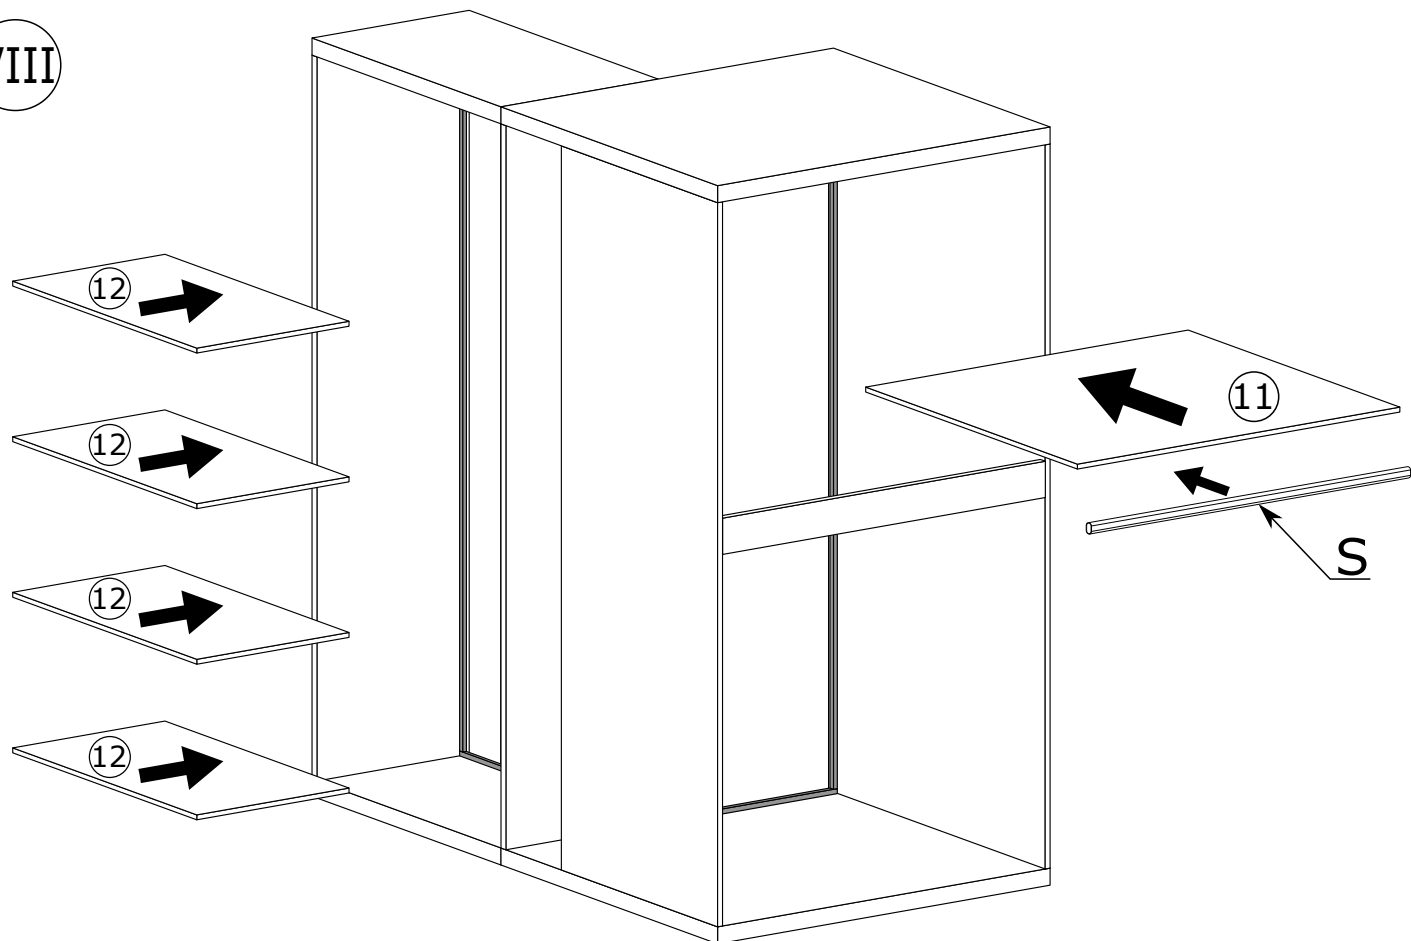


IX

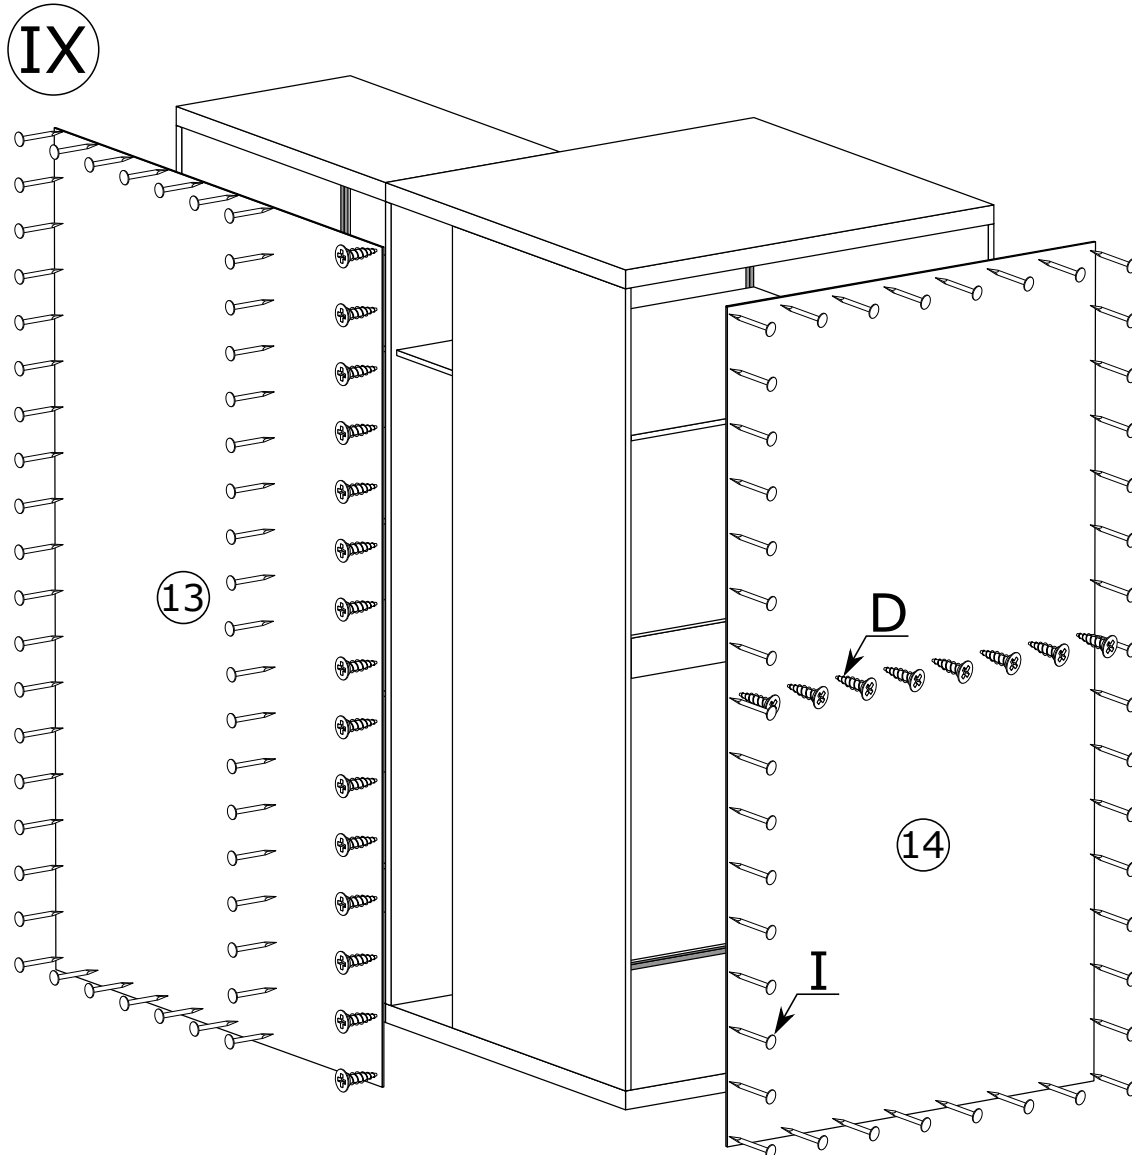


x80

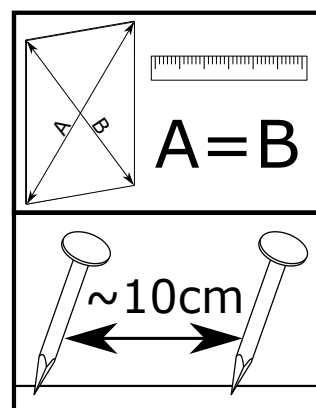

X

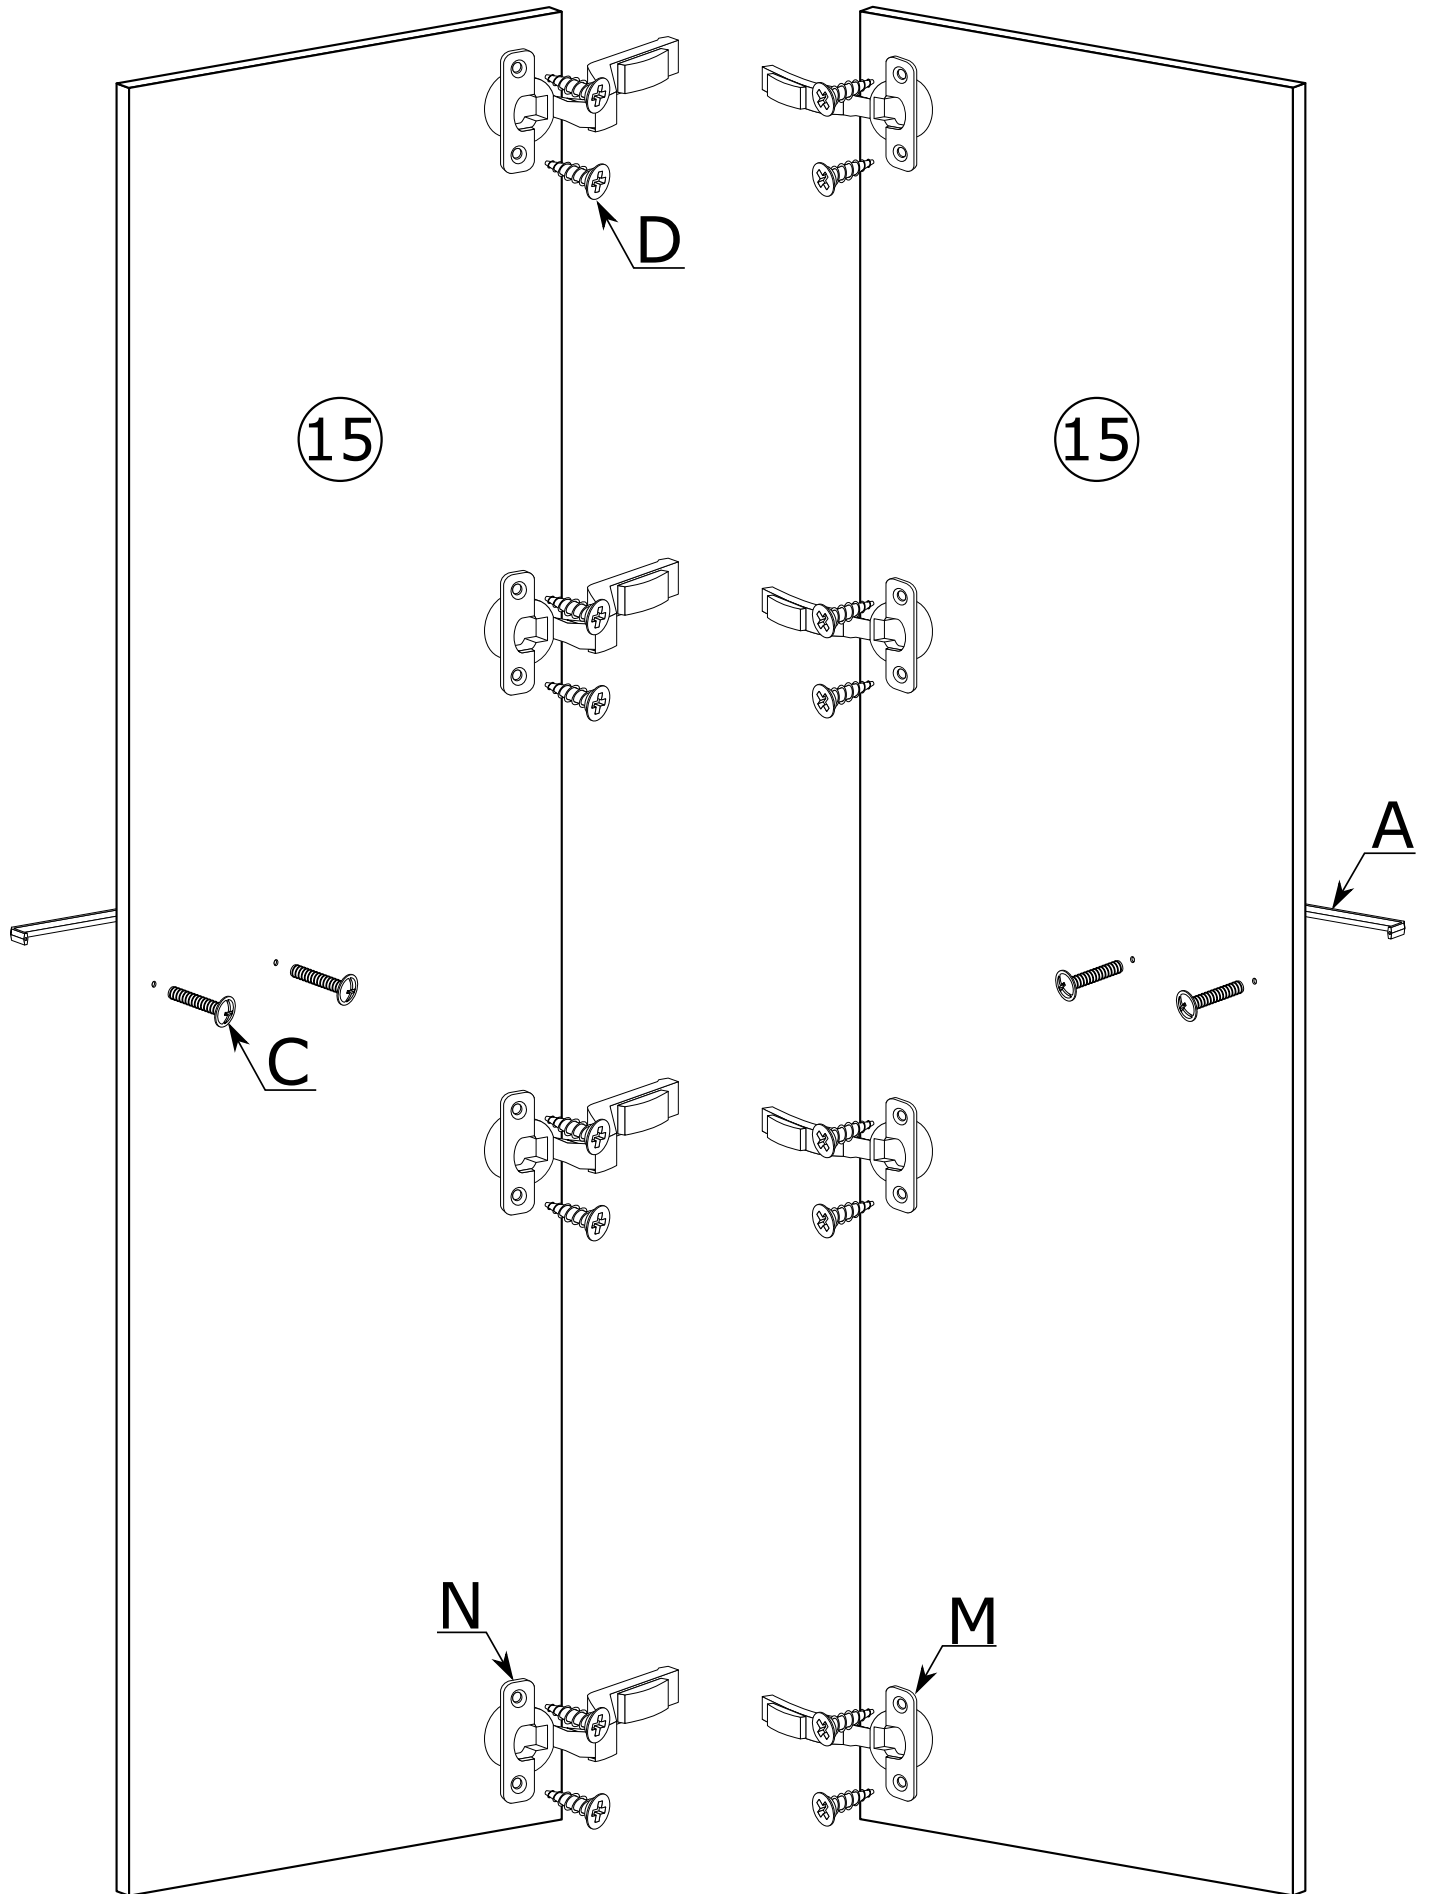

XI

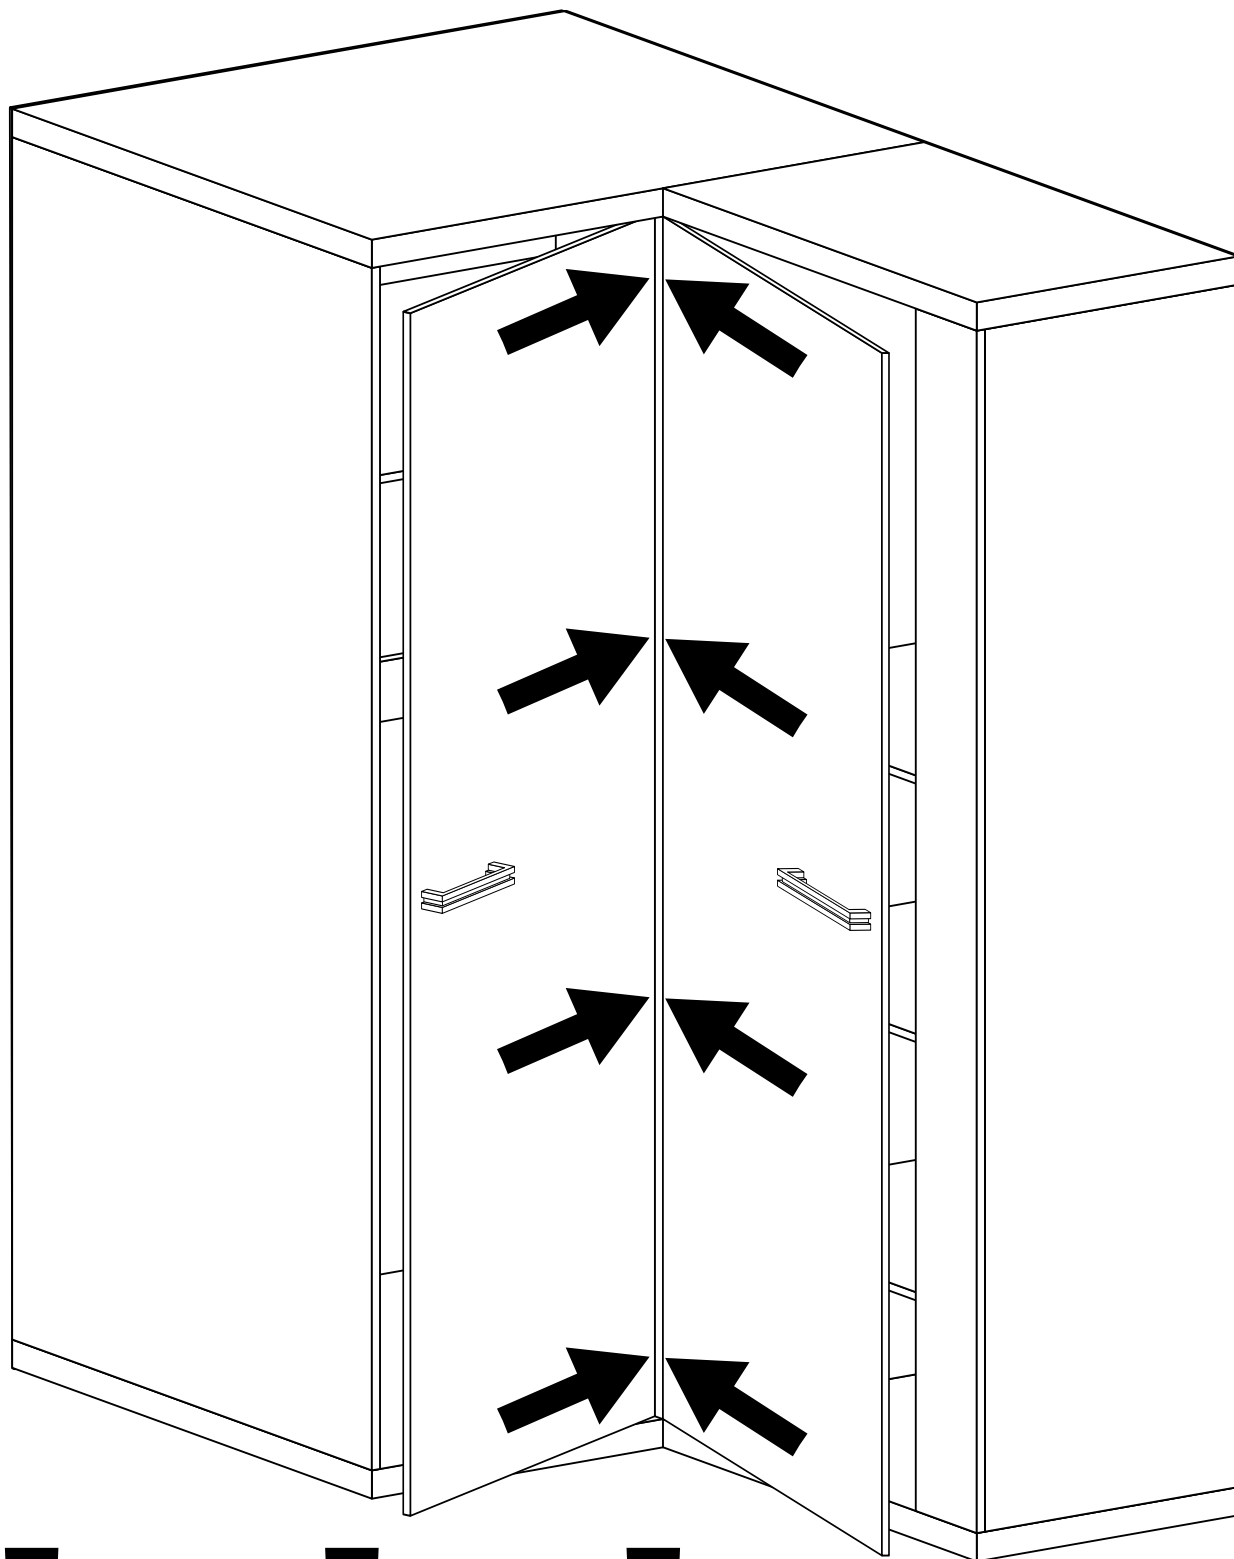

MONTAŻ KĄTOWNIKA

