

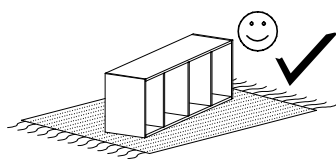


MEDIOLAN 8

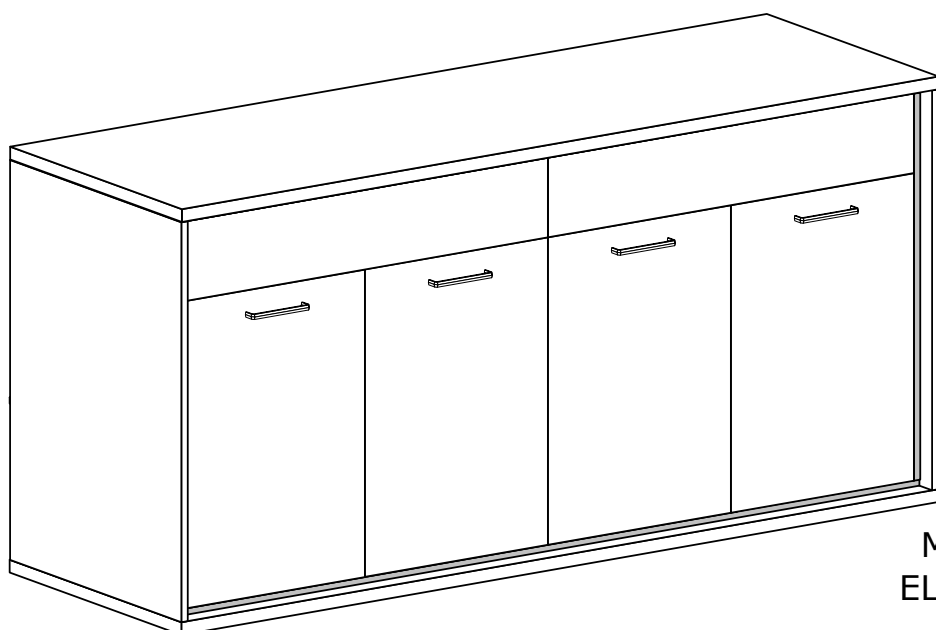

Narzędzia potrzebne do montażu

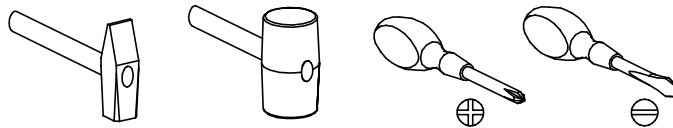

Nr	Nazwa elementu	D[mm]	S[mm]	G[mm]	Ilość
1	Bok P/L	935	405	16	2
2	Błat Górny	1770	406	32	1
3	Błat Dolny	1770	406	32	1
4	Przegroda Śr	363	214	16	1
5	Przegroda	705	368	16	1
6	Wieniec	1738	368	16	1
7	Listwa Czarna	1705	20	16	2
8	Listwa Czarna	933	20	16	2
9	Przybitka	368	160	16	2
10	Półka	862	368	16	2
11	Bok Szuflady	350	165	16	4
12	Tył Szuflady	787	165	16	2
13	Przód Szuflady	848	190	32	2
14	Kapak	1762	726	2,5	1
15	Kapak	1762	248	2,5	1
16	Kapak Szuflady	815	345	2,5	2
17	Drzwi Lewe	700	422	16	2
18	Drzwi Prawe	700	422	16	2


UWAGA !!!

MONTOWANIE USZKODZONYCH
ELEMENTÓW POWODUJE UTRATĘ
GWARANCJI


W przypadku reklamacji proszę podać numer pakowacza znajdujący się na kartonie.




A - 4 St.

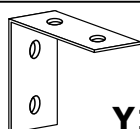


Y1 - 1 St.




Y2 - 2 St.
3,5x16 mm




B - 8 St.




C - 8 St.
4x22 mm




D - 43 St.
3,5x16 mm




E1 - 16 St.



E2 - 2 St.




F - 14 St.




G - 14 St.




H - 75 St.

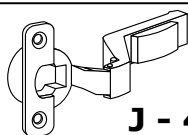

J - 4 St.




K - 8 St.




L - 15 St.




O - 1 St.




I - 6 St.

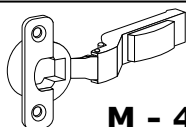


M - 4 St.



N - 8 St.

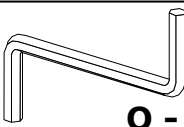


O - 1 St.




P - 8 St.
6,3x30 mm



X1 - 14 St.



R - 16 St.
5x13 mm




S - 10 St.
3,9x30 mm



T - 16 St.




U - 60 St.
3x30 mm




Z - 2 Kpl.




I

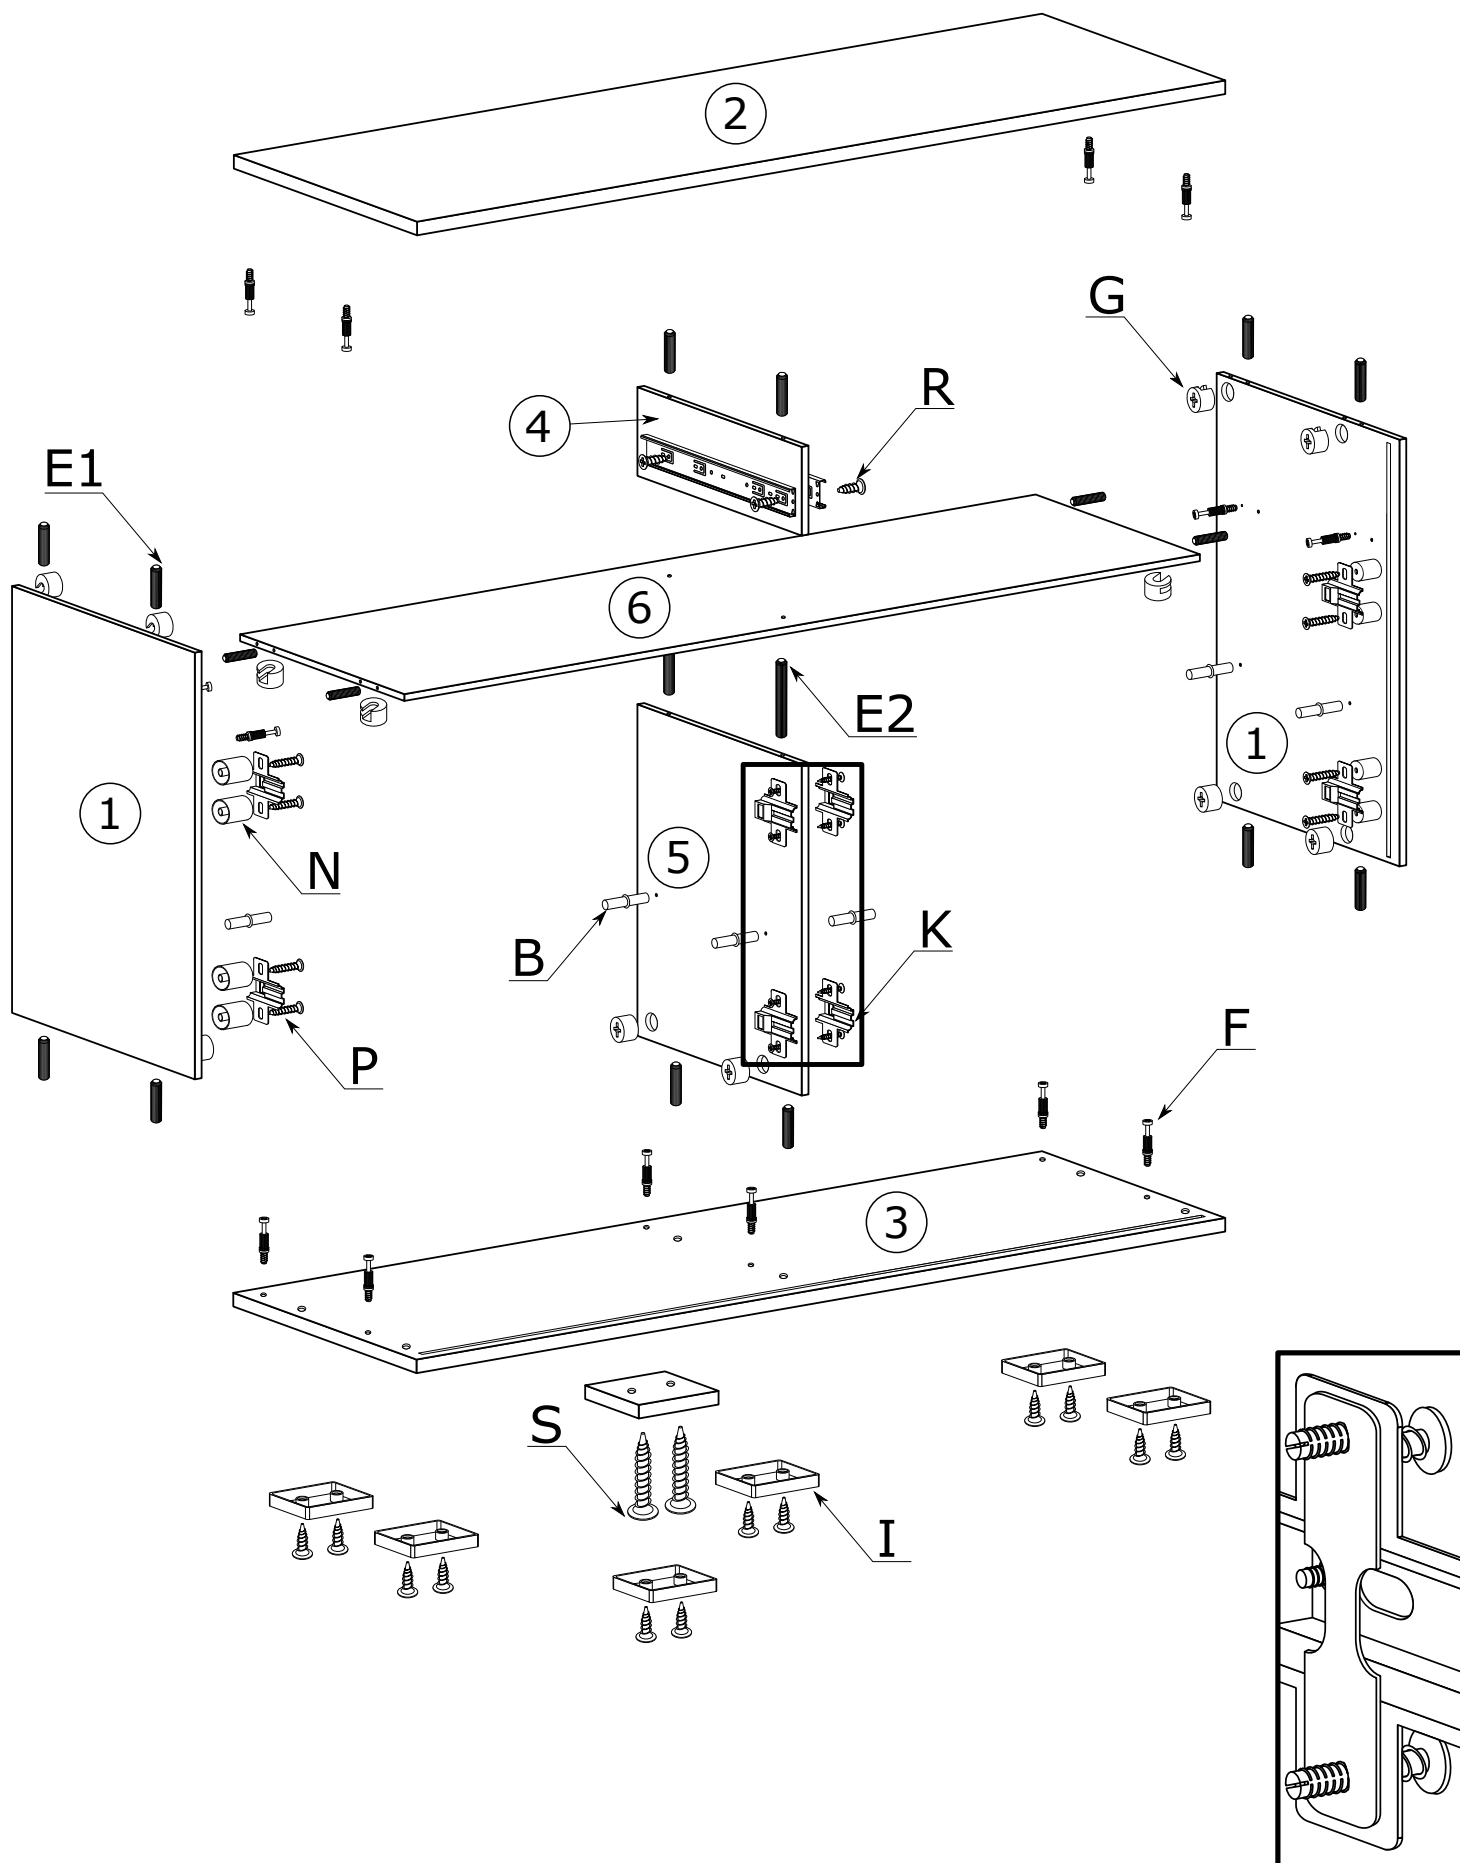



II

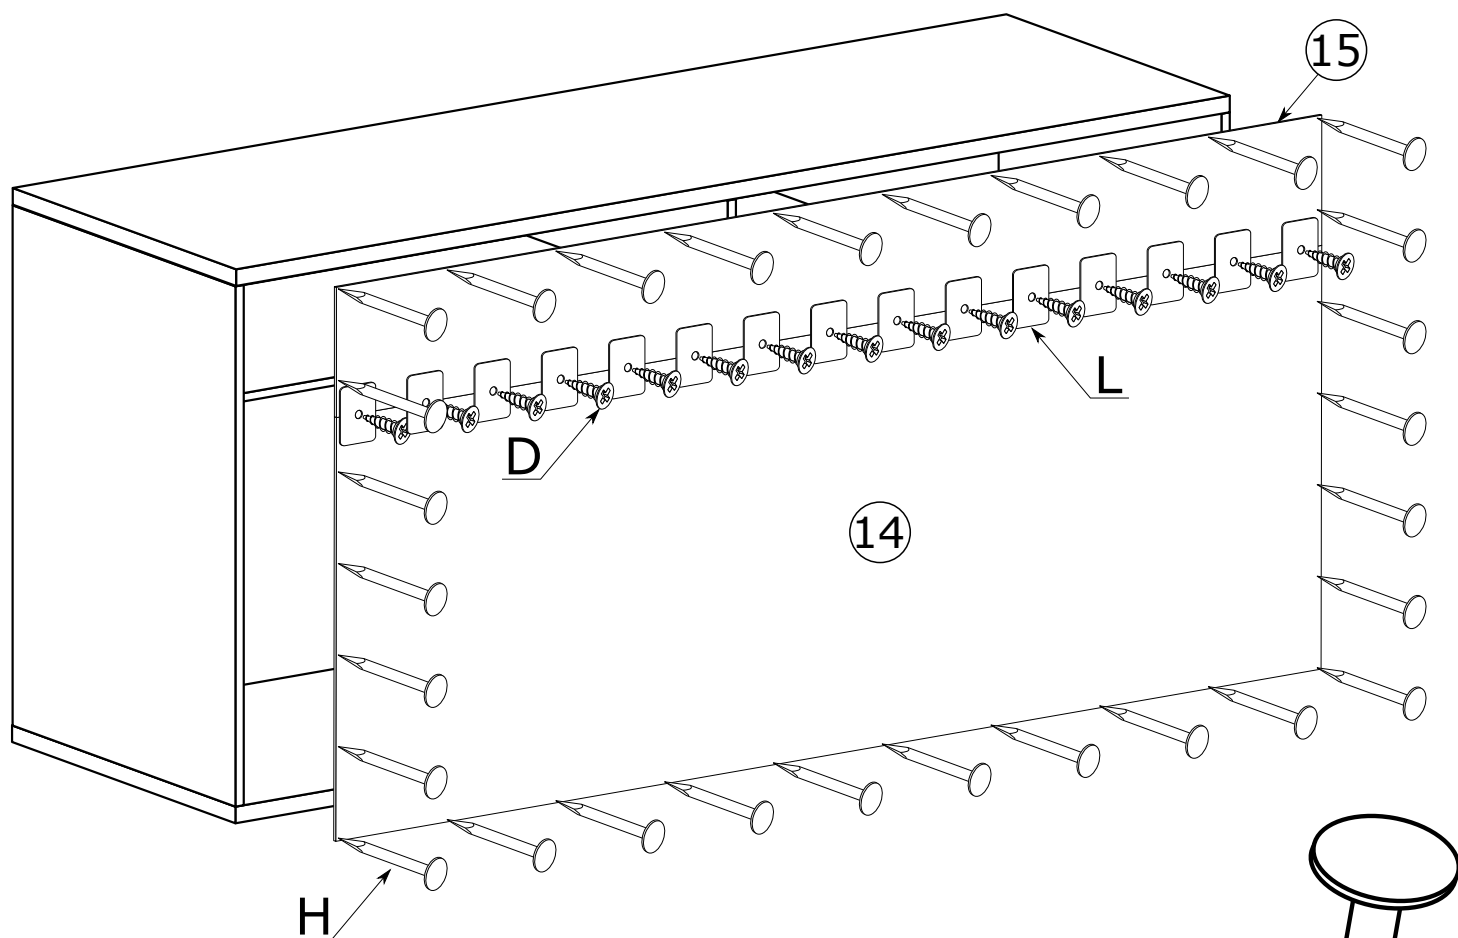


x75

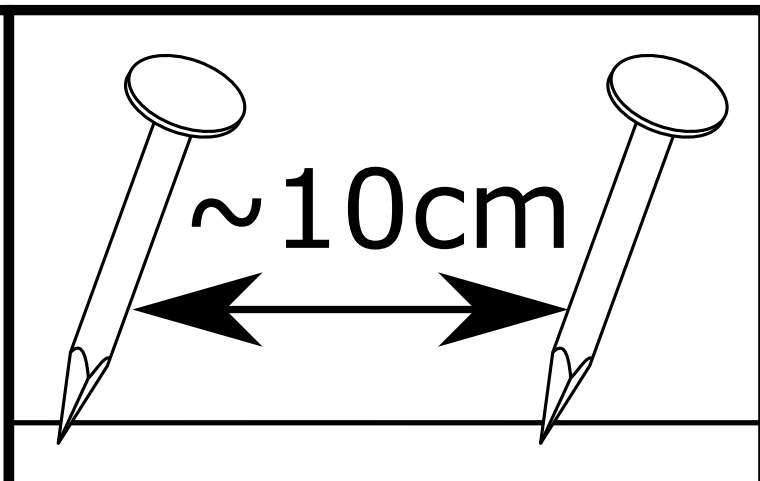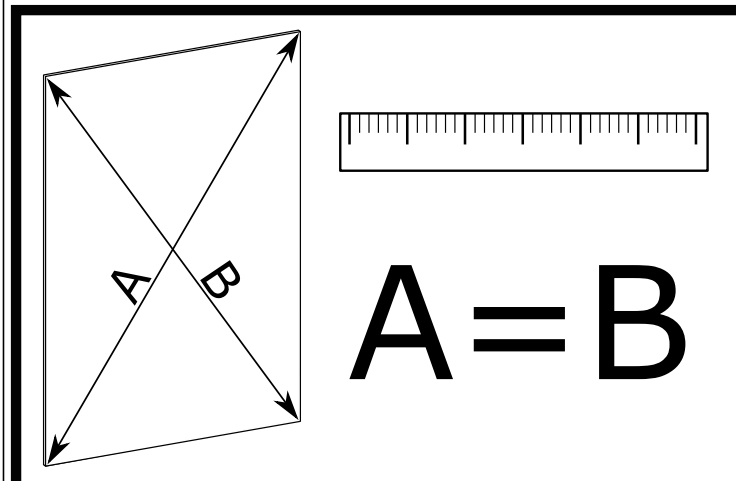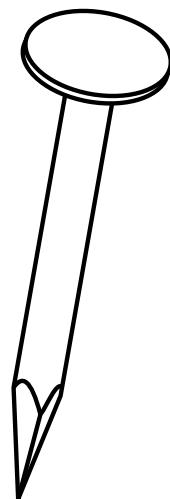

III

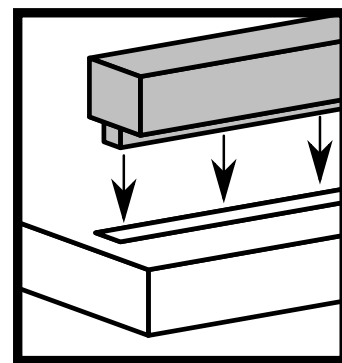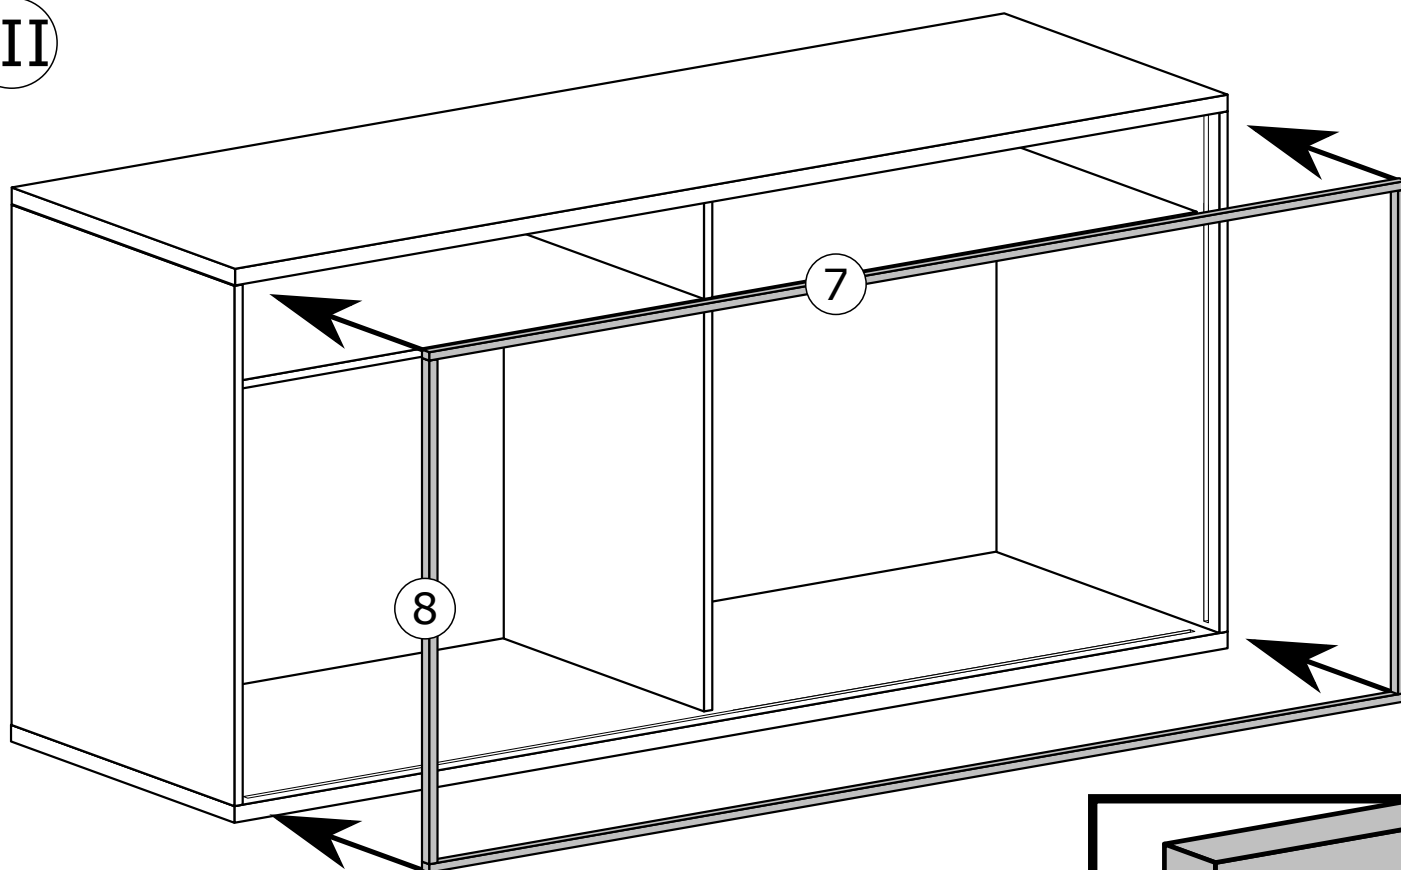

IV


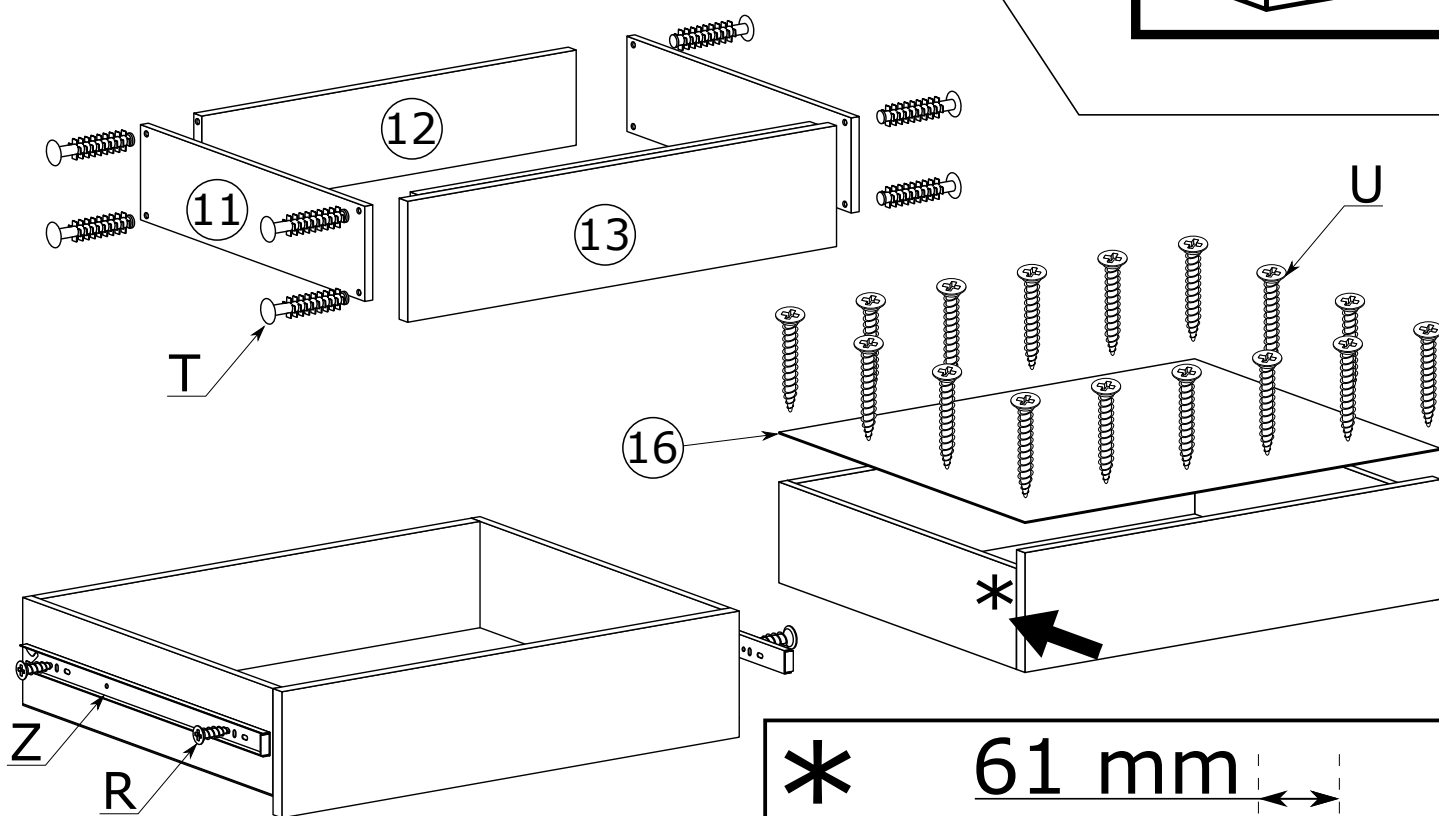


*



61 mm





V

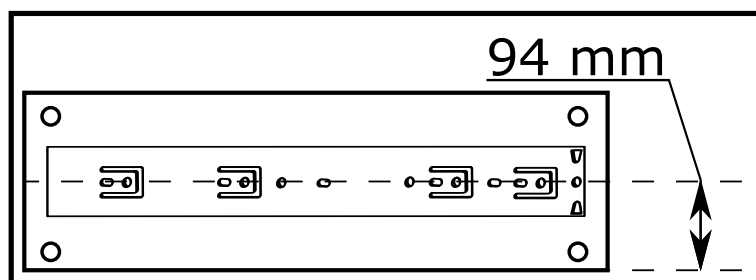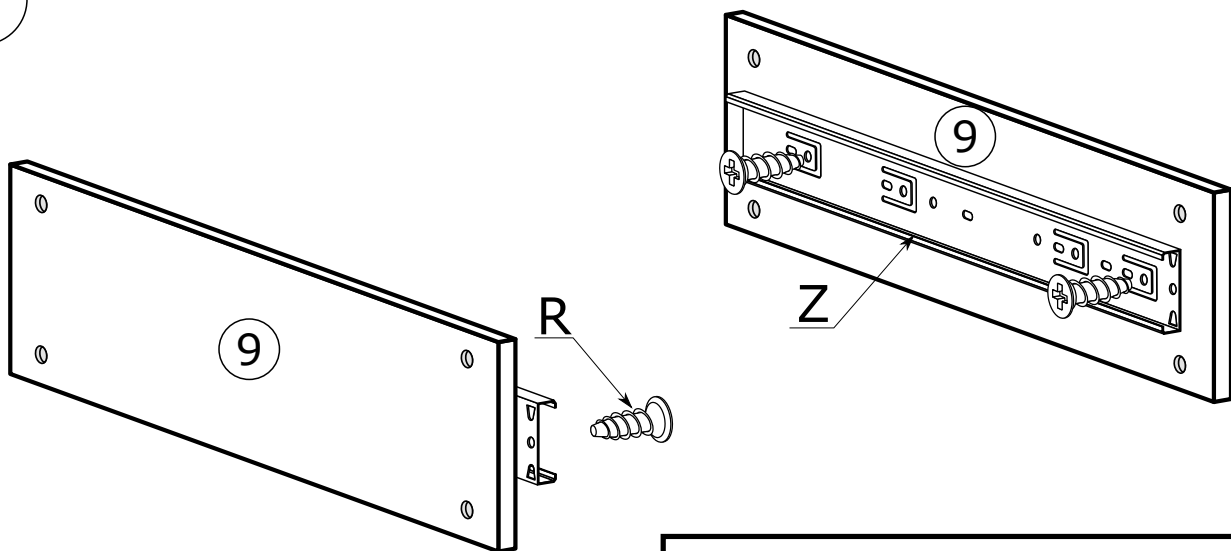


VI

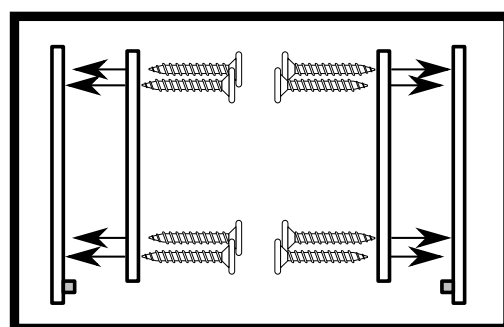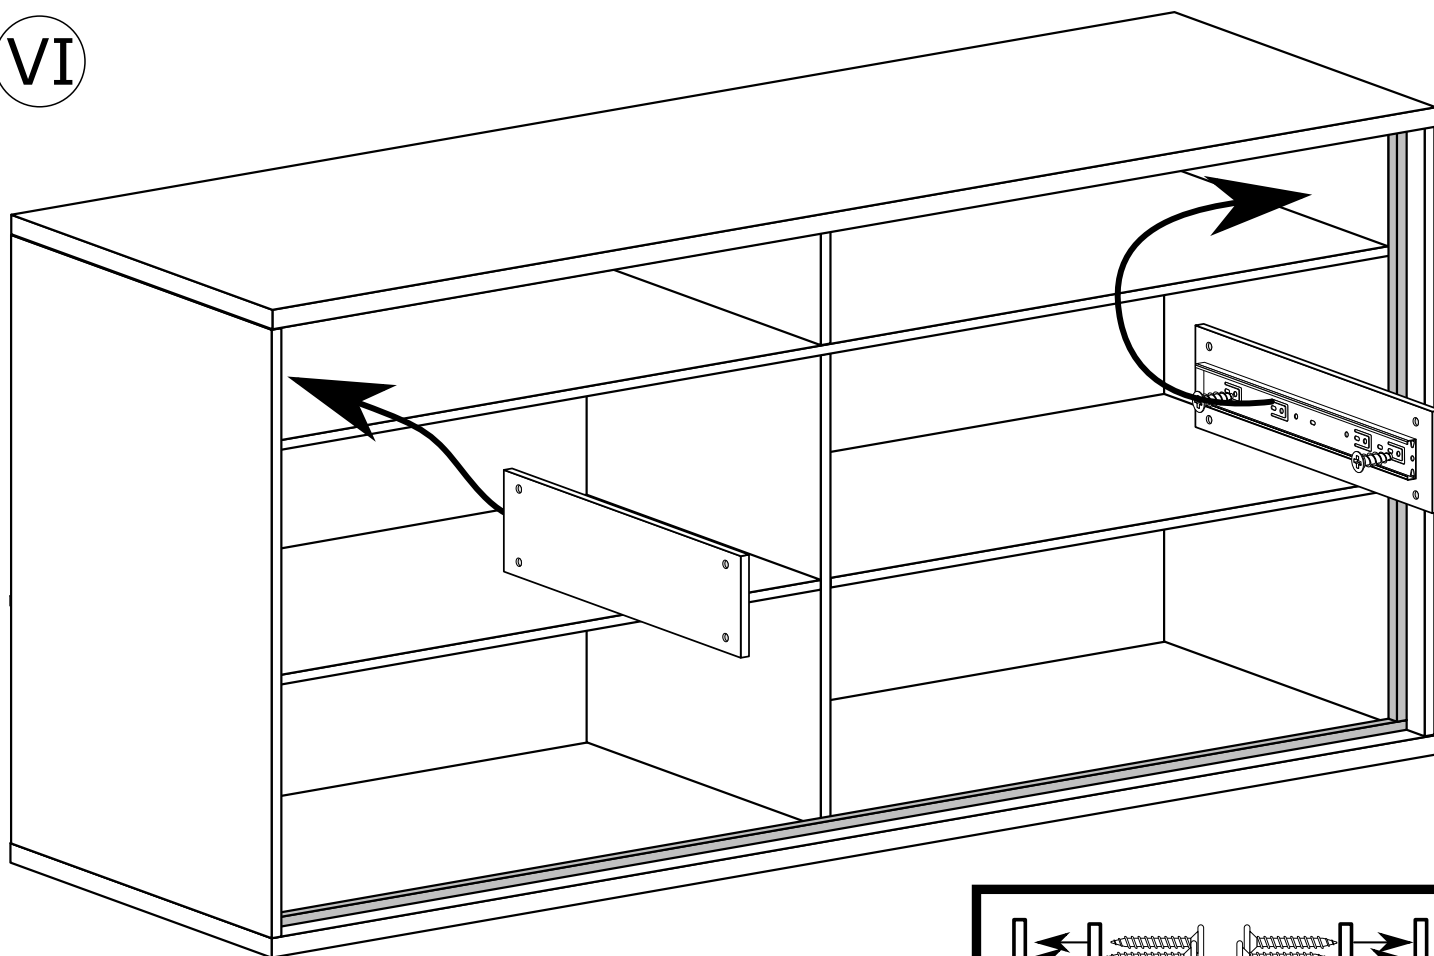


VII

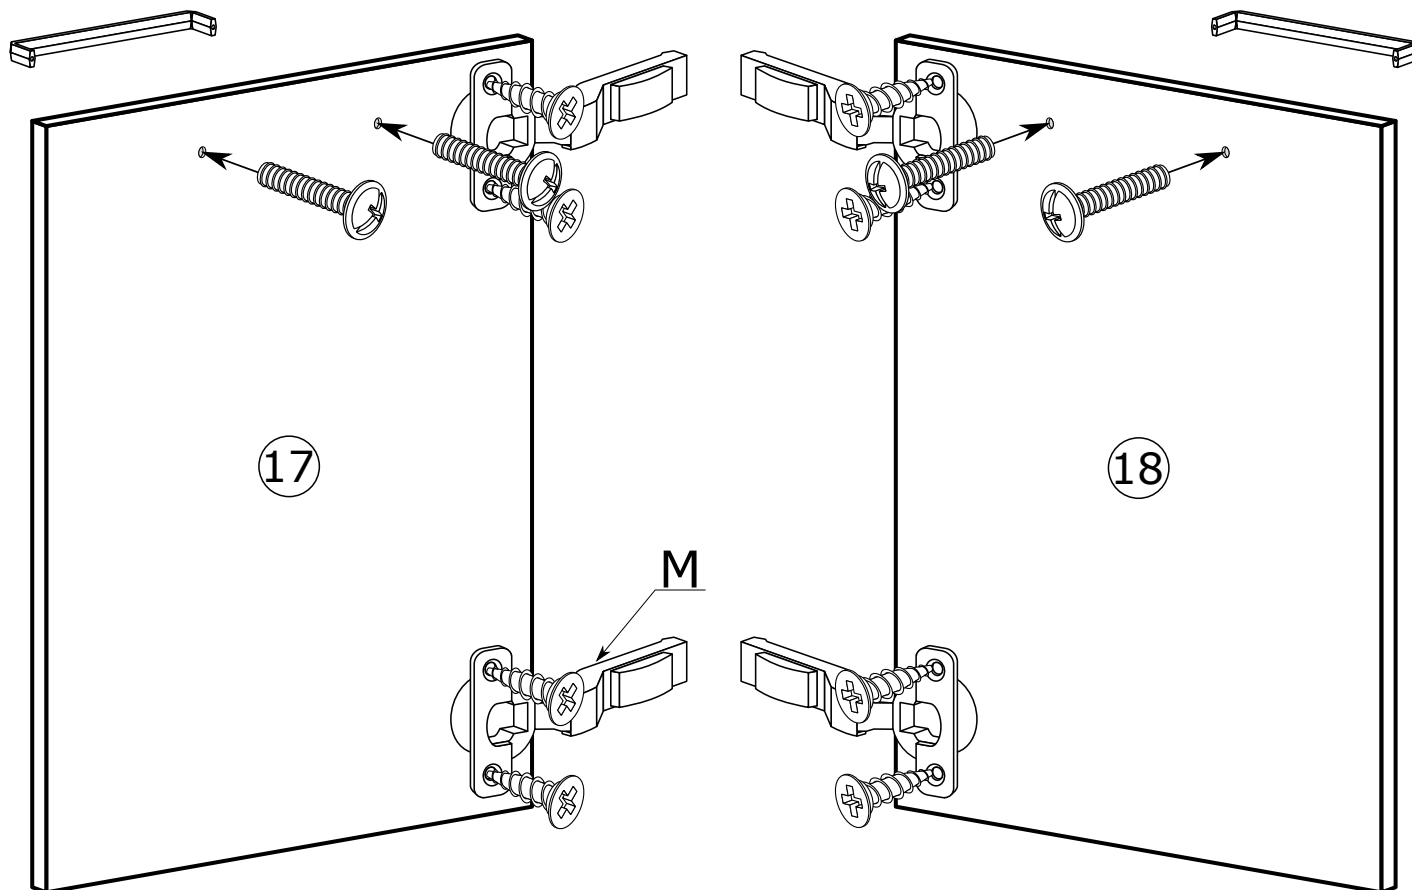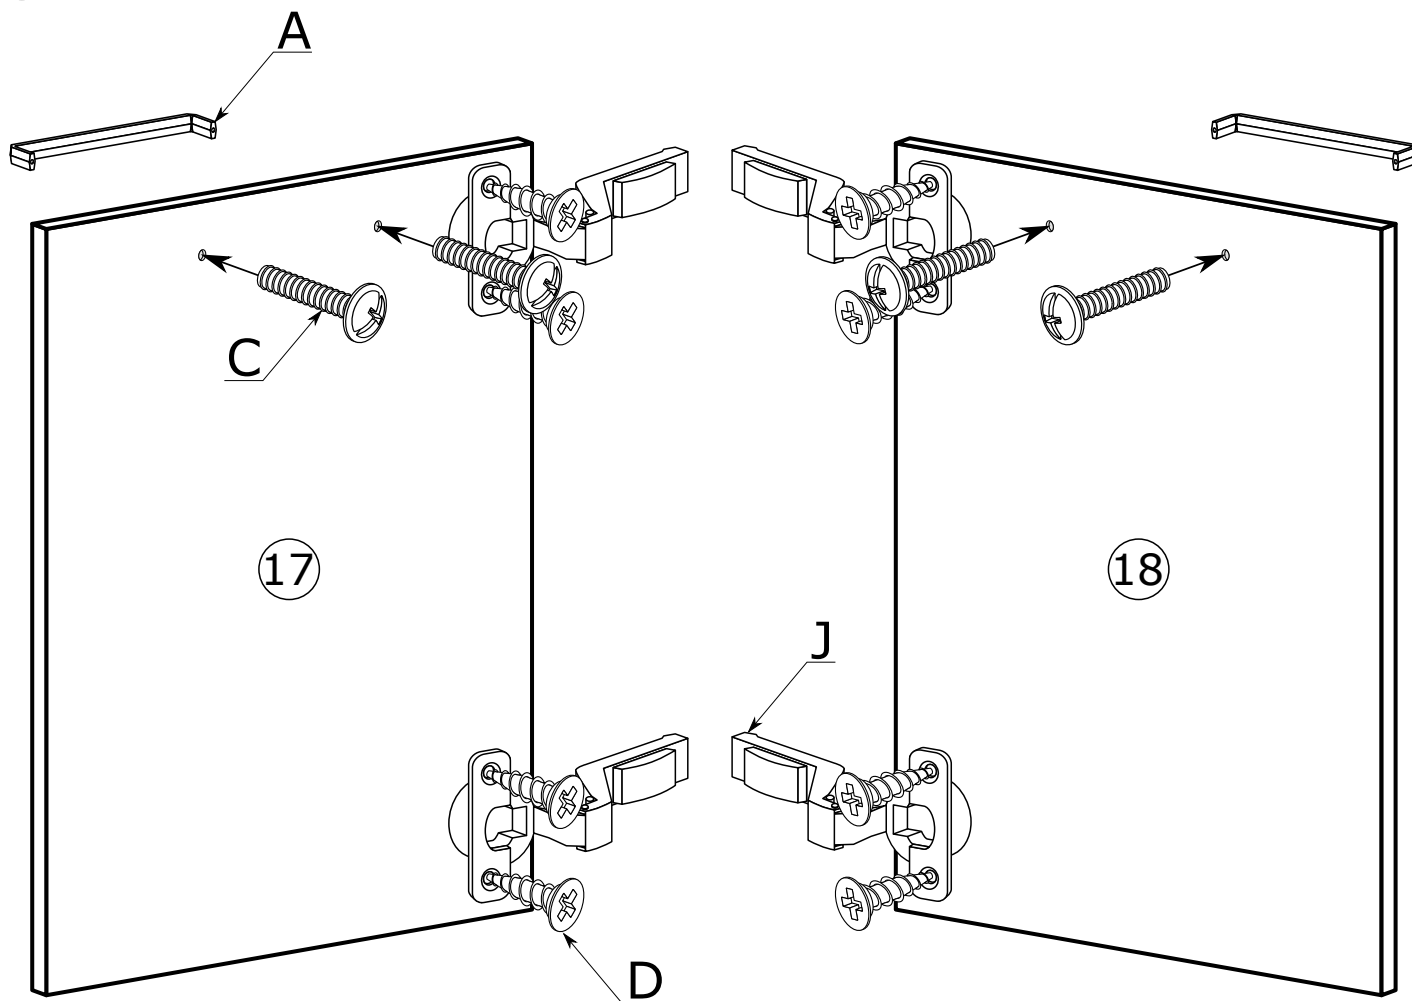


VIII

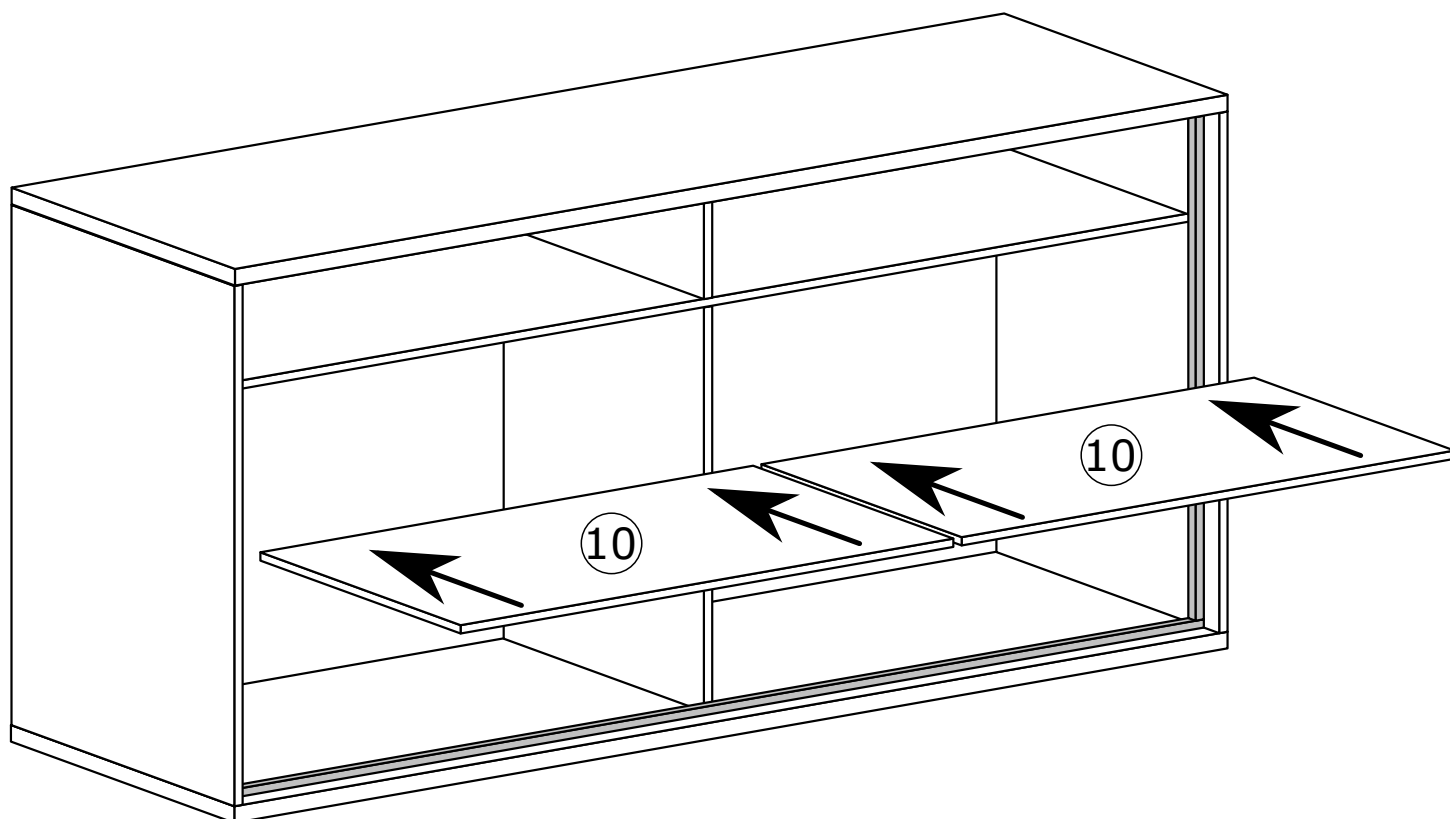

IX

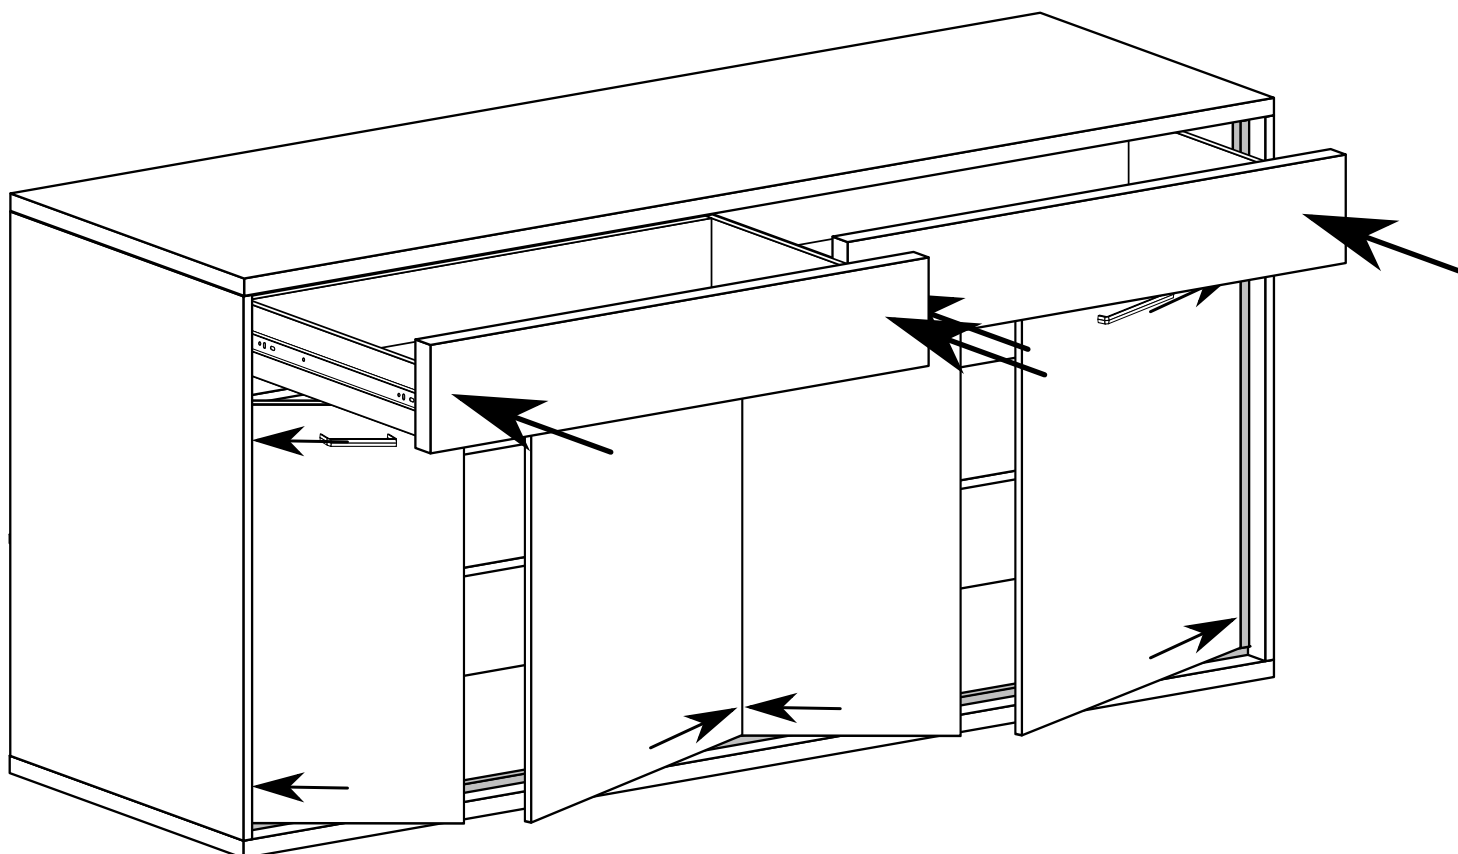

MONTAŻ/DEMONTAŻ PROWADNIC

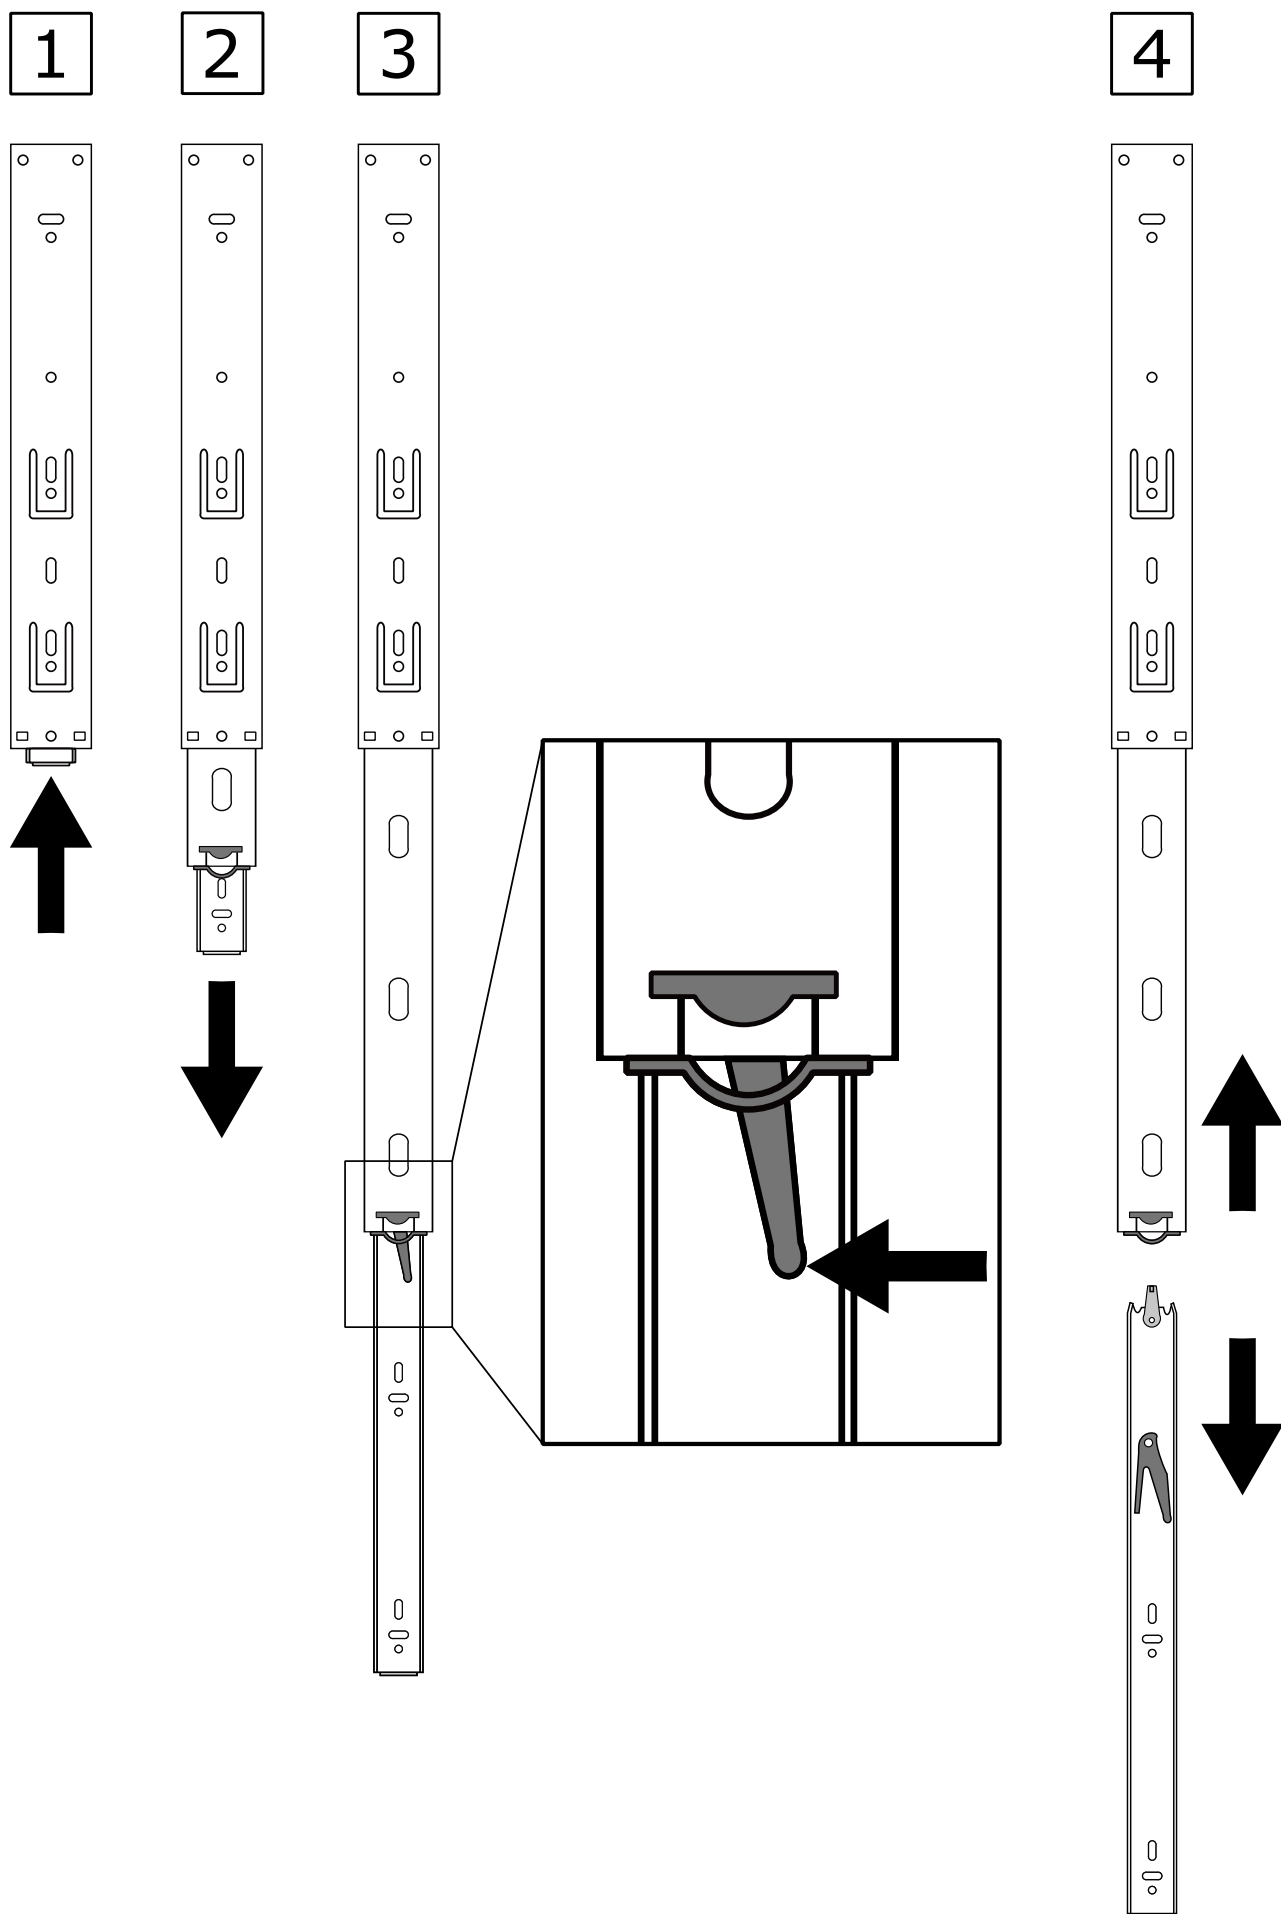

MONTAŻ KĄTOWNIKA

